



FMC234

WATERPROOF GPRS/GNSS TRACKER
WITH HIGH-CAPACITY BATTERY


Quick Manual v1.2

CONTENT


| | |
|--|----|
| Know your device..... | 3 |
| Pinout..... | 4 |
| Wiring scheme..... | 5 |
| Set up your device | 6 |
| PC Connection (Windows)..... | 7 |
| How to install USB drivers (Windows) | 7 |
| Configuration..... | 8 |
| Quick SMS configuration..... | 10 |
| Mounting recommendations with a standard cable | 12 |
| Basic characteristics | 13 |
| LED indications..... | 13 |
| Electrical characteristics | 16 |
| Safety information | 19 |
| Certification and Approvals | 20 |
| Warranty | 21 |
| Warranty disclaimer..... | 21 |

KNOW YOUR DEVICE


TOP VIEW

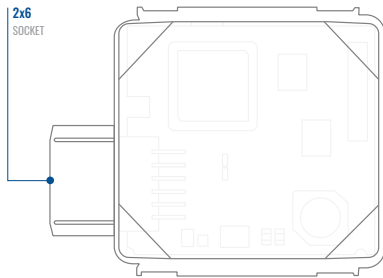

BOTTOM VIEW (WITHOUT COVER)

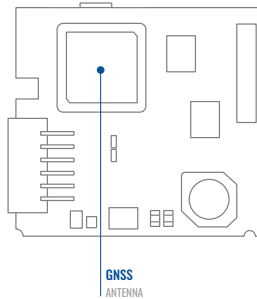

TOP VIEW (WITHOUT COVER)

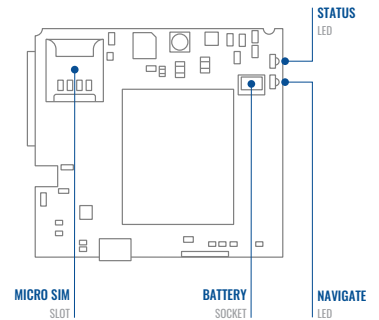


PINOUT

| PIN NUMBER | PIN NAME | DESCRIPTION |
|------------|-------------------------|--|
| 1 | VCC (10-30) V DC (+) | Power supply (10-30 V DC). |
| 2 | DOUT 3 | Digital output, channel 3. Open collector output. Max. 0,5 A DC. |
| 3 | DIN 3 / AIN 2 | Analog input, channel 2. Input range: 0-30 V DC / Digital input, channel 3. |
| 4 | DIN 2-N / AIN 1 | Digital input, channel 2, Negative input (ground sense), Analog input, channel 1, Input range: 0-30 VDC. |
| 5 | DIN 1 | Digital input, channel 1. |
| 6 | INPUT 6 | TX EXT (LVCAN – TX). |
| 7 | GND (-) | Ground pin. (10-30) V DC (—) |
| 8 | DOUT 1 | Digital output, channel 1. Open collector output. Max. 0,5 A DC. |
| 9 | DOUT 2 | Digital output, channel 2. Open collector output. Max. 0,5 A DC. |
| 10 | 1WIRE POWER | +3,8 V output for 1-Wire devices. |
| 11 | 1WIRE DATA | Data for 1-Wire devices. |
| 12 | INPUT 5 | RX EXT (LVCAN – RX). |




FMC234 2x6 socket pinout

WIRING SCHEME

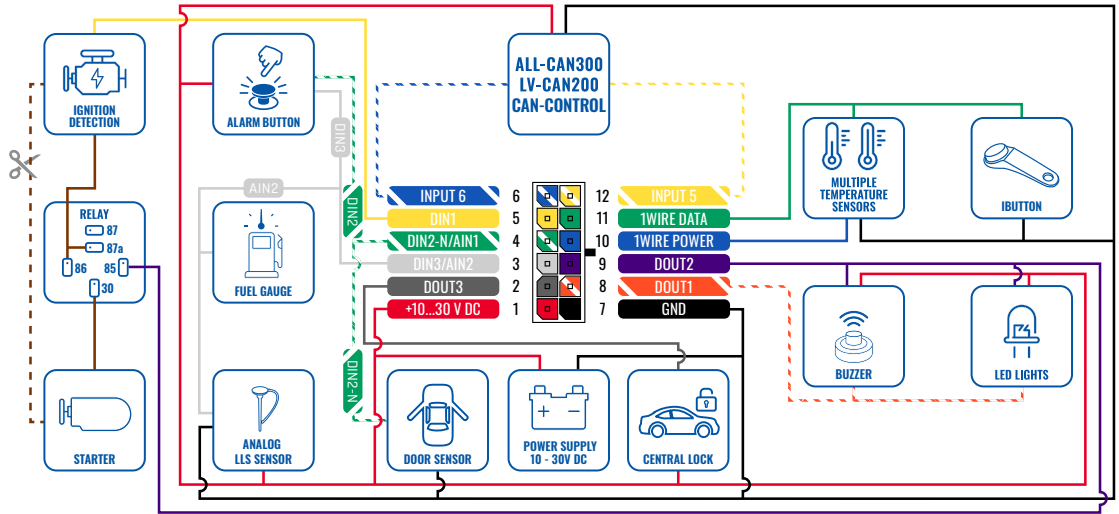


SET UP YOUR DEVICE

HOW TO INSERT MICRO-SIM CARD AND CONNECT THE BATTERY

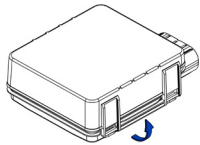


1 PARTLY CLOSED DEVICE

You will receive your device partly closed.

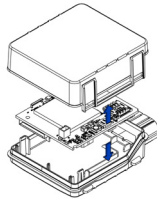

2 COVER REMOVAL

 Gently remove **top** and **bottom** covers.




3 SIM CARD INSERT

Insert SIM card as shown with **PIN request disabled** or read our [Wiki](#)¹ how to enter it later in [Teltonika Configurator](#)². Make sure that SIM card **cut-off corner** is pointing outward from slot. **SIM slot 1** is closer to PCB, **SIM slot 2** is the top one.


¹ wiki.teltonika-gps.com/view/FMC234_Security_info

² wiki.teltonika-gps.com/view/Teltonika_Configurator

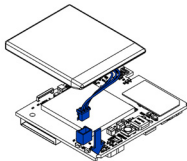

4 BATTERY CONNECTION


Connect **battery** as shown to device. Position the battery in place where it does not obstruct other components.

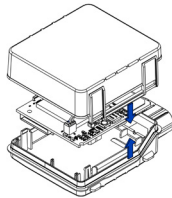

5 ATTACHING COVER BACK

After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **top** and **bottom cover** back and press them twice to the full closure.

¹ Page 7, "[PC Connection \(Windows\)](#)"

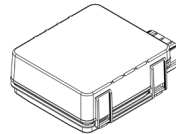

6 COMPLETELY CLOSED DEVICE

Make sure that product casing is closed correctly.

IMPORTANT!

This device has an IP67 casing with a two-phase closing, that ensures reliable protection and ease of use. Please make sure that product casing corner clips are fixed tightly and cable is connected to the device in order to maintain the degree of IP67 protection.

PC CONNECTION (WINDOWS)

1. Power-up FMC234 with **DC voltage (10 – 30 V)** power supply using **supplied power cable**. LED's should start blinking, see "**LED indications**".
2. Connect device to computer using **Micro-USB cable** or Bluetooth® connection:
 - Using Micro-USB cable
 - You will need to install USB drivers, see "**How to install USB drivers (Windows)**"¹
 - Using **Bluetooth® wireless technology**
 - **FMC234 Bluetooth® technology** is enabled by default. Turn on Bluetooth® connection on your PC, then select **Add Bluetooth or other device > Bluetooth**. Choose your device named – "**FMC234_last_7_imei_digits**", without **LE** in the end. Enter default password **5555**, press **Connect** and then select **Done**.
3. You are now ready to use the device on your computer.

¹wiki.teltonika-gps.com/view/FMC234_LED_status

²Page 6, "How to install USB drivers"

HOW TO INSTALL USB DRIVERS (WINDOWS)

1. Please download COM port drivers from [here](#)¹.
2. Extract and run **TeltonikaCOMDriver.exe**.
3. Click **Next** in driver installation window.
4. In the following window click **Install** button.
5. Setup will continue installing the driver and eventually the confirmation window will appear. Click **Finish** to complete the setup.

¹teltonika.lt/downloads/en/FMC234/TeltonikaCOMDriver.zip

CONFIGURATION

At first FMC234 device will have default factory settings set. These settings should be changed according to the users needs. Main configuration can be performed via [Teltonika Configurator](#)¹ software. Get the latest **Configurator** version from [here](#)². Configurator operates on **Microsoft Windows OS** and uses prerequisite **MS .NET Framework**. Make sure you have the correct version installed.


¹ wiki.teltonika-gps.com/view/Teltonika_Configurator


² wiki.teltonika-gps.com/view/Teltonika_Configurator_versions

MS .NET REQUIREMENTS

| Operating system | MS .NET Framework version | Version | Links |
|------------------|---------------------------|---------------|---|
| Windows Vista | | | |
| Windows 7 | | | |
| Windows 8.1 | MS .NET Framework 4.6.2 | 32 and 64 bit | www.microsoft.com ¹ |
| Windows 10 | | | |


¹ dotnet.microsoft.com/en-us/download/dotnet-framework/net462

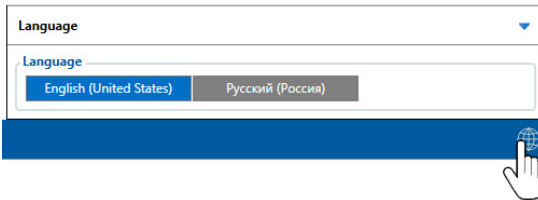

Downloaded Configurator will be in compressed archive. Extract it and launch Configurator.exe. After launch software language can be changed by clicking  in the right bottom corner.





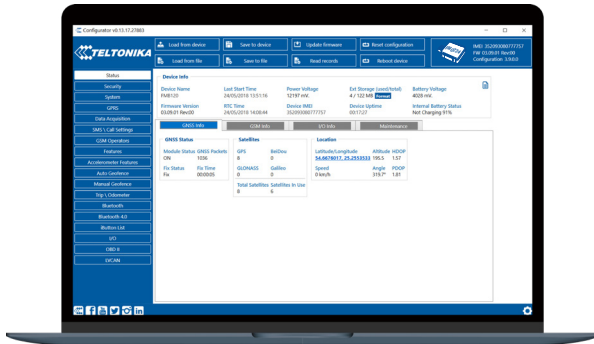





Configuration process begins by pressing on connected device.



After connection to Configurator **Status window** will be displayed.

Various **Status window**¹ tabs display information about **GNSS**², **GSM**³, **I/O**⁴, **Maintenance**⁵ and etc. FMC234 has one user editable profile, which can be loaded and saved to the device. After any modification of configuration the changes need to be saved to device using **Save to device** button. Main buttons offer following functionality:

-  **Load from device** – loads configuration from device.
-  **Save to device** – saves configuration to device.
-  **Load from file** – loads configuration from file.
-  **Save to file** – saves configuration to file.
-  **Update firmware** – updates firmware on device.
-  **Read records** – reads records from the device.
-  **Reboot device** – restarts device.
-  **Reset configuration** – sets device configuration to default.

Most important configurator section is **GPRS** – where all your server and **GPRS settings**⁶ can be configured and **Data Acquisition**⁷ – where data acquiring parameters can be configured. More details about FMC234 configuration using Configurator can be found in our [Wiki](#)⁸.

¹ wiki.teltonika-gps.com/view/FMC234_Status_info

² wiki.teltonika-gps.com/view/FMC234_Status_info#GNSS_Info

³ wiki.teltonika-gps.com/view/FMC234_Status_info#GSM_Info

⁴ wiki.teltonika-gps.com/view/FMC234_Status_info#I2FO_Info

⁵ wiki.teltonika-gps.com/view/FMC234_Status_info#Maintenance

⁶ wiki.teltonika-gps.com/index.php?title=FMC234_GPRS_settings

⁷ wiki.teltonika-gps.com/index.php?title=FMC234_Data_acquisition_settings

⁸ wiki.teltonika-gps.com/index.php?title=FMC234_Configuration

QUICK SMS CONFIGURATION

Default configuration has optimal parameters present to ensure best performance of track quality and data usage.

Quickly set up your device by sending this SMS command to it:

```
« setparam 2001:APN;2002:APN_username;2003:APN_password;2004:Domain;2005:Port;2006:0»
```

1

2

3

4

5

6


Note: Before SMS text, two space symbols should be inserted.

GPRS SETTINGS:

- 1 2001 – APN
- 2 2002 – APN username (if there are no APN username, empty field should be left)
- 3 2003 – APN password (if there are no APN password, empty field should be left)

SERVER SETTINGS:

- 4 2004 – Domain
- 5 2005 – Port
- 6 2006 – Data sending protocol (0 – TCP, 1 – UDP)

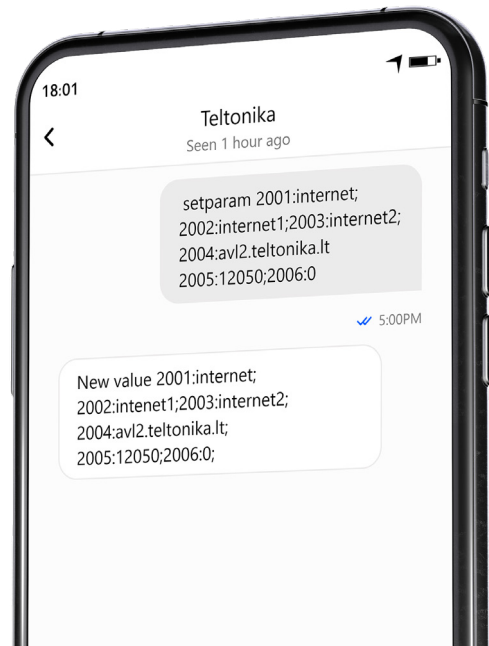

DEFAULT CONFIGURATION SETTINGS

MOVEMENT AND IGNITION DETECTION:



VEHICLE MOVEMENT
will be detected by
accelerometer



IGNITION
will be detected by
vehicle power voltage
between 13,2 – 30 V

DEVICE MAKES A RECORD ON STOP IF:



1 HOUR PASSES
while vehicle is
stationary and
ignition is off



EVERY 120 SECOND
it is sent to the server
If device has made a
record

DEVICE MAKES A RECORD ON MOVING IF ONE OF THESE EVENTS HAPPEN:



PASSES
300 seconds



VEHICLE DRIVES
100 meters



VEHICLE TURNS
10 degrees



SPEED DIFFERENCE
between last coordinate
and current position is
greater than 10 km/h

After successful SMS configuration, FMC234 device will synchronize time and update records to configured server. Time intervals and default I/O elements can be changed by using [Teltonika Configurator¹](#) or [SMS parameters²](#).

¹ wiki.teltonika-gps.com/view/Teltonika_Configurator

² wiki.teltonika-gps.com/view/Template:FMB_Device_Family_Parameter_list

MOUNTING RECOMMENDATIONS WITH A STANDARD CABLE

CONNECTING WIRES

- Wires should be fastened to the other wires or non-moving parts. Try to avoid heat emitting and moving objects near the wires.
- The connections should not be seen very clearly. If factory isolation was removed while connecting wires, it should be applied again.
- If the wires are placed in the exterior or in places where they can be damaged or exposed to heat, humidity, dirt, etc., additional isolation should be applied.
- Wires cannot be connected to the board computers or control units.

CONNECTING POWER SOURCE

- Be sure that after the car computer falls asleep, power is still available on chosen wire. Depending on car, this may happen in 5 to 30 minutes period.
- When module is connected, measure voltage again to make sure it did not decrease.
- It is recommended to connect to the main power cable in the fuse box.
- Use 3A, 125V external fuse.

CONNECTING IGNITION WIRE

- Be sure to check if it is a real ignition wire i. e. power does not disappear after starting the engine.
- Check if this is not an ACC wire (when key is in the first position, most of the vehicle electronics are available).
- Check if power is still available when you turn off any of vehicles devices.
- Ignition is connected to the ignition relay output. As alternative, any other relay, which has power output when ignition is on, may be chosen.

CONNECTING GROUND WIRE

- Ground wire is connected to the vehicle frame or metal parts that are fixed to the frame.
- If the wire is fixed with the bolt, the loop must be connected to the end of the wire.
- For better contact scrub paint from the spot where loop is going to be connected.

LED INDICATIONS

NAVIGATION LED INDICATIONS

| BEHAVIOUR | MEANING |
|--------------------------|---|
| Permanently switched on | GNSS signal is not received |
| Blinking every second | Normal mode, GNSS is working |
| Off | GNSS is turned off because: Device is not working or Device is in sleep mode |
| Blinking fast constantly | Device firmware is being flashed |

STATUS LED INDICATIONS

| BEHAVIOUR | MEANING |
|--------------------------------|---|
| Blinking every second | Normal mode |
| Blinking every two seconds | Sleep mode |
| Blinking fast for a short time | Modem activity |
| Off | Device is not working or Device is in boot mode |

BASIC CHARACTERISTICS

MODULE

| | |
|------------|---|
| Name | FMC234- MBIB0: MeiG SLM320-E with Teltonika TM2500 FMC234- MCIB0: MeiG SLM320-LA with Teltonika TM2500 |
| Technology | LTE(CaT1)/2G(GSM/GPRS)/GNSS/BLUETOOTH® LE |

GNSS

| | |
|----------------------|---|
| GNSS | GPS, GLONASS, GALILEO, BEIDOU, QZSS, AGPS |
| Receiver | Tracking: 33 |
| Tracking sensitivity | -165 dBm |
| Position Accuracy | < 2.5 CEP |
| Velocity Accuracy | < 0.1 m/s (within +/- 15% error) |
| Hot start | < 1 s |
| Warm start | < 25 s |
| Cold start | < 35 s |

CELLUAR

| | |
|------------|--|
| Technology | LTE Cat 1, GSM |
| 2G bands | FMC234-MBIB0: GSM: B2/B3/B5/B8 FMC234-MCIB0: GSM: B2/B3/B5/B8 |

| | |
|----------------|---|
| 4G bands | FMC234-MBIB0: LTE FDD: B1/B3/B7/ B8/B20/B28 LTE-TDD:B38/B40/B41 FMC234-MCIB0: LTE FDD: B1/B2/B3/ B4/B5/B7/B8/B20/B28 LTE-TDD:B40 |
| Data transfer | LTE: LTE FDD: Max 10Mbps (DL)/Max 5Mbps (UL) LTE TDD: Max 8.96Mbps (DL)/Max 3.1Mbps (UL) UMTS: WCDMA: Max 384Kbps(DL)/ Max 384Kbps(UL) GSM: GPRS: Max 107Kbps (DL)/Max 85.6Kbps (UL) |
| Data support | SMS (text/data) |
| Transmit power | Class 4 for GSM850/900: 23±2dBm Class 1 for GSM1800/1900: 20±2dBm Class 3 for LTE-TDD: 23±2.7dBm Class 3 for LTE-FDD: 23±2.7dBm |

POWER

| | |
|-----------------------------|---|
| Input voltage range | 10-30 V DC with overvoltage protection |
| Internal Back-up battery | 1000 mAh Li-Po rechargeable 3.7 V battery (3.7 Wh) |
| Internal fuse | 3 A, 125 V |

| | |
|-------------------|--|
| Power consumption | At 12V < 3 mA (Ultra Deep Sleep ¹) At 12V < 5 mA (Deep Sleep ²) At 12V < 16 mA (Online Deep Sleep ³) At 12V < 18 mA (GPS Sleep ⁴) |
| | At 12V < 33 mA (nominal with no load) At 12V < 1A Max. (with full Load / Peak) (FMC234-MCIB0) At 12V < 2A Max. (with full Load / Peak) (FMC234-MBIB0) |

BLUETOOTH® TECHNOLOGY

| | |
|--------------------------|---|
| Specification | 4.0 + LE |
| Supported peripherals | Temperature and Humidity sensor, Headset ⁵ , OBDII dongle ⁶ , Inateck Barcode Scanner, Universal Bluetooth® LE sensors support |

INTERFACE

| | |
|-----------------|--------------------------------------|
| Digital Inputs | 3 |
| Negative Inputs | 1 (Digital Input 2) |
| Impulse Inputs | 2 (Digital Input 1, Digital Input 2) |
| Digital Outputs | 3 |

¹wiki.teltonika-gps.com/view/FMC234_Sleep_modes

²wiki.teltonika-gps.com/view/FMC234_Sleep_modes

³wiki.teltonika-gps.com/view/FMC234_Sleep_modes

⁴wiki.teltonika-gps.com/view/FMC234_Sleep_modes

⁵wiki.teltonika-gps.com/view/How_to_connect_Bluetooth_Hands_Free_adapter_to_FMB_device

⁶wiki.teltonika-gps.com/view/How_to_connect_OBD_II_Bluetooth_Dongle_to_FMB_device

| | |
|--------------------|-----------------------------|
| Analog Inputs | 2 |
| CAN Adapter inputs | 1 |
| 1-Wire | 1 |
| GNSS antenna | Internal High Gain |
| Cellular antenna | Internal LTE High Gain |
| USB | 2.0 Micro-USB |
| LED indication | 2 status LED lights |
| SIM | Micro-SIM or eSIM |
| Memory | 128MB internal flash memory |

PHYSICAL SPECIFICATION

| | |
|------------|---|
| Dimensions | 70,5 x 67,0 x 25,6 mm (L x W x H) |
| | 85,0 x 67,0 x 25,6 mm (L x W x H) (length with connector socket) |

OPERATING ENVIRONMENT

| | |
|---|------------------|
| Operating temperature (without battery) | -20 °C to +85°C |
| Storage temperature (without battery) | -20 °C to +85°C |
| Operating temperature (with battery) | -20 °C to +60 °C |

| | |
|------------------------------------|---|
| Storage temperature (with battery) | -20 °C to +60 °C |
| Operating humidity | 5% to 95% non-condensing |
| Ingress Protection Rating | IP67 |
| Battery charge temperature | 0 °C to +45 °C |
| Battery discharge temperature | -20 °C to +60 °C |
| Battery storage temperature | -20 °C to +45 °C for 1 month -20 °C to +35 °C for 6 months |

FEATURES

| | |
|-------------|---|
| Sensors | Accelerometer |
| Scenarios | Green Driving, Over Speeding detection, Jamming detection, GNSS Fuel Counter, DOUT Control Via Call, Excessive Idling detection, Immobilizer, iButton Read Notification, Unplug detection, Towing detection, Crash detection, Auto Geofence, Manual Geofence, Trip⁷ |
| Sleep modes | GPS Sleep⁸, Online Deep Sleep⁸, Deep Sleep⁸, Ultra Deep Sleep⁸ |

⁷wiki.teltonika-gps.com/view/FMC234_Features_settings

⁸wiki.teltonika-gps.com/view/FMC234_Sleep_modes

| | |
|-----------------------------------|--|
| Configuration and firmware update | FOTA Web ⁹ , FOTA, Teltonika Configurator ¹⁰ (USB, Bluetooth® wireless technology), FMBT mobile application (Configuration) |
| SMS | Configuration, Events, DOUT control, Debug |
| GPRS commands | Configuration, DOUT control, Debug |
| Time Synchronization | GPS, NITZ, NTP |
| Fuel monitoring | LLS (Analog), LV-CAN200 ¹¹ , ALL-CAN300 ¹² , OBDI dongle ¹³ , CAN-CONTROL ¹⁴ , OBDI dongle |
| Ignition detection | Digital Input 1, Accelerometer, External Power Voltage, Engine RPM (CAN Adapters, OBDI dongle) |

⁹wiki.teltonika-gps.com/view/FOTA_WEB

¹⁰wiki.teltonika-gps.com/view/Teltonika_Configurator

¹¹teltonika-gps.com/products/trackers/can-obd-data/lv-can200

¹²teltonika-gps.com/products/trackers/can-obd-data/all-can300

¹³wiki.teltonika-gps.com/view/How_to_connect_OBD_II_Bluetooth_Dongle_to_FMB_device

¹⁴teltonika-gps.com/products/trackers/can-obd-data/can-control

ELECTRICAL CHARACTERISTICS

| CHARACTERISTIC DESCRIPTION | VALUE | | | |
|---|-------|------|------|------|
| | MIN. | TYP. | MAX. | UNIT |
| SUPPLY VOLTAGE | | | | |
| Supply Voltage (Recommended Operating Conditions) | +10 | | +30 | V |
| DIGITAL OUTPUT (OPEN DRAIN GRADE) | | | | |
| Drain current (Digital Output OFF) | | | 120 | µA |
| Drain current (Digital Output ON, Recommended Operating Conditions) | | 0.1 | 0.5 | A |
| Static Drain-Source resistance (Digital Output ON) | | 400 | 600 | mΩ |
| DIGITAL INPUT | | | | |
| Input resistance (DIN1) | 47 | | | kΩ |
| Input resistance (DIN2) | 38.45 | | | kΩ |
| Input resistance (DIN3) | 150 | | | kΩ |

| CHARACTERISTIC DESCRIPTION | VALUE | | | |
|--|-------|------|----------------|------|
| | MIN. | TYP. | MAX. | UNIT |
| Input voltage (Recommended Operating Conditions) | 0 | | Supply voltage | V |
| Input Voltage threshold (DIN1) | | 7.5 | | V |
| Input Voltage threshold (DIN2) | | 2.5 | | V |
| Input Voltage threshold (DIN3) | | 2.5 | | V |

ANALOG INPUT

| | | | | |
|---|---|-------|-----|----|
| Input voltage (Recommended Operating Conditions), Range 1 | 0 | | +10 | V |
| Input resistance, Range 1 | | 38.45 | | kΩ |
| Measurement error on 12V, Range 1 | | 0.9 | | % |
| Additional error on 12 V, Range 1 | | 108 | | mV |
| Measurement error on 30 V, Range 1 | | 0.33 | | % |
| Additional error on 30 V, Range 1 | | 88 | | mV |

| CHARACTERISTIC DESCRIPTION | VALUE | | | |
|---|-------|------|------|------|
| | MIN. | TYP. | MAX. | UNIT |
| Input Voltage (Recommended Operating Conditions), Range 2 | 0 | | +30 | V |
| Input resistance, Range 2 | | 150 | | kΩ |
| Measurement error on 12 V, Range 2 | | 0.9 | | % |
| Additional error on 12 V, Range 2 | | 108 | | mV |
| Measurement error on 30 V, Range 2 | | 0.33 | | % |
| Additional error on 30 V, Range 2 | | 88 | | mV |

OUTPUT SUPPLY VOLTAGE 1-WIRE

| | | | | |
|----------------------------------|------|----|------|----|
| Supply voltage | +4.5 | | +4.7 | V |
| Output inner resistance | | 7 | | Ω |
| Output current (Uout > 3.0 V) | | 30 | | mA |
| Short circuit current (Uout = 0) | | 75 | | mA |

| CHARACTERISTIC DESCRIPTION | VALUE | | | |
|--|-------|------|----------------|------|
| | MIN. | TYP. | MAX. | UNIT |
| NEGATIVE INPUT | | | | |
| Input resistance | 38,45 | | | kΩ |
| Input voltage (Recommended Operating Conditions) | 0 | | Supply voltage | V |
| Input voltage threshold | | 0.5 | | V |
| Sink current | | | 180 | nA |

SAFETY INFORMATION

This message contains information on how to operate FMC234 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

- The device uses SELV limited power source. The nominal voltage is +12 V DC. The allowed voltage range is +10...+30 V DC.
- To avoid mechanical damage, it is advised to transport the device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible. They show the status of device operation.
- When connecting the 2x6 connector wires to the vehicle, the appropriate jumpers of the vehicle power supply should be disconnected.
- Before unmounting the device from the vehicle, the 2x6 connector must be disconnected. The device is designed to be mounted in a zone of limited access, which is inaccessible to the operator. All related devices must meet the requirements of EN 62368-1 standard.
- The device FMC234 is not designed as a navigational device for boats.



Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, DO NOT touch the device before unplugging the power supply.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



The device must be connected only by qualified personnel.



The device must be firmly fastened in a predefined location.



The programming must be performed using a PC with autonomic power supply.



Installation and/or handling during a lightning storm is prohibited.



The device is susceptible to water and humidity.



Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Battery should not be disposed of with general household waste. Bring damaged or worn-out batteries to your local recycling center or dispose them to battery recycle bin found in stores.

CERTIFICATION AND APPROVALS



This sign on the package means that it is necessary to read the User's Manual before your start using the device. Full User's Manual version can be found in our [Wiki](#)¹.

¹ wiki.teltonika-gps.com/index.php?title=FMC234



Hereby, Teltonika declare under our sole responsibility that the above described product is in conformity with the relevant Community harmonization: European Directive 2014/53/EU (RED).



The RoHS1 is a directive regulating the manufacture, import and distribution of Electronics and Electrical Equipment (EEE) within the EU, which bans from use 10 different hazardous materials (to date).



The standard aims to provide users more detailed information than vague marketing terms such as waterproof.



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.



E-Mark and e-Mark are the European conformity marks issued by the transport sector, indicating that the products comply with relevant laws and regulations or directives. Vehicles and related products need to go through the E-Mark certification process to be legally sold in Europe.



REACH addresses the production and use of chemical substances, and their potential impacts on both human health and the environment. Its 849 pages took seven years to pass, and it has been described as the most complex legislation in the Union's history and the most important in 20 years. It is the strictest law to date regulating chemical substances and will affect industries throughout the world.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by UAB Teltonika Telematics is under license. Other trademarks and trade names are those of their respective owners.

DECLARATION OF IMEI ASSIGNMENT

The IMEI number is used by a GSM network to identify valid devices and therefore can be used for stopping a stolen phone from accessing that network. For example, if a mobile phone is stolen, the owner can call their network provider and instruct them to blacklist the phone using its IMEI number. This renders the phone useless on that network and sometimes other networks too, whether or not the phone's subscriber identity module (SIM) is changed.

CHECK ALL CERTIFICATES

All newest certificates may be found in our [Wiki](#)².

² wiki.teltonika-gps.com/view/FMC230_Certification_%26_Approvals

WARRANTY

We guarantee our products 24-month warranty¹ period.

All batteries carry a 6-month warranty period.

Post-warranty repair service for products is not provided.

If a product stops operating within this specific warranty time, the product can be:

- Repaired
- Replaced with a new product
- Replaced with an equivalent repaired product fulfilling the same functionality
- Replaced with a different product fulfilling the same functionality in case of EOL for the original product

¹ Additional agreement for an extended warranty period can be agreed upon separately.

WARRANTY DISCLAIMER

- Customers are only allowed to return products as a result of the product being defective, due to order assembly or manufacturing fault.
- Products are intended to be used by personnel with training and experience.
- Warranty does not cover defects or malfunctions caused by accidents, misuse, abuse, catastrophes, improper maintenance or inadequate installation – not following operating instructions (including failure to heed warnings) or use with equipment with which it is not intended to be used.
- Warranty does not apply to any consequential damages.
- Warranty is not applicable for supplementary product equipment (i. e. PSU, power cables, antennas) unless the accessory is defective on arrival.
- [More information on what is RMA¹](#)

¹ wiki.teltonika-gps.com/view/RMA_guidelines