



# Omada

---

## User Guide

For TP-Link Omada Access Points

EAP110 / EAP115 / EAP225 / EAP245 / EAP320 / EAP330 / EAP115-Wall  
EAP110-Outdoor / EAP225-Outdoor

1910012377 REV 4.1.0

May 2018

# CONTENTS

About this User Guide.....	1
Overview .....	2
<b>1 Quick Start.....</b>	<b>4</b>
1.1 Determine the Management Method.....	5
1.2 Build the Network Topology.....	6
1.3 Log In to the EAP .....	7
Log In via the Domain Name .....	7
Log in via the IP Address of the EAP .....	9
1.4 Edit the SSID .....	11
1.5 Configure and Manage the EAP.....	14
<b>2 Configure the Network.....</b>	<b>15</b>
2.1 Configure the IP Address of the EAP.....	16
2.2 Configure the Wireless Parameters.....	19
Configure Basic Wireless Settings.....	20
Configure SSIDs.....	22
Configure Wireless Advanced Settings.....	27
Configure Load Balance.....	29
2.3 Configure Portal Authentication .....	29
Configure Portal .....	30
Configure Free Authentication Policy.....	36
2.4 Configure MAC Filtering.....	38
2.5 Configure Scheduler.....	40
2.6 Configure QoS.....	43
2.7 Configure Rogue AP Detection.....	47
Detect Rogue APs & Move the Rogue APs to the Trusted AP List.....	48
Manage the Trusted AP List .....	50

<b>3</b>	<b>Monitor the Network</b>	<b>52</b>
3.1	Monitor the EAP	53
	View Device Information	54
	View Wireless Settings	55
	View LAN Information	55
	View Client Information	56
	View LAN Traffic	57
	View Radio Traffic	58
3.2	Monitor the SSIDs	59
3.3	Monitor the Clients	60
	View the Users	60
	View and Manage the Portal Authenticated Guests	61
<b>4</b>	<b>Manage the EAP</b>	<b>62</b>
4.1	Manage System Logs	63
	View System Logs	64
	Configure the Way of Receiving Logs	64
	Backup Logs (For EAP320/EAP330/EAP225)	66
4.2	Configure Web Server	66
4.3	Configure Management Access	67
4.4	Configure Trunk (For EAP330)	68
4.5	Configure LED	69
4.6	Configure Wi-Fi Control (For EAP115-Wall)	69
4.7	Configure SSH	70
4.8	Configure Management VLAN	70
4.9	Configure SNMP	71
<b>5</b>	<b>Configure the System</b>	<b>73</b>
5.1	Configure the User Account	74
5.2	Configure the System Time	74
	Configure the System Time	75

Configure Daylight Saving Time.....	77
<b>5.3 Reboot and Reset the EAP.....</b>	<b>79</b>
<b>5.4 Backup and Restore the Configuration.....</b>	<b>80</b>
<b>5.5 Update the Firmware .....</b>	<b>80</b>
<b>6 Application Example .....</b>	<b>82</b>
<b>6.1 Determine the Network Requirements .....</b>	<b>83</b>
<b>6.2 Build the Network Topology.....</b>	<b>83</b>
<b>6.3 Log in to the EAP .....</b>	<b>84</b>
<b>6.4 Configure the EAP .....</b>	<b>85</b>
Configure SSIDs.....	85
Configure Portal Authentication .....	87
Configure Scheduler .....	89
<b>6.5 Test the Network.....</b>	<b>90</b>

# About this User Guide

When using this guide, please notice that features of the EAP may vary slightly depending on the model and software version you have, and on your location, language, and Internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any product.

## Convention

Unless otherwise noted, the introduction in this guide takes EAP245 as an example.

## More Info

The latest software, management app and utility can be found at Download Center at <http://www.tp-link.com/support>.

The Quick Installation Guide can be found where you find this guide or inside the package of the EAP.

Specifications can be found on the product page at <http://www.tp-link.com>.


A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at the Contact Technical Support page at [www.tp-link.com/support](http://www.tp-link.com/support).

# Overview

Omada series products provide wireless coverage solutions for small-medium business and households. They can either work independently as standalone APs or be centrally managed by the EAP Controller software, providing a flexible, richly-functional but easily configured wireless network for small and medium business and households.

The following figure shows the top view of EAP110/EAP115/EAP225/EAP320/EAP330:

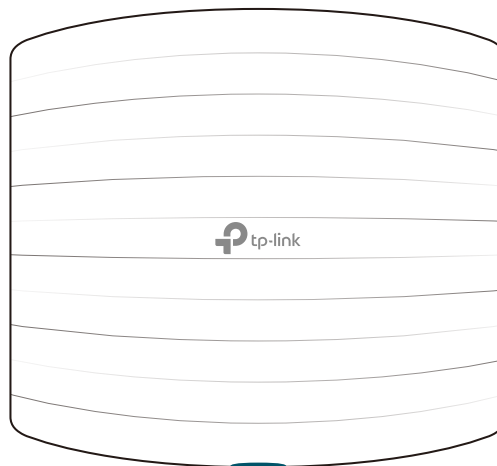


The following figure shows the front view of EAP245:



The following figure shows the front view of EAP115-Wall:



The following figure shows the front view of EAP110-Outdoor/EAP225-Outdoor:

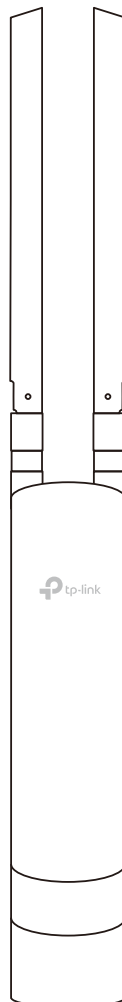

# 1 Quick Start

This chapter introduces how to build a wireless network using the EAPs and how to complete the basic settings. Follow the steps below:

1. *Determine the Management Method*
2. *Build the Network Topology*
3. *Log In to the EAP*
4. *Edit the SSID*
5. *Configure and Manage the EAP*



## 1.1 Determine the Management Method

Before building the wireless network, choose a proper method to manage the EAP based on your actual network situation. There are two methods: via EAP Controller and via the web page of the EAP.

### ▪ Via EAP Controller

If you want to establish a large-scale wireless network and have mass EAPs to be managed, we recommend that you use EAP Controller to centrally manage the EAPs. In such case, the EAPs work in FIT mode.

For detailed instructions about the network topology in such situation and how to use EAP Controller, refer to the User Guide of EAP Controller. To download EAP Controller and its User Guide, go to <http://www.tp-link.com/en/download/EAP-Controller.html>.

### ▪ Via the Web Page of the EAP

If you have a relatively small-sized wireless network and only one or just a small number of EAPs need to be managed, you can directly use the web browser to manage each EAP on its own management web page. In such case, the EAP works in Standalone mode (FAT mode), which means that it works independently as a standalone access point.


This User Guide introduces how to configure the Standalone EAP on its web page.

#### **Note:**

The web page of an EAP is inaccessible while it is managed by EAP Controller. To turn the EAP back to Standalone mode and access its web page, you can Forget the EAP on EAP Controller to reset the EAP or simply close EAP Controller.

## 1.2 Build the Network Topology

To manage the EAPs in Standalone mode, refer to the following topology.

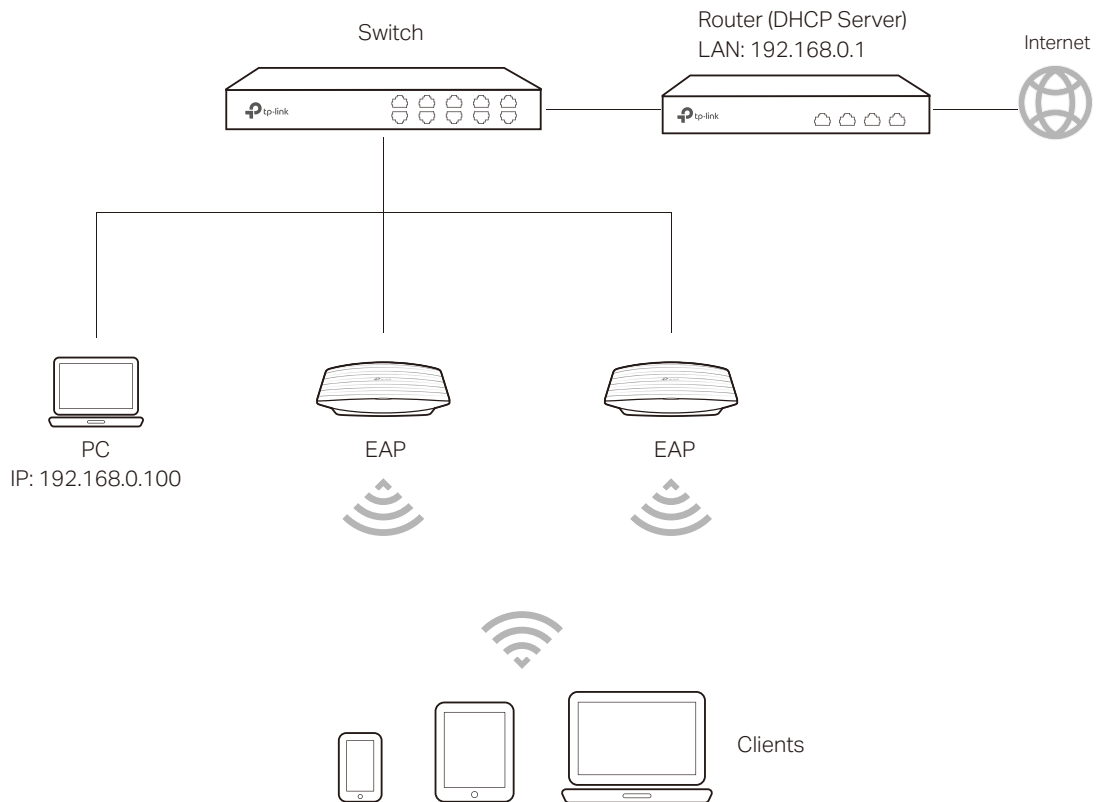

- The router is the gateway of the network, and devices in the LAN surf the internet via the router. At the same time, the router acts as a DHCP server to assign dynamic IP addresses to the EAPs and clients.
- The layer 2 switch is connected to the LAN interface of the router.
- The PC and the EAPs are all connected to the layer 2 switch. Since the PC and the EAPs are in the same network segment, the PC can log in to the web pages of the EAPs and manage them.

## 1.3 Log In to the EAP

There are two methods to log in to the EAP. You can choose one as you like: *Log In via the Domain Name* and *Log in via the IP Address of the EAP*.


### Note:

EAP320 and EAP330 are not currently available for login via domain name.

### Log In via the Domain Name


In this method, you needn't know the IP address of the EAP, but you need to prepare a wireless client device, such as a wireless laptop. Follow the steps below to log in to the EAP wirelessly:

1. Set the wireless client device to get IP settings assigned automatically.

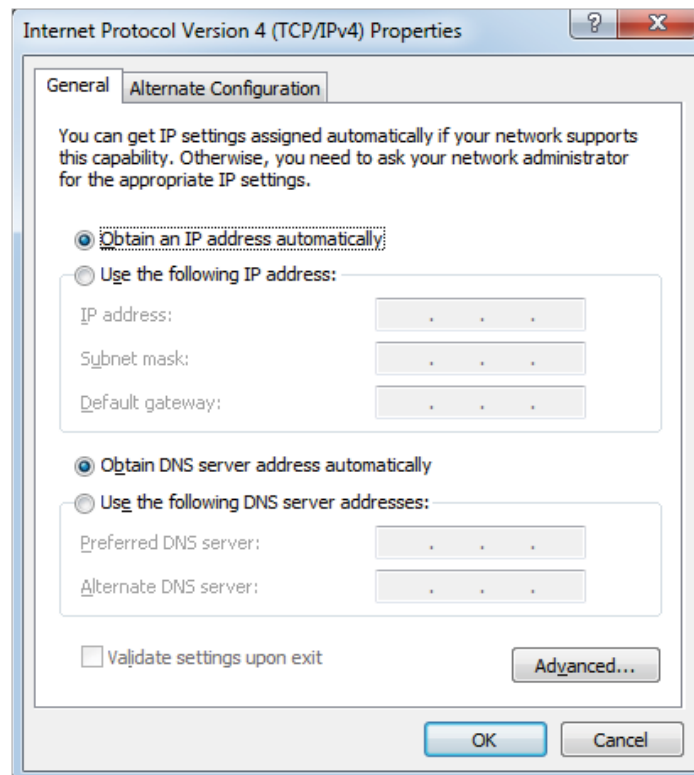


2. Search the default SSID (Network name) using your wireless client device and connect to the wireless network of the EAP. The default SSID of the EAP is printed on the product label at the bottom of the device. The dual-band EAP has two default SSIDs named TP-LINK\_2.4GHz\_XXXXXX and TP-LINK\_5GHz\_XXXXXX on the 2.4GHz band and 5GHz band, and the single-band EAP has a default SSID named TPLINK\_2.4GHz\_XXXXXX on the 2.4GHz band.


3. Make sure that the wireless client has been assigned with the IP address and has got the IP address of the DNS server and the gateway.

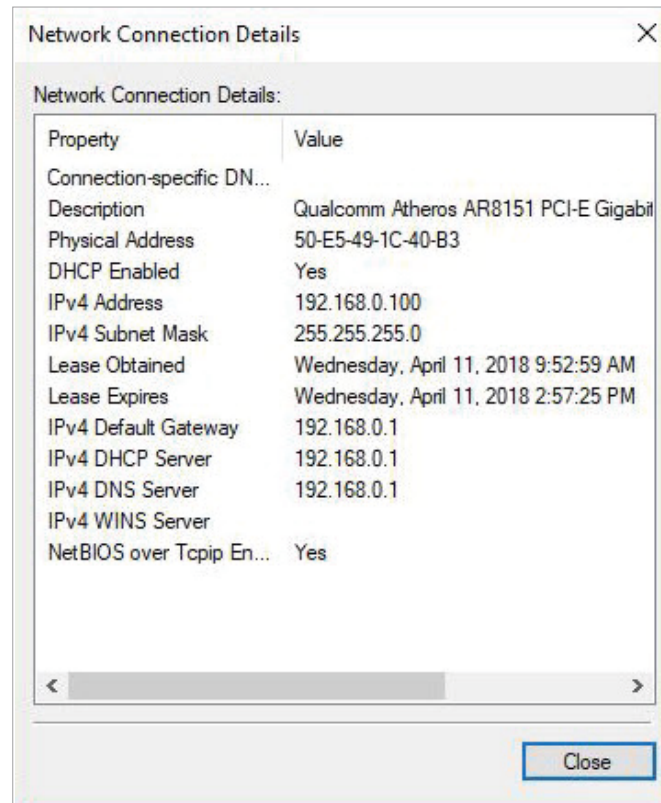

4. Launch a web browser on the client device and enter **http://tplinkeap.net** in the address bar to load the login page of the EAP. Use **admin** for both of the username and password to log in.

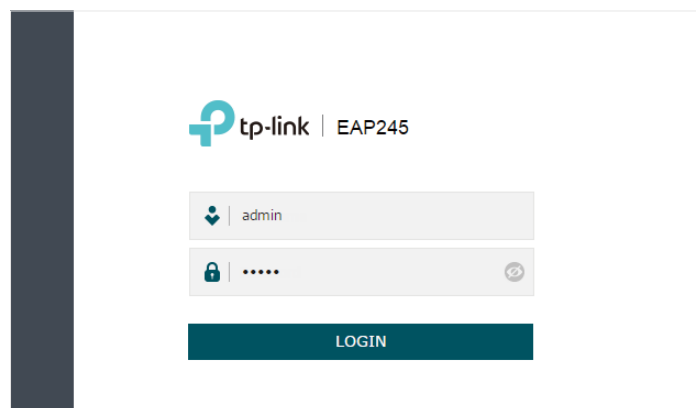

5. In the pop-up window, configure a new username and a new password for your user account.

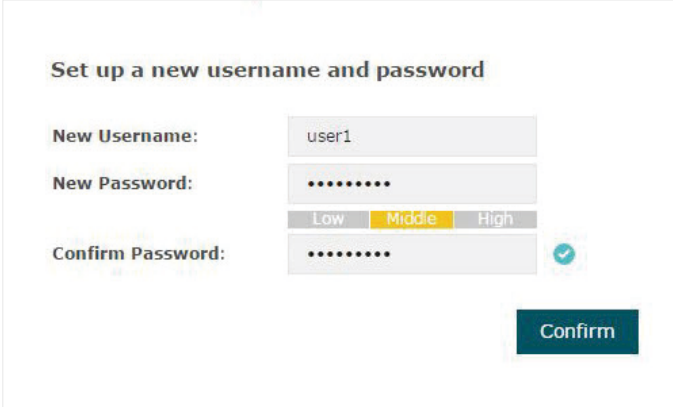

**Set up a new username and password**


**New Username:** user1

**New Password:** .....  
Low Middle High

**Confirm Password:** ..... ✓

**Confirm**

6. Use the new username and password to log in.

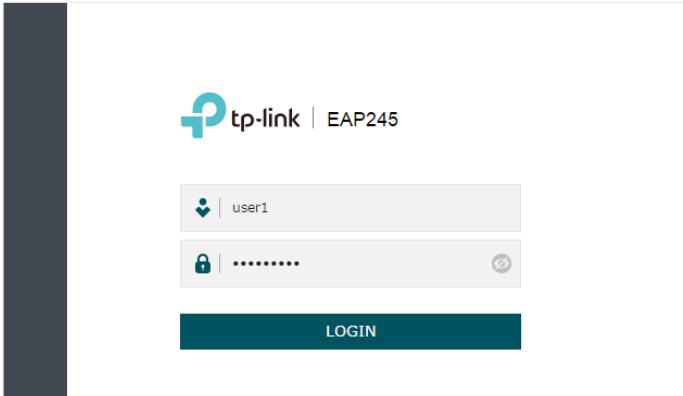

tp-link | EAP245

user1

.....

**LOGIN**

### Tips:

To facilitate access to the EAP via a wired device, you can set a static IP address for the EAP and remember it well or write it down. But make sure that this IP address is not being used in the same LAN. For detailed instructions about how to set a static IP address for the EAP, refer to [Configure the IP Address of the EAP](#).

## Log in via the IP Address of the EAP

To log in to the EAP through the Ethernet cable, you need to know the IP address of the EAP. Follow the steps below to log in via the IP address of the EAP:

1. Get the IP address of the EAP. There are two methods.
  - Log in to the router which acts as the DHCP server. In the DHCP client list, find the IP address of your EAP according to its MAC address. The MAC address can be found at the bottom of the EAP.
  - Go to [http://www.tp-link.com/en/download/EAP-Controller.html#EAP\\_Discovery\\_Tool](http://www.tp-link.com/en/download/EAP-Controller.html#EAP_Discovery_Tool) to download EAP Discovery Utility. EAP Discovery Utility is a software that can scan all EAPs in the same network segment. Install and launch EAP Discovery Utility

on the PC, and find the IP address of the EAP. In the following figure, the IP address of the EAP is **192.168.0.5**.

Discovering EAPs...


MAC, IP, Status

Select	MAC Address	IP Address	Model	Version	Status	Action
<input type="checkbox"/>	50:c7:bf:17:a6:e2	192.168.0.5	EAP245	1.0.1 Build 20170414 R...	Pending	Manage


Displayed EAP : 1

Select All Batch Setting

2. Launch a web browser and enter **192.168.0.5** in the address bar to load the login page of the EAP. Use **admin** for both of the username and password to log in.

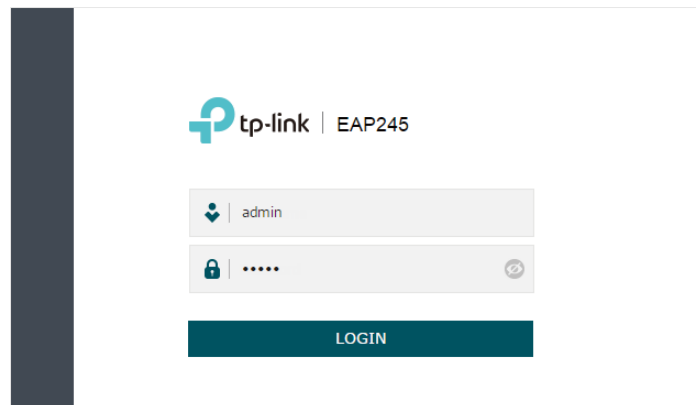

3. In the pop-up window, configure a new username and a new password for your user account.

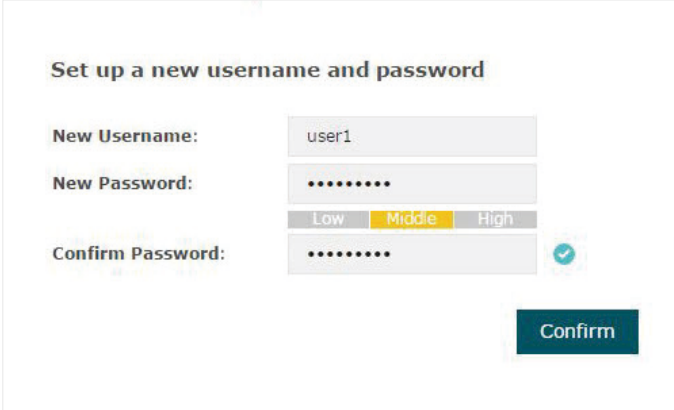

**Set up a new username and password**


**New Username:** user1

**New Password:** .....  
Low Middle High

**Confirm Password:** ..... ✓

**Confirm**

4. Use the new username and password to log in.

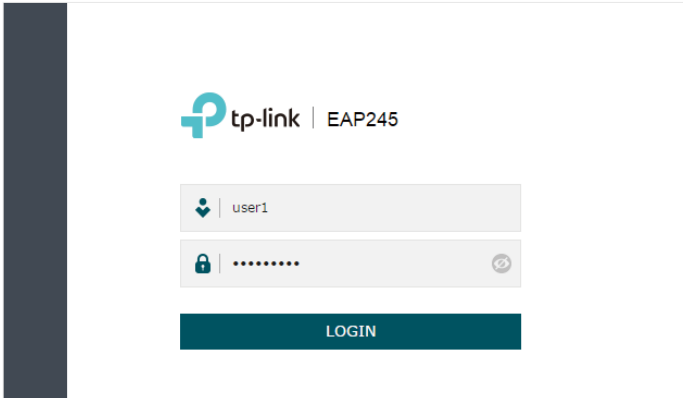

tp-link | EAP245

user1

.....

**LOGIN**

**Tips:**


To facilitate access to the EAP via a wired device, you can set a static IP address for the EAP and remember it well or write it down. But make sure that this IP address is not being used in the same LAN. For detailed instructions about how to set a static IP address for the EAP, refer to [Configure the IP Address of the EAP](#).


## 1.4 Edit the SSID

By default, the dual-band EAP has two default SSIDs named **TP-LINK\_2.4GHz\_XXXXXX** and **TP-LINK\_5GHz\_XXXXXX** on the 2.4GHz band and 5GHz band, and the single-band EAP has a default SSID named **TP-LINK\_2.4GHz\_XXXXXX** on the 2.4GHz band.

The default SSID has no password, so anyone can access the network without authentication. If your network is a private network, for security, we recommend that you change the SSID configuration immediately after login.

Follow the steps below to edit the default SSID:

1. Go to the **Wireless > Wireless Settings** page. In the **SSIDs** section, click  in the **Modify** column of the SSID entry.

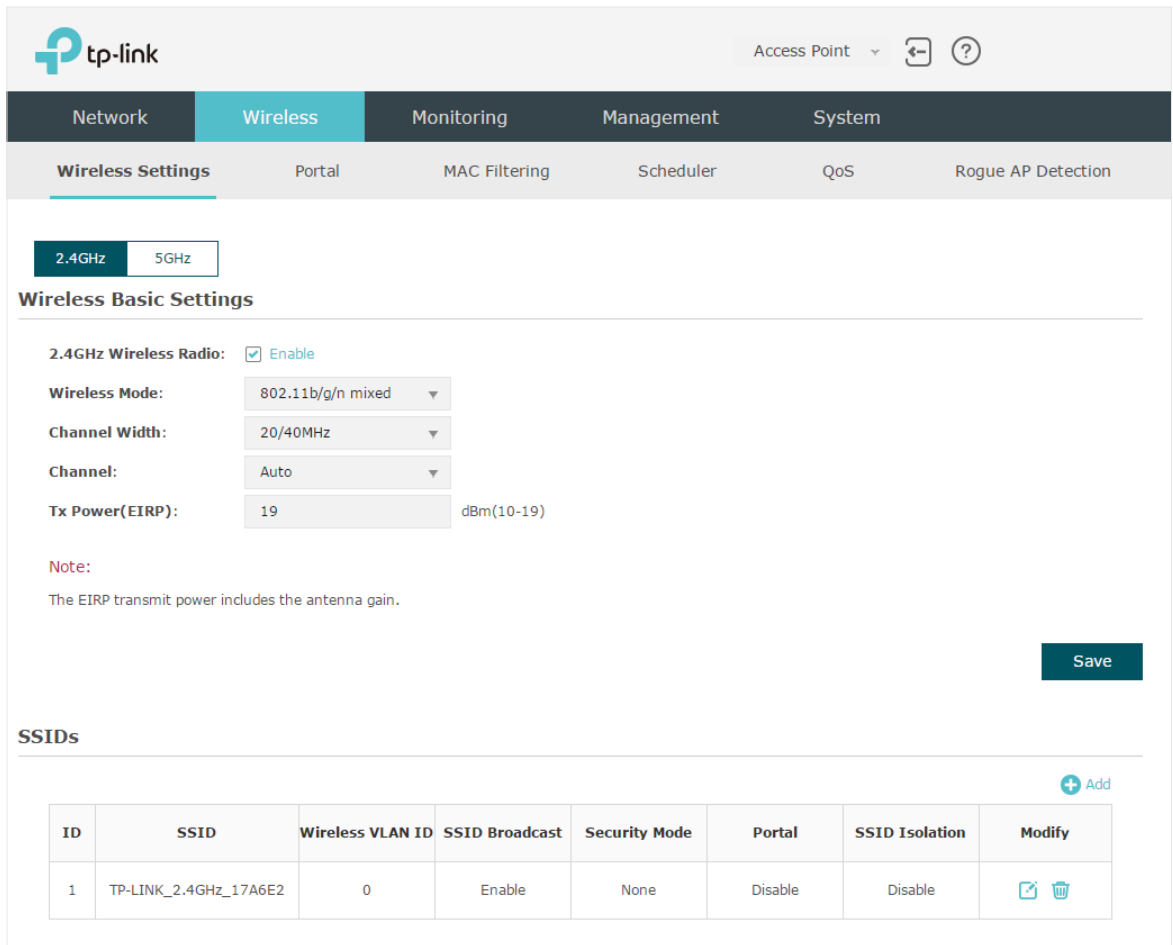



The screenshot shows the TP-Link web interface. At the top, there is a navigation bar with the TP-Link logo and the text "Access Point" with a dropdown arrow, a home icon, and a help icon. Below this is a main menu with tabs for "Network", "Wireless", "Monitoring", "Management", and "System". Under the "Wireless" tab, there are sub-tabs for "Wireless Settings", "Portal", "MAC Filtering", "Scheduler", "QoS", and "Rogue AP Detection".

The "Wireless Settings" section is active. It has two tabs: "2.4GHz" (selected) and "5GHz". Below the tabs is the "Wireless Basic Settings" section. It includes the following settings:

- 2.4GHz Wireless Radio:**  Enable
- Wireless Mode:** 802.11b/g/n mixed
- Channel Width:** 20/40MHz
- Channel:** Auto
- Tx Power(EIRP):** 19 dBm(10-19)

A note below the settings states: "Note: The EIRP transmit power includes the antenna gain." A "Save" button is located at the bottom right of this section.

The "SSIDs" section is below the basic settings. It features a table with the following columns: ID, SSID, Wireless VLAN ID, SSID Broadcast, Security Mode, Portal, SSID Isolation, and Modify. There is an "Add" button with a plus icon in the top right corner of the table area.

ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
1	TP-LINK_2.4GHz_17A6E2	0	Enable	None	Disable	Disable	 



2. The following page will appear. Change Security Mode from **None** to **WEP**, **WPA-Enterprise** or **WPA-PSK**. Configure the related parameters and click **OK**. We recommend that you choose **WPA-PSK**. For details, refer to [Configure SSIDs](#).

**SSIDs** + Add

ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
1	TP-LINK_2.4GHz_17A6E2	0	Enable	None	Disable	Disable	

**SSID:**

**Wireless VLAN ID:**  (0-4094. 0 is used to disable VLAN tagging.)

**SSID Broadcast:**  Enable

**Security Mode:**  ▼

**Version:**  Auto  WPA-PSK  WPA2-PSK

**Encryption:**  Auto  TKIP  AES

**Wireless Password:**

**Group Key Update Period:**  seconds (30-8640000. 0 means no update.)

**Portal:**  Enable

**SSID Isolation:**  Enable

**Tips:**

- If needed, you can also create more new SSIDs. For detailed instructions about how to create new SSIDs, refer to [Configure SSIDs](#).
- If your EAP is a dual-band EAP, remember to configure the SSID of the 5GHz band in the same way.

## 1.5 Configure and Manage the EAP

After all the steps above are completed, the legal wireless clients can enjoy the internet via the EAP. Additionally, you can configure the advanced functions of the EAP according to your need, and manage it conveniently on the web page.

The screenshot shows the TP-Link web interface. At the top left is the TP-Link logo. To the right is a dropdown menu labeled 'Access Point' and two icons: a log out icon and a help icon. Below this is a navigation bar with five tabs: 'Network' (highlighted in teal), 'Wireless', 'Monitoring', 'Management', and 'System'. The main content area is titled 'IP Settings'. It features two radio buttons: 'Dynamic' (selected) and 'Static'. Below this are four rows of configuration options: 'Fallback IP' with a checked 'Enable' checkbox; 'DHCP Fallback IP' with a text input field containing '192.168.0.5'; 'DHCP Fallback IP MASK' with a text input field containing '255.255.255.0'; and 'DHCP Fallback Gateway' with an empty text input field. A teal 'Save' button is located at the bottom right of the configuration area.

On the top of the page, you can click to log out and click to open the technical support website.

There are five tabs: **Network**, **Wireless**, **Monitoring**, **Management** and **System**. The following table introduces what you can configure under each tab.

<b>Network</b>	You can configure the IP address of the EAP.
<b>Wireless</b>	You can configure the wireless parameters and the advanced features, such as Portal, MAC Filtering, Scheduler, QoS and Rogue AP Detection.
<b>Monitoring</b>	You can view the information of the EAP, SSIDs and clients.
<b>Management</b>	You can manage the EAP using the management features, such as System Logs, Web Server, Management Access, Management VLAN and SNMP.
<b>System</b>	You can configure the system parameters, including the login account and the system time. In addition, you can reboot and reset the EAP, backup and restore the configuration, and upgrade the EAP using the new firmware file.

# 2 **Configure the Network**

This chapter introduces how to configure the network parameters and the advanced features of the EAP, including:

- *Configure the IP Address of the EAP*
- *Configure the Wireless Parameters*
- *Configure Portal Authentication*
- *Configure MAC Filtering*
- *Configure Scheduler*
- *Configure QoS*
- *Configure Rogue AP Detection*


## 2.1 Configure the IP Address of the EAP

The IP address of the EAP can be a dynamic IP address assigned by the DHCP server or a static IP address manually specified by yourself. By default, the EAP gets a dynamic IP address from the DHCP server. You can also specify a static IP address according to your needs.

### Tips:

For detailed introduction about how to find the dynamic IP address of the EAP, refer to [Log in via the IP Address of the EAP](#).

To configure the IP address of the EAP, go to the **Network** page.

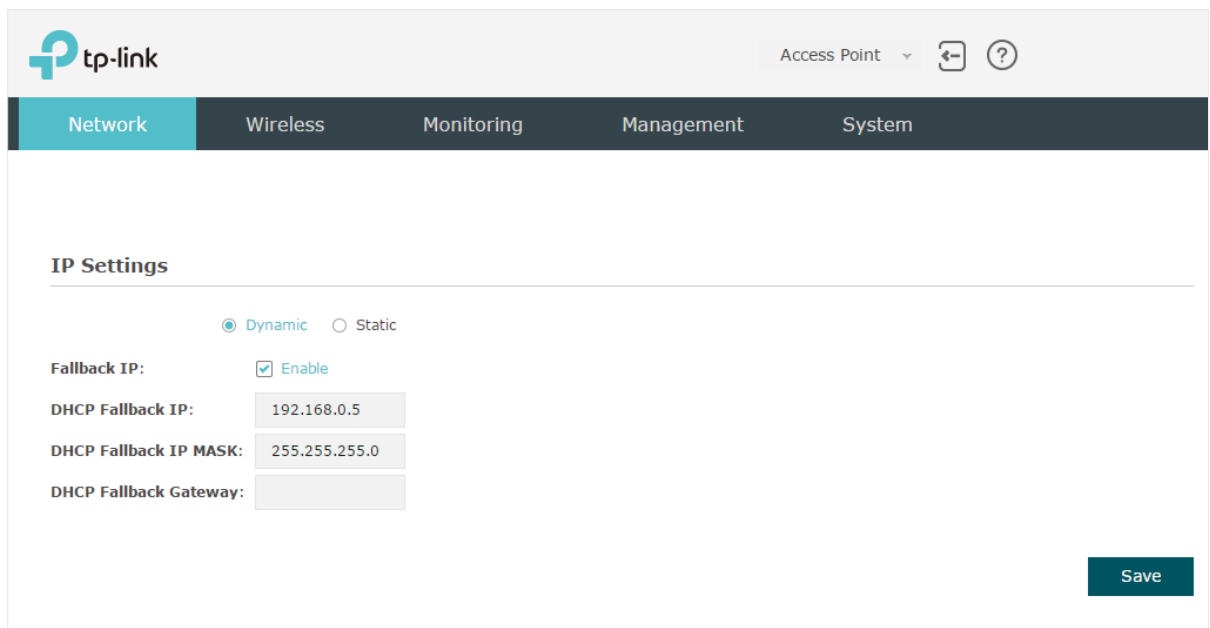


The screenshot shows the TP-Link web interface for configuring the IP address of the EAP. The interface includes a top navigation bar with the TP-Link logo and a dropdown menu for 'Access Point'. Below the navigation bar are tabs for 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. The 'Network' tab is active, and the 'IP Settings' section is displayed. In the 'IP Settings' section, there are two radio buttons: 'Dynamic' (selected) and 'Static'. Below the radio buttons, there is a 'Fallback IP' checkbox labeled 'Enable' which is checked. Underneath, there are three input fields: 'DHCP Fallback IP' with the value '192.168.0.5', 'DHCP Fallback IP MASK' with the value '255.255.255.0', and 'DHCP Fallback Gateway' which is empty. A 'Save' button is located at the bottom right of the form.

Follow the steps below to configure the IP address of the EAP:

1. Choose your desired IP address mode: **Dynamic** or **Static**.
2. Configure the related parameters according to your selection.

- **Dynamic**

If you choose Dynamic as the IP address mode, make sure that there is a reachable DHCP server on your network and the DHCP sever is properly configured to assign IP address and the other network parameters to the EAP.

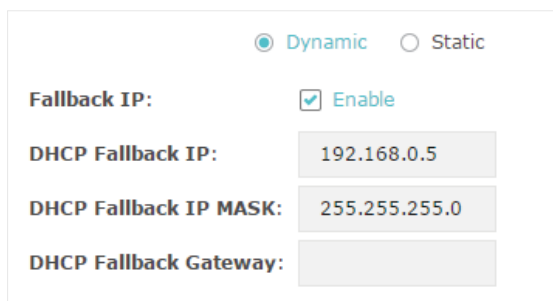


For network stability, you can also configure the fallback IP parameters for the EAP:

<b>Fallback IP</b>	With the fallback IP configured, if the EAP fails to get an IP address from a DHCP server within 10 seconds, the fallback IP will work as the IP address of the EAP. After that, however, the EAP will keep trying to obtain an IP address from the DHCP server until it succeeds.
<b>DHCP Fallback IP</b>	Specify a fallback IP address for the EAP. Make sure that this IP address is not being used by any other device in the same LAN.
<b>DHCP Fallback IP MASK</b>	Specify the network mask of the fallback IP.
<b>DHCP Fallback Gateway</b>	Specify the network gateway.

- **Static**

If you choose Static as the IP address mode, you need to manually specify an IP address and the related network parameters for the EAP. Make sure that the specified IP address is not being used by any other device in the same LAN.

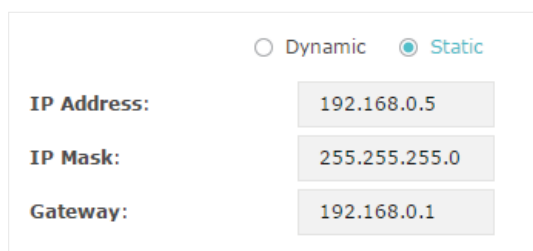

Configure the IP address and network parameters as the following table shows:

<b>IP Address</b>	Specify a static IP address for the EAP.
-------------------	--

---

IP Mask	Specify the network mask.
---------	---------------------------

---

Gateway	Specify the network gateway.
---------	------------------------------

---

3. Click **Save**.

## 2.2 Configure the Wireless Parameters

To configure the wireless parameters, go to the **Wireless > Wireless Settings** page.

The screenshot shows the TP-Link web interface for configuring wireless settings. At the top, there's a navigation bar with 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. Under 'Wireless', there are sub-menus: 'Wireless Settings', 'Portal', 'MAC Filtering', 'Scheduler', 'QoS', and 'Rogue AP Detection'. The 'Wireless Settings' section is active, showing options for 2.4GHz and 5GHz. The 'Wireless Basic Settings' section includes a '2.4GHz Wireless Radio' toggle (checked), 'Wireless Mode' (802.11b/g/n mixed), 'Channel Width' (20/40MHz), 'Channel' (Auto), and 'Tx Power(EIRP)' (19 dBm(10-19)). A note states: 'The EIRP transmit power includes the antenna gain.' Below this is a 'Save' button. The 'SSIDs' section features a table with columns: ID, SSID, Wireless VLAN ID, SSID Broadcast, Security Mode, Portal, SSID Isolation, and Modify. There is one entry with ID 1, SSID TP-LINK\_2.4GHz\_17A6E2, and other default settings. An '+ Add' button is in the top right of the table. The 'Wireless Advanced Settings' section includes 'Beacon Interval' (100 ms), 'DTIM Period' (1), 'RTS Threshold' (2347), 'Fragmentation Threshold' (2346), and 'Airtime Fairness' (ON/OFF). A 'Save' button is at the bottom right. The 'Load Balance' section has a 'Load Balance' toggle (ON/OFF) and 'Maximum Associated Clients' (0). A 'Save' button is at the bottom right.

**Wireless Basic Settings**

2.4GHz Wireless Radio:  Enable

Wireless Mode: 802.11b/g/n mixed

Channel Width: 20/40MHz

Channel: Auto

Tx Power(EIRP): 19 dBm(10-19)

Note:  
The EIRP transmit power includes the antenna gain.

Save

**SSIDs**

ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
1	TP-LINK_2.4GHz_17A6E2	0	Enable	None	Disable	Disable	

+ Add

**Wireless Advanced Settings**

Beacon Interval: 100 ms (40-100)

DTIM Period: 1 (1-255)

RTS Threshold: 2347 (1-2347)

Fragmentation Threshold: 2346 (256-2346. This works only in 11b/g mode.)

Airtime Fairness:  ON  OFF

Save

**Load Balance**

Load Balance:  ON  OFF

Maximum Associated Clients: 0 (1-99)

Save

The following sections introduce these contents: *Configure Basic Wireless Settings*, *Configure SSIDs*, *Configure Wireless Advanced Settings* and *Configure Load Balance*.

## Note:

- For a dual-band EAP, there are two bands: 2.4GHz and 5GHz. The wireless parameters are separately set on each band. You can click 2.4GHz 5GHz to select a band and configure the wireless parameters on this band.
- The following figures take 2.4GHz as an example.

## Configure Basic Wireless Settings

Proper wireless parameters can improve the quality of your wireless network. This section introduces how to configure the basic wireless parameters.

### Wireless Basic Settings

**5GHz Wireless Radio:**  Enable

**Wireless Mode:** 802.11a/n/ac mixed ▼

**Channel Width:** 20/40/80MHz ▼

**Channel Limit:**  Enable  
Note: In EU member states and EFTA countries, the operation in the frequency range 5150MHz-5350MHz is not allowed outdoors.

**Channel:** Auto ▼

**Tx Power(EIRP):** 30 dBm(7-30)

**Note:**  
The EIRP transmit power includes the antenna gain.

Save

Follow the steps below to complete the basic wireless settings:

1. If your EAP is a dual-band device, click 2.4GHz 5GHz to choose a frequency band to be configured.
2. In the **Wireless Basic Settings** section, configure the following parameters:

<b>2.4GHz Wireless Radio/5GHz Wireless Radio</b>	<p>Check the box to enable 2.4GHz/5GHz Wireless Radio. By default, it is enabled.</p> <p>Only when this option is enabled will the wireless radio on 2.4GHz/5GHz band works.</p>
<b>Wireless Mode</b>	<p>Select the protocol standard for the wireless network.</p> <p>For 2.4GHz network, we recommend that you select <b>802.11b/g/n</b>. In this way, clients supporting any one of these modes can access your wireless network.</p> <p>For 5GHz network, we recommend that you select <b>802.11n/ac</b> or <b>802.11a/n/ac</b>. In this way, clients supporting any one of these modes can access your wireless network.</p>



---

<b>Channel Width</b>	<p>Select the channel width.</p> <p>According to IEEE 802.11n standard, using a higher bandwidth can increase wireless throughput. However, you may choose a lower bandwidth due to the following reasons:</p> <ul style="list-style-type: none"><li>• To increase the available number of channels within the limited total bandwidth.</li><li>• To avoid interference from overlapping channels occupied by other devices in the environment.</li><li>• Lower bandwidth can concentrate higher transmit power, increasing stability of wireless links over long distances.</li></ul>
<b>Channel Limit</b>	<p>Check the box to enable the Channel Limit function. With this function enabled, the wireless frequency 5150MHz~5350MHz will be disabled. This function can influence the available options in Channel.</p> <p>This feature is only available for 5GHz wireless configuration of EAP225-Outdoor.</p>
<b>Channel</b>	<p>Select the channel used by the EAP. For example, 1/2412MHz means that the channel is 1 and the frequency is 2412MHz.</p> <p>By default, the channel is automatically selected, and we recommend that you keep the default setting.</p>
<b>Tx Power (EIRP)</b>	<p>Specify the transmit power value.</p> <p>If this value is set to be larger than the maximum transmit power that is allowed by the local regulation, the regulated maximum transmit power will be applied in the actual situation.</p> <p><b>Note:</b> In most cases, it is unnecessary to use the maximum transmit power. Specifying a larger transmit power than needed may cause interference to the neighborhood. Also it consumes more power and reduces longevity of the device.</p>

---

3. Click **Save**.

## Configure SSIDs

SSID (Service Set Identifier) is used as an identifier for a wireless LAN, and is commonly called as the “network name”. Clients can find and access the wireless network through the SSID. For one EAP, you can build up to eight SSIDs per frequency band.

### SSIDs

[+ Add](#)

ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
--	--	--	--	--	--	--	--

**SSID:**

**Wireless VLAN ID:**  (0-4094. 0 is used to disable VLAN tagging.)

**SSID Broadcast:**  Enable

**Security Mode:**

**Portal:**  Enable

**SSID Isolation:**  Enable

1	TP-Link_2.4GHz_3FEA26	0	Enable	None	Disable	Disable	<input type="button" value="Edit"/> <input type="button" value="Delete"/>
---	-----------------------	---	--------	------	---------	---------	---

Follow the steps below to create an SSID on the EAP:

1. If your EAP is a dual-band device, click   to choose a frequency band on which the new SSID will be created.
2. Click [+ Add](#) to add a new SSID on the chosen band.

### Tips:

If there are SSIDs already in the list, you can also click  to edit the specific SSID.

3. Configure the following required parameters for this SSID:

SSID	Specify a name for the wireless network.
------	--

Wireless VLAN ID	<p>Set a VLAN ID for the wireless network. It supports maximum 8 VLANs per frequency band.</p> <p>With this feature, the EAP can work together with the switches supporting 802.1Q VLAN. The EAP adds different VLAN tags to the clients which are connected to the corresponding wireless network. The clients in different VLANs cannot directly communicate with each other.</p> <p>VLAN 0 means that the EAP does not add any VLAN tag to the clients which are connected to this wireless network.</p> <p><b>Note:</b> Clients connected to the EAP via Ethernet cable do not belong to any VLAN. Thus wired client can communicate with all the wireless clients despite the VLAN settings.</p>
SSID Broadcast	<p>With the option enabled, EAP will broadcast the SSID to the nearby hosts, so that those hosts can find the wireless network identified by this SSID. If this option is disabled, users must enter the SSID manually to connect to the EAP.</p>
Security Mode	<p>Select the security mode of the wireless network. There are four options:</p> <p><b>None:</b> Clients can access the wireless network without authentication.</p> <p><b>WEP/WPA-Enterprise/WPA-PSK:</b> Clients need to pass the authentication before accessing the wireless network. For network security, we recommend that you encrypt your wireless network. The following sections will introduce how to configure these security modes.</p>
Portal	<p>With this option enabled, the Portal configuration will be applied to this wireless network.</p> <p>Portal provides authentication service for the clients who just need temporary access to the wireless network, such as the customers in a shopping mall or in a restaurant. Portal also provides a way for vendors and companies to put their advertisements on the authentication page. For detailed instructions about Portal, refer to <a href="#">Configure Portal Authentication</a>.</p>
SSID Isolation	<p>With this option enabled, the devices connected to the same SSID cannot communicate with each other.</p>

4. Click **OK** to create the SSID.

Following is the detailed instructions about how to configure [WEP](#), [WPA-Enterprise](#) and [WPA-PSK](#).

- **WEP**

WEP (Wired Equivalent Privacy) is a traditional encryption method. It has been proved that WEP has security flaws and can easily be cracked, so WEP cannot provide effective protection for wireless networks. Since WPA-PSK and WPA-Enterprise are much safer

than WEP, we recommend that you choose WPA-PSK or WPA-Enterprise if your clients also support them.

**Note:**

WEP is not supported in 802.11n mode or 802.11ac mode. If WEP is applied in 802.11n, 802.11 ac or 802.11n/ac mixed mode, the clients may not be able to access the wireless network. If WEP is applied in 802.11b/g/n mode (2.4GHz) or 802.11a/n (5GHz), the EAP may work at a low transmission rate.

The screenshot shows a configuration window for WEP. It includes the following fields and options:

- Security Mode:** A dropdown menu set to 'WEP'.
- Type:** Radio buttons for 'Auto' (selected), 'Open System', and 'Shared Key'.
- Key Selected:** A dropdown menu set to 'Key1'.
- Wep Key Format:** Radio buttons for 'ASCII' (selected) and 'Hexadecimal'.
- Key Type:** Radio buttons for '64-bit' (selected), '128-bit', and '152-bit'.
- Key Value:** A text input field containing 'weppw'.

The following table detailedly introduces how to configure each item:

Type	<p>Select the authentication type for WEP.</p> <p><b>Auto:</b> The EAP can select Open System or Shared Key automatically based on the wireless capability and request of the clients.</p> <p><b>Open System:</b> Clients can pass the authentication and associate with the wireless network without password. However, correct password is necessary for data transmission.</p> <p><b>Shared Key:</b> Clients have to input the correct password to pass the authentication, otherwise the clients cannot associate with the wireless network or transmit data.</p>
Key Selected	<p>Select one key to specify. You can configure four keys at most.</p>
WEP Key Format	<p>Select ASCII or Hexadecimal as the WEP key format.</p> <p><b>ASCII:</b> With this format selected, the WEP key can be any combination of keyboard characters of the specified length.</p> <p><b>Hexadecimal:</b> With this format selected, the WEP key can be any combination of hexadecimal digits (0-9, a-f, A-F) with the specified length.</p>
Key Type	<p>Select the WEP key length for encryption.</p> <p><b>64Bit:</b> Enter 10 hexadecimal digits or 5 ASCII characters.</p> <p><b>128Bit:</b> Enter 26 hexadecimal digits or 13 ASCII characters.</p> <p><b>152Bit:</b> Enter 32 hexadecimal digits or 16 ASCII characters.</p>
Key Value	<p>Enter the WEP keys. The length and valid characters are determined by the key format and key type.</p>

- **WPA-Enterprise**

WPA-Enterprise (Wi-Fi Protected Access-Enterprise) is a safer encryption method compared with WEP and WAP-PSK. It requires a RADIUS server to authenticate the clients via 802.1X and EAP (Extensible Authentication Protocol). WPA-Enterprise can generate different passwords for different clients, which ensures higher network security. But it also costs more to maintain the network, so it is more suitable for business networks.

The screenshot shows a configuration panel for WPA-Enterprise. It includes the following fields and options:

- Security Mode:** A dropdown menu set to "WPA-Enterprise".
- Version:** Radio buttons for "Auto" (selected), "WPA", and "WPA2".
- Encryption:** Radio buttons for "Auto" (selected), "TKIP", and "AES".
- RADIUS Server IP:** A text input field containing "0.0.0.0".
- RADIUS Port:** A text input field containing "0", with a note: "(1-65535. 0 means the default port, which is 1812.)"
- RADIUS Password:** A text input field.
- Group Key Update Period:** A text input field containing "0", with a note: "seconds (30-8640000. 0 means no update.)"
- Portal:** A checkbox labeled "Enable" which is currently unchecked.
- SSID Isolation:** A checkbox labeled "Enable" which is currently unchecked.

The following table introduces how to configure each item:

<b>Version</b>	<p>Select the version of WPA-Enterprise.</p> <p><b>Auto:</b> The EAP will automatically choose the version used by each client device.</p> <p><b>WPA/WPA2:</b> They're two versions of WPA security mode. WPA2 is an update of WPA. Compared with WPA, WPA2 introduces AES algorithm and CCMP encryption. Theoretically, WPA2 is securer than WPA.</p>
<b>Encryption</b>	<p>Select the Encryption type.</p> <p><b>Auto:</b> The default setting is Auto and the EAP will select TKIP or AES automatically based on the client device's request.</p> <p><b>TKIP:</b> Temporal Key Integrity Protocol. TKIP is not supported in 802.11n mode, 802.11ac mode or 802.11n/ac mixed mode. If TKIP is applied in 802.11n, 802.11 ac or 802.11n/ac mixed mode, the clients may not be able to access the wireless network. If TKIP is applied in 11b/g/n mode (2.4GHz) or 11a/n mode(5GHz), the device may work at a low transmission rate.</p> <p><b>AES:</b> Advanced Encryption Standard. It is securer than TKIP.</p>
<b>RADIUS Server IP</b>	Enter the IP address of the Radius Server.
<b>RADIUS Port</b>	Enter the port number of the Radius Server.
<b>RADIUS Password</b>	Enter the shared secret key of the Radius server.

---

**Group Key Update Period**

Specify an update period of the encryption key. The update period instructs how often the EAP should change the encryption key. 0 means that the encryption key does not change at anytime.

---

• **WPA-PSK**

WPA-PSK (Wi-Fi Protected Access-PSK) is based on a pre-shared key. It is characterized by high safety and simple settings, so it is mostly used by common households and small businesses.

The image shows a configuration interface for WPA-PSK. It includes the following fields and options:

- Security Mode:** A dropdown menu set to "WPA-PSK".
- Version:** Radio buttons for "Auto" (selected), "WPA-PSK", and "WPA2-PSK".
- Encryption:** Radio buttons for "Auto" (selected), "TKIP", and "AES".
- Wireless Password:** A text input field.
- Group Key Update Period:** A text input field containing "0", with a note: "seconds (30-8640000. 0 means no update.)".
- Portal:** A checkbox labeled "Enable".
- SSID Isolation:** A checkbox labeled "Enable".

The following table introduces how to configure each item:

---

<b>Version</b>	Select the version of WPA-Enterprise.  <b>Auto:</b> The EAP will automatically choose the version used by each client device.  <b>WPA-PSK/WPA2-PSK:</b> They're two versions of WPA-PSK security mode. WPA2-PSK is an update of WPA-PSK. Compared with WPA, Theoretically, WPA2 is securer than WPA.
<b>Encryption</b>	Select the Encryption type.  <b>Auto:</b> The default setting is Auto and the EAP will select TKIP or AES automatically based on the client device's request.  <b>TKIP:</b> Temporal Key Integrity Protocol. TKIP is not supported in 802.11n mode, 802.11ac mode or 802.11n/ac mixed mode. If TKIP is applied in 802.11n, 802.11 ac or 802.11n/ac mixed mode, the clients may not be able to access the wireless network. If TKIP is applied in 11b/g/n mode (2.4GHz) or 11a/n mode(5GHz), the device may work at a low transmission rate.  <b>AES:</b> Advanced Encryption Standard. It is securer than TKIP.

---

### Wireless Password

Configure the wireless password with ASCII or Hexadecimal characters.

- For ASCII, the length should be between 8 and 63 and the valid characters contain numbers, letters (case-sensitive) and common punctuations.
- For Hexadecimal, the length should be between 8 and 64, and the valid characters contain: 0-9, a-f, A-F.

### Group Key Update Period

Specify an update period of the encryption key. The update period instructs how often the EAP should change the encryption key. 0 means that the encryption key does not change at anytime.

## Cofigure Wireless Advanced Settings

Configure the advanced wireless parameters of the EAP and click **Save**.

#### Wireless Advanced Settings

Beacon Interval:	<input type="text" value="100"/>	ms (40-100)
DTIM Period:	<input type="text" value="1"/>	(1-255)
RTS Threshold:	<input type="text" value="2347"/>	(1-2347)
Fragmentation Threshold:	<input type="text" value="2346"/>	(256-2346. This works only in 11b/g mode.)
Airtime Fairness:	<input type="radio"/> ON <input checked="" type="radio"/> OFF	

The following table introduces how to configure each item:

### Beacon Interval

Beacons are transmitted periodically by the EAP device to announce the presence of a wireless network for the clients. **Beacon Interval** determines the time interval of the beacons sent by the EAP device.

You can specify a value between 40 and 100ms. The default is 100ms.

### DTIM Period

The DTIM (Delivery Traffic Indication Message) is contained in some Beacon frames. It indicates whether the EAP device has buffered data for client devices. The **DTIM Period** indicates how often the clients served by this EAP device should check for buffered data still on the EAP device awaiting pickup.

You can specify the value between 1-255 Beacon Intervals. The default value is 1, indicating that clients check for buffered data at every beacon. An excessive DTIM interval may reduce the performance of multicast applications, so we recommend you keep the default value.

---


RTS Threshold	<p>RTS/CTS (Request to Send/Clear to Send) is used to improve the data transmission efficiency of the network with hidden nodes, especially when there are lots of large packets to be transmitted.</p> <p>When the size of a data packet is larger than the <b>RTS Threshold</b>, the RTS/CTS mechanism will be activated. With this mechanism activated, before sending a data packet, the client will send an RTS packet to the EAP to request data transmitting. And then the EAP will send CTS packet to inform other clients to delay their data transmitting. In this way, packet collisions can be avoided.</p> <p>For a busy network with hidden nodes, a low threshold value will help reduce interference and packet collisions. But for a not-so-busy network, a too low threshold value will cause bandwidth wasting and reduce the data throughput. The recommended and default value is 2347 bytes.</p>
Fragmentation Threshold	<p>The fragmentation function can limit the size of packets transmitted over the network. If the size of a packet exceeds the <b>Fragmentation Threshold</b>, the fragmentation function is activated and the packet will be fragmented into several packets.</p> <p>Fragmentation helps improve network performance if properly configured. However, a too low fragmentation threshold may result in poor wireless performance caused by the extra work of dividing up and reassembling of frames and increased message traffic. The recommended and default value is 2346 bytes.</p>
Airtime Fairness	<p>EAP225_V3, EAP225-Outdoor_V1, EAP320 and EAP330 support this feature.</p> <p>With this option enabled, each client connected to the EAP can get the same amount of time to transmit data, avoiding low-data-rate clients to occupy too much network bandwidth.</p> <p>Compared with the relatively new client devices, some legacy client devices support slower wireless rate. If they communicate with the same EAP, the slower clients take more time to transmit and receive data compared with the faster clients. As a result, the overall wireless throughput of the network decreases. So under such circumstance, we recommend that you enable this feature to ensure the data transmission time for the faster clients. In this way, the network overall throughput can be improved.</p> <p>For EAP225_V3 and EAP225-Outdoor_V1, with this option enabled, at most 50 wireless clients can connect to the EAP in 2.4GHz band.</p>

---



## Configure Load Balance

With the Load Balance feature, you can limit the maximum number of clients who can access the EAP. In this way, you can achieve rational use of network resources.

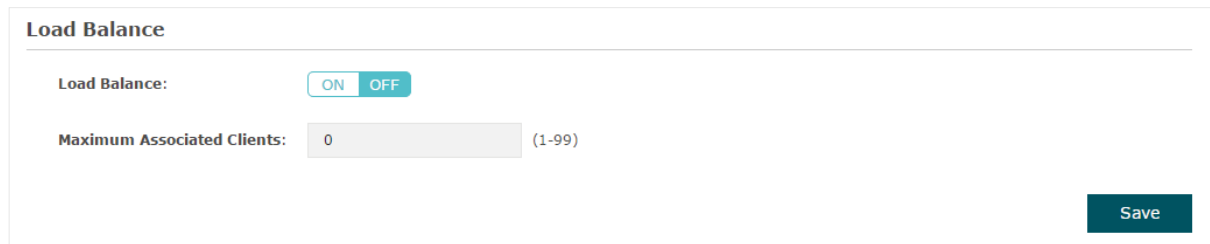

Load Balance

Load Balance:  ON  OFF

Maximum Associated Clients:  (1-99)

Save

Follow the steps below to configure Load Balance:

1. Click  2.4GHz  5GHz to choose a frequency band on which the load balance feature will take effect.
2. In the **Load Balance** section, click  ON  OFF to enable this feature. The ON button with cyan background color indicates this feature is enabled.
3. Specify the maximum number of clients who can connect to the EAP at the same time. While the number of connected clients has reached the limit and there are more clients requesting to access the network, the EAP will disconnect those with weaker signals.
4. Click **Save**.

## 2.3 Configure Portal Authentication

Portal authentication provides authentication service to the clients that only need temporary access to the wireless network, such as the customers in a restaurant or in a supermarket. To access the network, these clients need to enter the authentication login page and use the correct login information to pass the authentication. In addition, you can customize the authentication login page and specify a URL which the authenticated clients will be redirected to.

In this module, you can also configure Free Authentication Policy, which allows the specific clients to access the specific network resources without authentication.

To configure portal authentication, go to the **Wireless > Portal** page.

**Portal Configuration**

**Authentication Type:** No Authentication  
**Authentication Timeout:** 1 Hour  
 D H M  
**Redirect:**  Enable  
**Redirect URL:**  
**Portal Customization:** Local Web Portal

Term of Use:  
 I accept the Term of Use  
 Login

Save

**Free Authentication Policy**

ID	Policy Name	Source IP Range	Destination IP Range	Source MAC Address	Destination Port	Status	Settings
--	--	--	--	--	--	--	--

## Configure Portal

Three portal authentication types are available: *No Authentication*, *Local Password* and *External Radius Server*. The following sections introduce how to configure each authentication type.

- **No Authentication**

With this authentication type configured, clients can pass the authentication and access the network without providing any login information. They only need to accept the term of use on the authentication page.

**Portal Configuration**

**Authentication Type:** No Authentication

**Authentication Timeout:** 1 Hour

D H M

**Redirect:**  Enable

**Redirect URL:**

**Portal Customization:** Local Web Portal

**Term of Use:**

I accept the Term of Use

Login

Save

Follow the steps below to configure No Authentication as the portal authentication type:

1. Select **No Authentication** as the authentication type.
2. Configure the relevant parameters as the following table shows:

<b>Authentication Timeout</b>	<p>Specify the value of authentication timeout.</p> <p>A client's authentication will expire after the authentication timeout and the client needs to log in to the authentication page again to access the network.</p> <p>Options include <b>1 Hour</b>, <b>8 Hours</b>, <b>24 Hours</b>, <b>7 Days</b>, and <b>Custom</b>. With <b>Custom</b> selected, you can customize the time in days, hours, and minutes.</p>
<b>Redirect</b>	<p>With this function configured, the newly authenticated client will be redirected to the specific URL.</p>
<b>Redirect URL</b>	<p>With <b>Redirect</b> enabled, you also need to enter the URL in this field. The newly authenticated client will be redirected to this URL.</p>

**Portal Customization**

Configure the authentication page. **Local Web Portal** is the only available option in this authentication type. Enter the title and term of use in the two boxes.

The EAP uses its built-in web server to provide this authentication page for clients. To pass the authentication, clients only need to check the box of **I accept the Term of Use** and click the **Login** button.

3. Click **Save**.
4. Go to the **Wireless > Wireless Settings** page and enable the **Portal** option for the specific SSID. Then the portal authentication feature will take effect on this SSID.

**Portal:**  **Enable**

- **Local Password**

With this authentication type configured, clients are required to provide the correct password to pass the authentication.

The screenshot shows the 'Portal Configuration' interface. It includes the following fields and options:

- Authentication Type:** Local Password (dropdown)
- Password:** (text input)
- Authentication Timeout:** 1 Hour (dropdown)
- Redirect:**  Enable
- Redirect URL:** (text input)
- Portal Customization:** Local Web Portal (dropdown)

A preview window shows the authentication page layout with a title box, a Password field, a Term of Use box, a checked checkbox for 'I accept the Term of Use', and a Login button.

**Save**

Follow the steps below to configure Local Password as the portal authentication type:

1. Select **Local Password** as the authentication type.
2. Configure the relevant parameters as the following table shows:

Authentication Timeout	<p>Specify the value of authentication timeout.</p> <p>A client's authentication will expire after the authentication timeout and the client needs to log in to the authentication page again to access the network.</p> <p>Options include <b>1 Hour</b>, <b>8 Hours</b>, <b>24 Hours</b>, <b>7 Days</b>, and <b>Custom</b>. With <b>Custom</b> selected, you can customize the time in days, hours, and minutes.</p>
Password	Specify a password for authentication.
Redirect	With this function configured, the newly authenticated client will be redirected to the specific URL.
Redirect URL	With <b>Redirect</b> enabled, you also need to enter the URL in this field. The newly authenticated client will be redirected to this URL.
Portal Customization	<p>Configure the authentication page. <b>Local Web Portal</b> is the only available option is this authentication type. Enter the title and term of use in the two boxes.</p> <p>The EAP uses its built-in web server to provide this authentication page for clients. To pass the authentication, clients need to provide the correct password in the <b>Password</b> field, check the box of <b>I accept the Term of Use</b> and click the <b>Login</b> button.</p>

3. Click **Save**.
4. Go to the **Wireless > Wireless Settings** page and enable the **Portal** option for the specific SSID. Then the portal authentication feature will take effect on this SSID.

**Portal:**  **Enable**

- **External Radius Server**

If you have a RADIUS server on the network to authenticate the clients, you can select **External Radius Server**. Clients need to provide the correct login information to pass the authentication.

**Portal Configuration**

---

**Authentication Type:** External Radius Serve ▼

**RADIUS Server IP:**

**Port:**

**RADIUS Password:**

**Authentication Timeout:** 1 Hour ▼

D  H  M

**Redirect:**  Enable

**Redirect URL:**

**Portal Customization:** Local Web Portal ▼

**Username:**

**Password:**

**Term of Use:**

I accept the Term of Use

Login

**Save**

Follow the steps below to configure External Radius Server as the portal authentication type:

1. Build a Radius server on the network and make sure that it is reachable by the EAP.
2. Go to the **Portal** configuration page on the EAP. Select **External Radius Server** as the authentication type.
3. Configure the relevant parameters as the following table shows:

<b>RADIUS Server IP</b>	Enter the IP address of RADIUS server.
<b>Port</b>	Enter the port of the RADIUS server.
<b>RADIUS Password</b>	Enter the password of the RADIUS server.

Authentication Timeout	<p>Specify the value of authentication timeout.</p> <p>A client's authentication will expire after the authentication timeout and the client needs to log in to the authentication page again to access the network.</p> <p>Options include <b>1 Hour</b>, <b>8 Hours</b>, <b>24 Hours</b>, <b>7 Days</b>, and <b>Custom</b>. With <b>Custom</b> selected, you can customize the time in days, hours, and minutes.</p>
Redirect	<p>With this function configured, the newly authenticated client will be redirected to the specific URL.</p>
Redirect URL	<p>With <b>Redirect</b> enabled, you also need to enter the URL in this field. The newly authenticated client will be redirected to this URL.</p>
Portal Customization	<p>Configure the authentication page. There are two options: <b>Local Web Portal</b> and <b>External Web Portal</b>.</p> <ul style="list-style-type: none"> <li>Local Web Portal <p>Enter the title and term of use in the two boxes. The EAP uses its built-in web server to provide this authentication page for clients. To pass the authentication, clients need to provide the correct username and password in the <b>Username</b> and <b>Password</b> fields, check the box of <b>I accept the Term of Use</b> and click the <b>Login</b> button.</p> </li> <li>External Web Portal <p>With External Web Portal configured, the authentication page will be provided by the web portal server built on the network. To configure External Web Portal, you need to complete the following configurations:</p> <ol style="list-style-type: none"> <li>Build an external web portal server on your network and make sure that it is reachable by the EAP.</li> <li>On this configuration page, enter the URL of the authentication page provided by the external portal server.</li> </ol> <div data-bbox="683 1429 1281 1554" data-label="Form"> <p>The screenshot shows a configuration form with the following elements:</p> <ul style="list-style-type: none"> <li><b>Portal Customization:</b> A dropdown menu with 'External Web Portal' selected.</li> <li><b>External Web Portal URL:</b> An empty text input field.</li> </ul> </div> </li> </ul> <ol style="list-style-type: none"> <li>Add the external web portal server to the <b>Free Authentication Policy</b> list. In this way, clients can access the web portal server before authenticated. For details about how to configure Free Authentication Policy, refer to <a href="#">Configure Free Authentication Policy</a>.</li> </ol>

4. Click **Save**.

5. Go to the **Wireless > Wireless Settings** page and enable the **Portal** option for the specific SSID. Then the portal authentication feature will take effect on this SSID.

The screenshot shows a configuration field with the label **Portal:** followed by a checked checkbox and the text **Enable**.

## Configure Free Authentication Policy

Free Authentication Policy allows some specific clients to access the specific network resources without authentication. For example, you can set a free authentication policy to allow clients to visit the external web portal server before authenticated. In this way, the clients can visit the login page provided by the web portal server and then pass the subsequent authentication process.

Free Authentication Policy							
ID	Policy Name	Source IP Range	Destination IP Range	Source MAC Address	Destination Port	Status	Settings
--	--	--	--	--	--	--	--

Follow the steps below to add free authentication policy.

1. In the **Free Authentication Policy** section, click  **Add** to load the following page.

ID	Policy Name	Source IP Range	Destination IP Range	Source MAC Address	Destination Port	Status	Settings
--	--	--	--	--	--	--	--

**Policy Name:**

**Source IP Range:**  /  (Optional)

**Destination IP Range:**  /  (Optional)

**Source MAC Address:**  (Optional)

**Destination Port:**  (Optional)

**Status:**  Enable

2. Configure the following parameters. When all the configured conditions are met, the client can access the network without authentication.

<b>Policy Name</b>	Specify a name for the policy.
<b>Source IP Range</b>	Specify an IP range with the subnet and mask length. The clients in this IP range can access the network without authentication.  Leaving the field empty means that clients with any IP address can access the specific resources.
<b>Destination IP Range</b>	Specify an IP range with the subnet and mask length. The devices in this IP range can be accessed by the clients without authentication.  Leaving the field empty means that all devices in the LAN can be accessed by the specific clients.



---

<b>Source MAC Address</b>	Specify the MAC address of the client, who can access the specific resources without authentication.  Leaving the field empty means that clients with any MAC address can access the specific resources.
<b>Destination Port</b>	Specify the port number of the service. When using this service, the clients can access the specific resources without authentication.  Leaving the field empty means that clients can access the specific resources no matter what service they are using.
<b>Status</b>	Check the box to enable the policy.

---

**Tips:**

When External Web Portal is configured in the portal configuration, you should set the IP address and subnet mask of the external web server as the **Destination IP Range**. As for **Source IP Range**, **Source MAC Address** and **Destination Port**, you can simply keep them as empty or configure them according to your actual needs.

3. Click **OK** to add the policy.

## 2.4 Configure MAC Filtering

MAC Filtering is used to allow or block the clients with specific MAC addresses to access the network. With this feature you can effectively control clients' access to the wireless network according to your needs.

To configure MAC Filtering, go to the **Wireless > MAC Filtering** page.

The screenshot shows the TP-Link web interface for configuring MAC Filtering. The top navigation bar includes the TP-Link logo, the text "Access Point", and icons for home and help. Below this is a main menu with tabs for Network, Wireless (selected), Monitoring, Management, and System. Under the Wireless tab, there are sub-tabs for Wireless Settings, Portal, MAC Filtering (selected), Scheduler, QoS, and Rogue AP Detection.

The **Settings** section contains the following:

- Enable MAC Filtering:**  Enable
- Save** button

The **Station MAC Group** section contains:

- + Create Groups** button

The **MAC Filtering Association** section contains a table with the following data:

ID	SSID	Band	MAC Group Name	Action
1	TP-LINK_2.4GHz_17A6E2	2.4GHz	None	Deny
2	TP-LINK_5GHz_17A6E3	5GHz	None	Deny

Below the table, there is a **Note:**

- Deny: Block access from the stations in the MAC Group list.
- Allow: Only allow access from the stations in the MAC Group list.


A **Save** button is located at the bottom right of the page.

Follow the steps below to configure MAC Filtering on this page:


1. In the **Settings** section, check the box to enable **MAC Filtering**, and click **Save**.

This screenshot shows the **Settings** section of the MAC Filtering configuration page. The **Enable MAC Filtering:** checkbox is now checked, and the text "Enable" is highlighted in blue. The **Save** button remains visible at the bottom right.


2. In the **Station MAC Group** section, click **+ Create Groups** and the following page will appear.

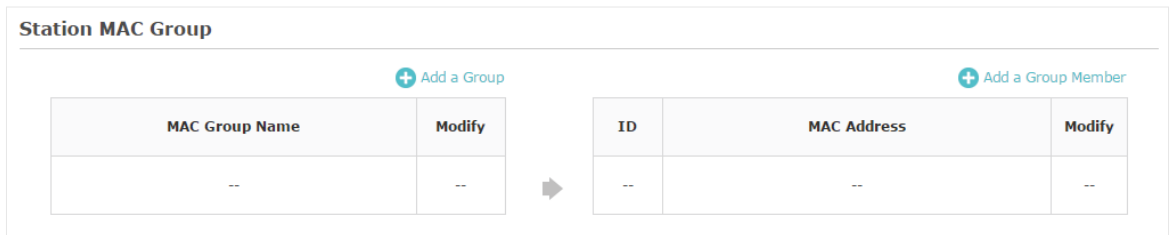

- 1) Click **+ Add a Group** and specify a name for the MAC group to be created. Click **OK**. You can create up to eight MAC groups.

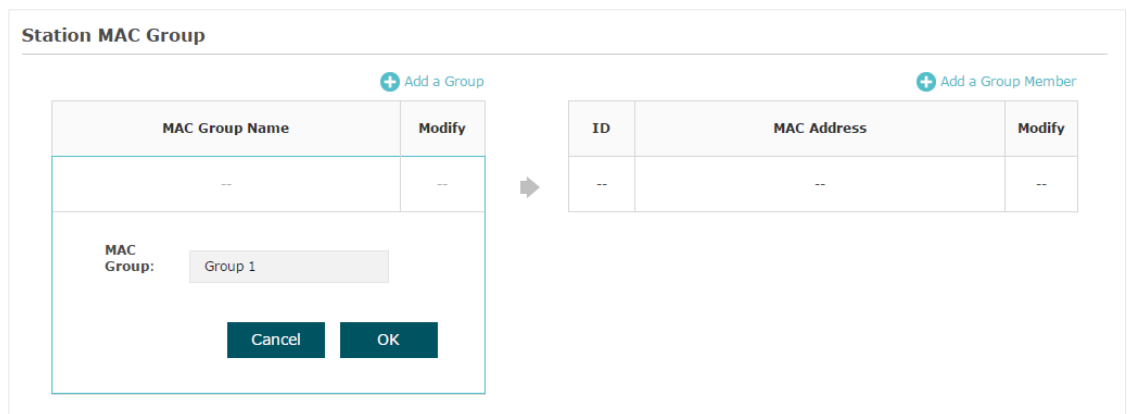

- 2) Select a MAC group in the group list (the color of the selected one will change to blue). Click **+ Add a Group Member** to add group members to the MAC group. Specify the MAC address of the host and click **OK**. In the same way, you can add more MAC addresses to the selected MAC group.

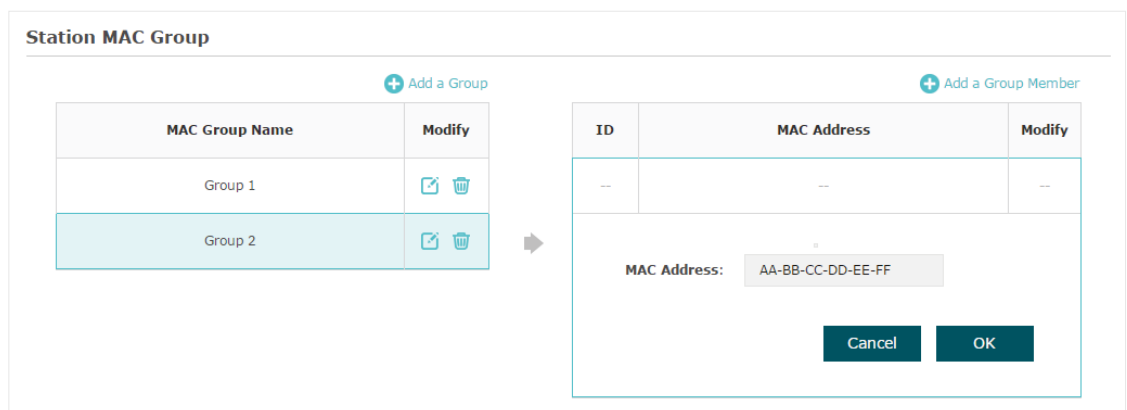

3. In the **MAC Filtering Association** section, configure the filtering rule. For each SSID, you can select a MAC group in the **MAC Group Name** column and select the filtering rule (**Allow/Deny**) in the **Action** column. Click **Save**.

For example, the following configuration means that the hosts in Group 2 are denied to access the SSID TP-LINK\_2.4GHz\_17A6E2 on the 2.4GHz band and allowed to access the SSID TP-LINK\_5GHz\_17A6E3 on the 5GHz band.

**MAC Filtering Association**

ID	SSID	Band	MAC Group Name	Action
1	TP-LINK_2.4GHz_17A6E2	2.4GHz	Group 2	Deny
2	TP-LINK_5GHz_17A6E3	5GHz	Group 2	Allow


**Note:**  
 Deny: Block access from the stations in the MAC Group list.  
 Allow: Only allow access from the stations in the MAC Group list.

**Save**

## 2.5 Configure Scheduler

With the Scheduler feature, the EAP or its wireless network can automatically turn on or off at the time you set. For example, you can schedule the radio to operate only during the office working time to reduce power consumption.

To configure Scheduler, go to the **Wireless > Scheduler** page.

 Access Point ↩ ?

Network **Wireless** Monitoring Management System

Wireless Settings Portal MAC Filtering **Scheduler** QoS Rogue AP Detection

**Settings**

Scheduler:  Enable

Association Mode: Associated with SSID

**Save**

**Scheduler Profile Configuration**

+ Create Profiles

**Scheduler Association**

ID	SSID	Band	Profile Name	Action
1	TP-LINK_2.4GHz_17A6E2	2.4GHz	None	Radio Off
2	TP-LINK_5GHz_17A6E3	5GHz	None	Radio Off

**Save**

Follow the steps below to configure Scheduler on this page:

1. In the **Settings** section, check the box to enable **Scheduler** and select the **Association Mode**. There are two modes: **Associated with SSID** (the scheduler profile will be applied to the specific SSID) and **Associated with AP** (the profile will be applied to all SSIDs on the EAP). Then click **Save**.

The screenshot shows the 'Settings' section with the following configuration:

- Scheduler:**  Enable
- Association Mode:** Associated with SSID (dropdown menu)
- Save** button

2. In the **Scheduler Profile Configuration** section, click **+ Create Profiles** and the following page will appear.

The screenshot shows the 'Scheduler Profile Configuration' page with the following elements:

- + Add a Profile** button
- + Add an item** button
- Table 1 (left):

Profile Name	Modify
--	--
- Table 2 (right):

ID	Profile Name	Days	Start Time	End Time	Modify
--	--	--	--	--	--

- 1) Click **+ Add a Profile** and specify a name for the profile to be created. Click **OK**. You can create up to eight profiles.

The screenshot shows the 'Scheduler Profile Configuration' page with a modal dialog open for adding a profile. The dialog contains:

- + Add a Profile** button
- + Add an item** button
- Table 1 (left):

Profile Name	Modify
--	--
- Table 2 (right):

ID	Profile Name	Days	Start Time	End Time	Modify
--	--	--	--	--	--
- Profile:** Profile 1 (input field)
- Cancel** and **OK** buttons

- 2) Select a profile in the list (the color of the selected one will change to blue). Click **+ Add an item** to add time range items to the profile. Specify the **Day**, **Start Time** and **End Time** of the time range, and click **OK**.

**Scheduler Profile Configuration**

**Profiles List:**

Profile Name	Modify
Profile 1	
Profile 2	

**Configuration Form:**

ID	Profile Name	Days	Start Time	End Time	Modify
--	--	--	--	--	--

**Day:**

Weekday  Weekend  Every Day  Custom

Mon  Tue  Wed  Thu  Fri  Sat

Sun

**Time:**  24 hours

**Start Time:** 09 : 00

**End Time:** 18 : 00

**Buttons:** Cancel OK

**Tips:**

You can add up to eight time range items for one profile. If there are several time range items in one profile, the time range of this profile is the sum of all of these time ranges.

3. In the **Scheduler Association** section, configure the scheduler rule. There are two association modes: *Association with SSID* and *Association with AP*. The following sections introduce how to configure each mode.

- **Association with SSID**

If you select **Association with SSID** in step 1, the Scheduler Association table will display all the SSIDs on the EAP. For each SSID, you can select a profile in the **Profile Name** column and select the scheduler rule (**Radio On/Radio Off**) in the **Action** column. Then click **Save**.

For example, the following configuration means that during the time range defined in Profile2, the radio of SSID TP-LINK\_2.4GHZ\_17A6E2 is on and the radio of SSID TPLINK\_5GHz\_17A6E3 is off.

Scheduler Association				
ID	SSID	Band	Profile Name	Action
1	TP-LINK_2.4GHZ_17A6E2	2.4GHz	Profile 2	Radio On
2	TP-LINK_5GHz_17A6E3	5GHz	Profile 2	Radio Off

[Save](#)

### ■ Association with AP

If you select **Association with AP** in step 1, the Scheduler Association table will display the name and MAC address of the EAP. Select a profile in the **Profile Name** column and select the scheduler rule (**Radio On/Radio Off**) in the **Action** column. Then click **Save**.

For example, the following configuration means that during the time range defined in Profile2, the radio of all SSIDs on the EAP is on.

Scheduler Association				
ID	AP	AP MAC	Profile Name	Action
1	EAP245-50-c7-bf-17-a6-e2	50-C7-BF-17-A6-E2	Profile 2	Radio On

[Save](#)

## 2.6 Configure QoS

Quality of service (QoS) is used to optimize the throughput and performance of the EAP when handling differentiated wireless traffic, such as Voice-over-IP (VoIP), other types of audio, video, streaming media, and traditional IP data.

In QoS configuration, you should set parameters on the transmission queues for different types of wireless traffic and specify minimum and maximum wait time for data transmission. In normal use, we recommend that you keep the default values.

To configure QoS, go to the **Wireless > QoS** page.

tp-link Access Point

Network **Wireless** Monitoring Management System

Wireless Settings Portal MAC Filtering Scheduler **QoS** Rogue AP Detection

2.4GHz 5GHz

Wi-Fi Multimedia (WMM):  Enable

**AP EDCA Parameters**

Queue	Arbitration Inter-Frame Spacing	Minimum Contention Window	Maximum Contention Window	Maximum Burst
Data 0 (Voice)	1	3	7	1504
Data 1 (Video)	1	7	15	3008
Data 2 (Best Effort)	3	15	63	0
Data 3 (Background)	7	15	1023	0

**Station EDCA Parameters**

Queue	Arbitration Inter-Frame Spacing	Minimum Contention Window	Maximum Contention Window	TXOP Limit
Data 0 (Voice)	2	3	7	1504
Data 1 (Video)	2	7	15	3008
Data 2 (Best Effort)	3	15	1023	0
Data 3 (Background)	7	15	1023	0

No Acknowledgement:  Enable

Unscheduled Automatic Power Save Delivery:  Enable

Save

Follow the steps below to configure QoS on this page:

1. Click **2.4GHz** or **5GHz** to choose a frequency band to be configured.
2. Check the box to enable **Wi-Fi Multimedia (WMM)**. With WMM enabled, the EAP uses the QoS function to guarantee the high priority of the transmission of audio and video packets.

**Wi-Fi Multimedia (WMM):**  Enable

**Note:**

If **802.11n only** mode is selected in 2.4GHz (or **802.11n only**, **802.11ac only**, or **802.11 n/ac mixed** mode selected in 5GHz), the WMM should be enabled. If WMM is disabled, the **802.11n only** mode cannot be selected in 2.4GHz (or **802.11n only**, **802.11ac only**, or **802.11 n/ac mixed** mode in 5GHz).



3. In the **AP EDCA Parameters** section, configure the AP EDCA ((Enhanced Distributed Channel Access) parameters. AP EDCA parameters affect traffic flowing from the EAP device to the client station. The following table detailedly explains these parameters.

AP EDCA Parameters				
Queue	Arbitration Inter-Frame Spacing	Minimum Contention Window	Maximum Contention Window	Maximum Burst
Data 0 (Voice)	1	3	7	1504
Data 1 (Video)	1	7	15	3008
Data 2 (Best Effort)	3	15	63	0
Data 3 (Background)	7	15	1023	0

The following table detailedly explains these parameters:

<b>Queue</b>	<p>Displays the transmission queue. By default, the priority from high to low is Data 0, Data 1, Data 2, and Data 3. The priority may be changed if you reset the EDCA parameters.</p> <p><b>Data 0 (Voice):</b> Highest priority queue, minimum delay. Timesensitive data such as VoIP and streaming media are automatically sent to this queue.</p> <p><b>Data 1 (Video):</b> High priority queue, minimum delay. Time-sensitive video data is automatically sent to this queue.</p> <p><b>Data 2 (Best Effort):</b> Medium priority queue, medium throughput and delay. Most traditional IP data is sent to this queue.</p> <p><b>Data 3 (Background):</b> Lowest priority queue, high throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).</p>
<b>Arbitration Inter-Frame Space</b>	A wait time for data frames. The wait time is measured in slots. Valid values are from 0 to 15.
<b>Minimum Contention Window</b>	<p>A list to the algorithm that determines the initial random backoff wait time (window) for retry of a transmission.</p> <p>This value cannot be higher than the value of Maximum Contention Window.</p>
<b>Maximum Contention Window</b>	<p>The upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached.</p> <p>This value must be higher than the value of Minimum Contention Window.</p>

### Maximum Burst

Maximum Burst specifies the maximum burst length allowed for packet bursts on the wireless network. A packet burst is a collection of multiple frames transmitted without header information. The decreased overhead results in higher throughput and better performance.

4. In the **Station EDCA Parameters** section, configure the station EDCA (Enhanced Distributed Channel Access) parameters. Station EDCA parameters affect traffic flowing from the client station to the EAP device.

#### Station EDCA Parameters

Queue	Arbitration Inter-Frame Spacing	Minimum Contention Window	Maximum Contention Window	TXOP Limit
Data 0 (Voice)	2	3	7	1504
Data 1 (Video)	2	7	15	3008
Data 2 (Best Effort)	3	15	1023	0
Data 3 (Background)	7	15	1023	0

The following table detailedly explains these parameters:

### Queue

Displays the transmission queue. By default, the priority from high to low is Data 0, Data 1, Data 2, and Data 3. The priority may be changed if you reset the EDCA parameters.

**Data 0 (Voice):** Highest priority queue, minimum delay. Timesensitive data such as VoIP and streaming media are automatically sent to this queue.

**Data 1 (Video):** High priority queue, minimum delay. Time-sensitive video data is automatically sent to this queue.

**Data 2 (Best Effort):** Medium priority queue, medium throughput and delay. Most traditional IP data is sent to this queue.

**Data 3 (Background):** Lowest priority queue, high throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).

### Arbitration Inter-Frame Space

A wait time for data frames. The wait time is measured in slots. Valid values are from 0 to 15.

### Minimum Contention Window

A list to the algorithm that determines the initial random backoff wait time (window) for retry of a transmission.

This value cannot be higher than the value of Maximum Contention Window.

Maximum Contention Window	<p>The upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached.</p> <p>This value must be higher than the value of Minimum Contention Window.</p>
TXOP Limit	<p>The TXOP Limit is a station EDCA parameter and only applies to traffic flowing from the client station to the EAP device.</p> <p>The Transmission Opportunity (TXOP) is an interval of time, in milliseconds, when a WME (Wireless Multimedia Extensions) client station has the right to initiate transmissions onto the wireless medium (WM) towards the EAP device. The valid values are multiples of 32 between 0 and 8192.</p>

5. Choose whether to enable the following two options according to your need.

**No Acknowledgement:**  Enable

**Unscheduled Automatic Power Save Delivery:**  Enable

The following table detailedly explains these options:

No Acknowledgement	With this option enabled, the EAP would not acknowledge frames with QoSNoAck. No Acknowledgement is recommended if VoIP phones access the network through the EAP device.
Unscheduled Automatic Power Save Delivery	As a power management method, it can greatly improve the energy-saving capacity of clients.

6. Click **Save**.

## 2.7 Configure Rogue AP Detection

A Rogue AP is an access point that is installed on a secure network without explicit authorization from the network administrator. With Rogue AP Detection, the EAP can scan all channels to detect the nearby APs and display the detected APs in the Detected Rogue AP list. If the specific AP is known as safe, you can move it to the Trusted APs list. Also, you can backup and import the Trusted AP list as needed.

### Note:

The Rogue AP Detection feature is only used for collecting information of the nearby wireless network and does not impact the detected APs, no matter what operations you have executed in this feature.

To configure Rogue AP Detection, go to the **Wireless > Rogue AP Detection** page.

The screenshot shows the TP-Link web interface for configuring Rogue AP Detection. The top navigation bar includes 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. The 'Wireless' tab is active, and the 'Rogue AP Detection' sub-tab is selected. The 'Settings' section has 'Rogue AP Detection' set to 'Disable'. Below this is the 'Detected Rogue AP List' table, which is currently empty. The 'Trusted AP List' table is also empty. At the bottom, the 'Download/Backup Trusted AP List' section has 'Save Action' set to 'Download (PC to AP)', 'File Management' set to 'Replace', and a 'Save' button.

**Settings**

Rogue AP Detection:  Enable Save

**Detected Rogue AP List** Scan

Action	MAC	SSID	Band	Channel	Security	Beacon Interval	Signal
--	--	--	--	--	--	--	--

**Trusted AP List**

Action	MAC	SSID	Band	Channel	Security
--	--	--	--	--	--

**Download/Backup Trusted AP List**

Save Action:  Download (PC to AP)  Backup (AP to PC)

Source File Name:  Browse

File Management:  Replace  Merge Save

## Detect Rogue APs & Move the Rogue APs to the Trusted AP List

Follow the steps below to detect the nearby APs and move the trusted ones to the Trusted AP list.

1. In the **Settings** section, check the box to enable **Rogue AP Detection**. Click **Save**.











This screenshot shows the 'Settings' section of the TP-Link web interface. The 'Rogue AP Detection' checkbox is now checked and labeled 'Enable'. The 'Save' button is visible in the bottom right corner.

**Settings**

Rogue AP Detection:  Enable Save

2. In the **Detected Rogue AP List** section, click **Scan**.

- Wait for a few seconds without any operation. After detection is finished, the detected APs will be displayed in the list.

Detected Rogue AP List							
Action	MAC	SSID	Band	Channel	Security	Beacon Interval	Signal
Known	00:0A:EB:13:7A:FF	TP-LINK_7AFF	2.4	1	ON	100	
Known	00:36:76:26:1F:F2	36	2.4	1	ON	100	
Known	14:75:90:37:D2:EC	quxy-wifi	2.4	6	ON	100	
Known	18:A6:F7:20:02:E0	AD7200	2.4	1	ON	100	
Known	18:CF:5E:00:93:16	123	2.4	1	ON	100	
Known	1C:FA:68:58:B2:12	pingan	2.4	6	ON	100	
Known	20:76:93:31:47:0C	UniIC-2.4	2.4	12	ON	100	
Known	20:DC:E6:55:5A:20	pingan_web	2.4	6	ON	100	
Known	2C:D0:5A:EC:2E:36	LieBaoWiFi860	2.4	11	ON	100	
Known	34:96:72:D4:29:E7	ZYD	2.4	1	ON	100	

The following table introduces the displayed information of the APs:

<b>MAC</b>	Displays the MAC address of the AP.
<b>SSID</b>	Displays the SSID of the AP.
<b>Band</b>	Displays the frequency band the AP is working on.
<b>Channel</b>	Displays the channel the AP is using.
<b>Security</b>	Displays whether the security mode is enabled on the AP.
<b>Beacon Interval</b>	Displays the Beacon Interval value of the EAP. Beacon frames are sent periodically by the AP to announce to the stations the presence of a wireless network. Beacon Interval determines the time interval of the beacon frames sent by the AP device.
<b>Signal</b>	Displays the signal strength of the AP.

- To move the specific AP to the Trusted AP list, click **Known** in the **Action** column. For example, we move the first two APs in the above Detected Rogue AP list to the Trusted AP list.

5. View the trusted APs in the **Trusted AP List** section. To move the specific AP back to the Rogue AP list, you can click **Unknown** in the **Action** column.

Trusted AP List					
Action	MAC	SSID	Band	Channel	Security
Unknown	00:0A:EB:13:7A:FF	TP-LINK_7AFF	2.4	1	ON
Unknown	00:36:76:26:1F:F2	36	2.4	1	ON

## Manage the Trusted AP List

You can download the trusted AP list from your local host to the EAP or backup the current Trusted AP list to your local host.

- **Download the Trusted AP List From the Host**

You can import a trusted AP list which records the MAC addresses of the trusted APs. The AP whose MAC address is in the list will not be detected as a rogue AP.

### Download/Backup Trusted AP List

Save Action:  Download (PC to AP)  Backup (AP to PC)

Source File Name:

File Management:  Replace  Merge

Follow the steps below to import a trusted AP list to the EAP:

1. Acquire the trusted AP list. There are two ways:
  - Backup the list from a EAP. For details, refer to [Backup the Trusted AP List to the Host](#).
  - Manually create a trusted AP list. Create a txt. file, input the MAC addresses of the trusted APs in the format XX:XX:XX:XX:XX:XX and use the Space key to separate each MAC address. Save the file as a **cfg** file.
2. On this page, check the box to choose **Download (PC to AP)**.
3. Click  and select the trusted AP list from your local host.
4. Select the file management mode. Two modes are available: **Replace** and **Merge**. Replace means that the current trusted AP list will be replaced by the one you import. Merge means that the APs in the imported list will be added to the current list with the original APs remained.

5. Click **Save** to import the trusted AP list.

- **Backup the Trusted AP List to the Host**

You can backup the current trusted AP list and save the backup file to the local host.

**Download/Backup Trusted AP List**

---

**Save Action:**       Download (PC to AP)     Backup (AP to PC)

**Save**

Follow the steps below to backup the current trusted AP list:

1. On this page, check the box to choose **Backup (AP to PC)**.
2. Click **Save** and the current trusted AP list will be downloaded to your local host as a **cfg** file.

# 3

## Monitor the Network

This chapter introduces how to monitor the running status and statistics of the wireless network, including:


- *Monitor the EAP*
- *Monitor the SSIDs*
- *Monitor the Clients*



## 3.1 Monitor the EAP

You can view the information of the EAP, including device information, wireless settings, LAN information, client information, LAN traffic and radio traffic.

To monitor the EAP information, go to the **Monitoring > AP** page.

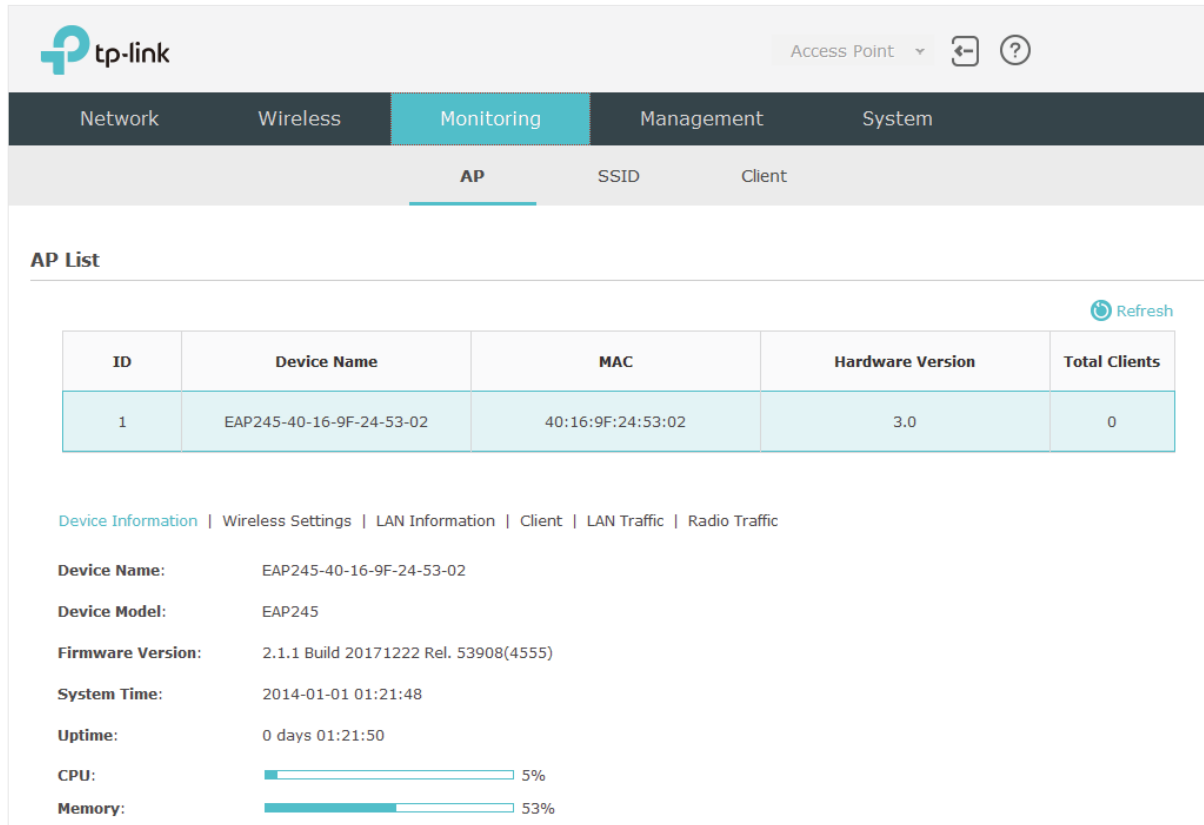

The screenshot shows the TP-Link web interface. At the top, there is a navigation bar with tabs for Network, Wireless, Monitoring (selected), Management, and System. Below this, there are sub-tabs for AP (selected), SSID, and Client. The main content area is titled "AP List" and features a table with the following data:

ID	Device Name	MAC	Hardware Version	Total Clients
1	EAP245-40-16-9F-24-53-02	40:16:9F:24:53:02	3.0	0

Below the table, there are links for "Device Information", "Wireless Settings", "LAN Information", "Client", "LAN Traffic", and "Radio Traffic". The "Device Information" section is expanded, showing the following details:


- Device Name:** EAP245-40-16-9F-24-53-02
- Device Model:** EAP245
- Firmware Version:** 2.1.1 Build 20171222 Rel. 53908(4555)
- System Time:** 2014-01-01 01:21:48
- Uptime:** 0 days 01:21:50
- CPU:** 5% (represented by a progress bar)
- Memory:** 53% (represented by a progress bar)

The AP List displays the following information:

<b>Device Name</b>	Displays the name of the EAP. The name consists of the product model followed with the MAC address of the EAP.
<b>MAC</b>	Displays the MAC address of the EAP.
<b>Total Clients</b>	Displays the number of clients currently connected to the EAP.

## View Device Information

Under this tab, you can view the device information of EAP.

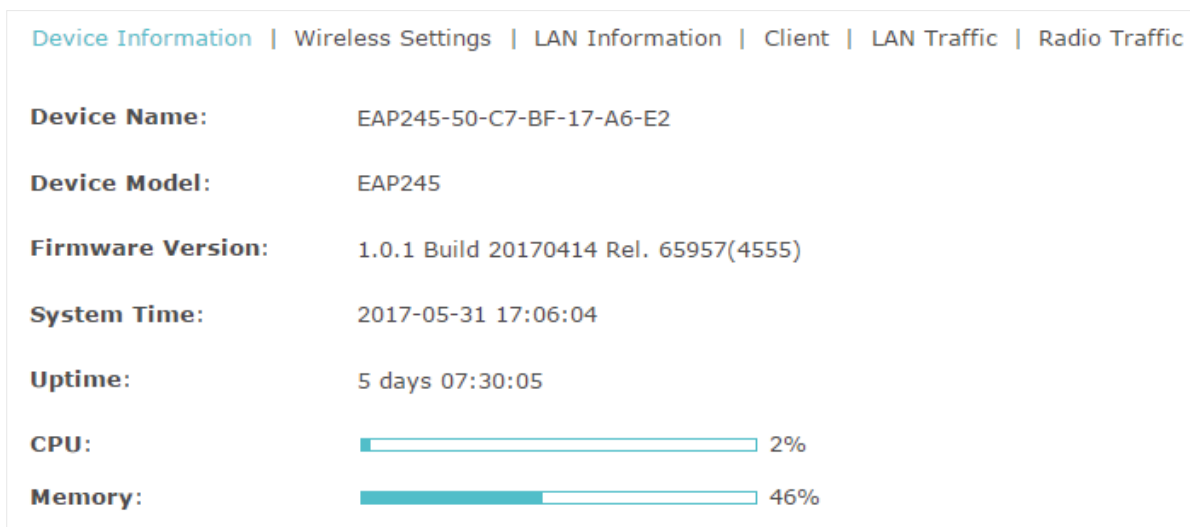

The following device information is displayed:

<b>Device Name</b>	Displays the name of the EAP. The name consists of the product model followed with the MAC address of the EAP.
<b>Device Model</b>	Displays the product model of the EAP.
<b>Firmware Version</b>	Displays the current firmware version the EAP. To update the firmware, you can refer to <a href="#">Update the Firmware</a> .
<b>System Time</b>	Displays the current system time. To configure the system time, you can refer to <a href="#">Configure the System Time</a> .
<b>Uptime</b>	Displays how long the EAP has been working since it starts up.
<b>CPU</b>	Displays the CPU occupancy. If this value is too high, the EAP may work abnormally.
<b>Memory</b>	Displays the memory occupancy.

## View Wireless Settings

Under this tab, you can view the wireless settings of EAP.

### Tips:

To change the wireless settings, you can refer to *Configure the Wireless Parameters*.

Device Information		<a href="#">Wireless Settings</a>		LAN Information		Client		LAN Traffic		Radio Traffic
<a href="#">2.4GHz</a>   5GHz										
<b>Channel/Frequency:</b>	12 / 2467MHz									
<b>Channel Width:</b>	20/40MHz									
<b>IEEE802.11 Mode:</b>	b/g/n mixed									
<b>Max TX Rate:</b>	450.0Mbps									
<b>Transmit Power:</b>	19dBm									

### Note:

- For a dual-band EAP, there are two bands: 2.4GHz and 5GHz. You can click to select a band to view.
- The following figure posted in the introduction takes 2.4GHz as an example.

The following wireless information is displayed:

<a href="#">Channel/Frequency</a>	Displays the channel and frequency which are currently used by the EAP.
<a href="#">Channel Width</a>	Displays the channel width which is currently used by the EAP.
<a href="#">IEEE802.11 Mode</a>	Displays the IEEE802.11 protocol currently used by the EAP.
<a href="#">Max TX Rate</a>	Displays the maximum physical rate of the EAP.

## View LAN Information

Under this tab, you can view the LAN information of EAP.

Device Information		Wireless Settings		<a href="#">LAN Information</a>		Client		LAN Traffic		Radio Traffic
<b>MAC Address:</b>	50-C7-BF-17-A6-E2									
<b>IP Address:</b>	192.168.0.5									
<b>Subnet Mask:</b>	255.255.255.0									
<b>LAN Port:</b>	1000Mbps - FD									

The following LAN information is displayed:

MAC Address	Displays the MAC address of the EAP.
IP Address	Displays the IP address of the EAP.
Subset Mask	Displays the subnet mask of the EAP.
LAN Port	Displays the maximum physical transmission rate and duplex mode of the port. HD means half-duplex and FD means full-duplex.

## View Client Information

Under this tab, you can view the client information of EAP.

Device Information   Wireless Settings   LAN Information   Client   LAN Traffic   Radio Traffic									
ID	MAC	Band	SSID	SNR(dB)	CCQ(%)	Rate (Mbps)	Down (Byte)	Up (Byte)	Active Time
1	20-AB-37-84-9A-E2	2.4GHz	Office_market_2.4GHz	18	100	1.0	43k	46k	0 days 00:00:43

The following client information is displayed:

MAC	Displays the MAC address of the client.
Band	Displays the frequency band the client is working on.
SSID	Displays the SSID the client is connected to.
SNR (dB)	Displays the Signal to Noise Ratio (SNR) of the client. SNR refers to the power ratio between the received wireless signal strength and the environmental noise strength. The bigger SNR value is, the better network performance the device can provide.
CCQ (%)	Displays the wireless Client Connection Quality (CCQ). CCQ refers to the ratio between the current effective transmission bandwidth and the theoretical maximum available bandwidth. CCQ reflects the quality of the actual link. A bigger value means a better utilization of the bandwidth.
Rate (Mbps)	Displays the wireless transmission rate of the client.
Down (Byte)	Displays the client's total downloaded traffic from the EAP since the last connection.
Up (Byte)	Displays the client's total uploaded traffic to the EAP since the last connection.
Active Time	Displays how long the client has been connected to the EAP.

## View LAN Traffic

Under this tab, you can view the LAN traffic of EAP.

Device Information   Wireless Settings   LAN Information   Client   LAN Traffic   Radio Traffic			
<b>Rx Packets:</b>	105955	<b>Tx Packets:</b>	128601
<b>Rx Bytes:</b>	10847763	<b>Tx Bytes:</b>	93498247
<b>Rx Dropped Packets:</b>	0	<b>Tx Dropped Packets:</b>	0
<b>Rx Errors:</b>	0	<b>Tx Errors:</b>	0

The following traffic information of the LAN is displayed:

Rx Packets	Displays the total number of received packets in the LAN since the EAP starts up.
Tx Packets	Displays the total number of sent packets in the LAN since the EAP starts up.
Rx Bytes	Displays the total received traffic in the LAN since the EAP starts up.
Tx Bytes	Displays the total sent traffic in the LAN since the EAP starts up.
Rx Dropped Packets	Displays the total number of the dropped packets which are received by the EAP since it starts up.
Tx Dropped Packets	Displays the total number of the dropped packets which are sent by the EAP since it starts up.
Rx Errors	Displays the total number of the received error packets since the EAP starts up.
Tx Errors	Displays the total number of the sent error packets since the EAP starts up.

## View Radio Traffic

Under this tab, you can view the radio traffic of EAP.

<a href="#">Device Information</a>   <a href="#">Wireless Settings</a>   <a href="#">LAN Information</a>   <a href="#">Client</a>   <a href="#">LAN Traffic</a>   <a href="#">Radio Traffic</a>			
<a href="#">2.4GHz</a>   <a href="#">5GHz</a>			
<b>Rx Packets:</b>	43945726	<b>Tx Packets:</b>	9920997
<b>Rx Bytes:</b>	5608414053	<b>Tx Bytes:</b>	134826
<b>Rx Dropped Packets:</b>	0	<b>Tx Dropped Packets:</b>	0
<b>Rx Errors:</b>	0	<b>Tx Errors:</b>	10


The following traffic information of the radio is displayed:

<b>Rx Packets</b>	Displays the total number of the received packets on the 2.4GHz/5GHz band since the EAP starts up.
<b>Tx Packets</b>	Displays the total number of the sent packets on the 2.4GHz/5GHz band since the EAP starts up.
<b>Rx Bytes</b>	Displays the total received traffic on the 2.4GHz/5GHz band since the EAP starts up.
<b>Tx Bytes</b>	Displays the total sent traffic on the 2.4GHz/5GHz band since the EAP starts up.
<b>Rx Dropped Packets</b>	Displays the total number of the dropped packets which are received on the 2.4GHz/5GHz band since the EAP starts up.
<b>Tx Dropped Packets</b>	Displays the total number of the dropped packets which are sent on the 2.4GHz/5GHz band since the EAP starts up.
<b>Rx Errors</b>	Displays the total number of error packets which are received on the 2.4GHz/5GHz band since the EAP starts up.
<b>Tx Errors</b>	Displays the total number of error packets which are sent on the 2.4GHz/5GHz band since the EAP starts up.

## 3.2 Monitor the SSIDs

You can monitor the SSID information of the EAP.

To monitor the SSID information, go to the **Monitoring > SSID** page.

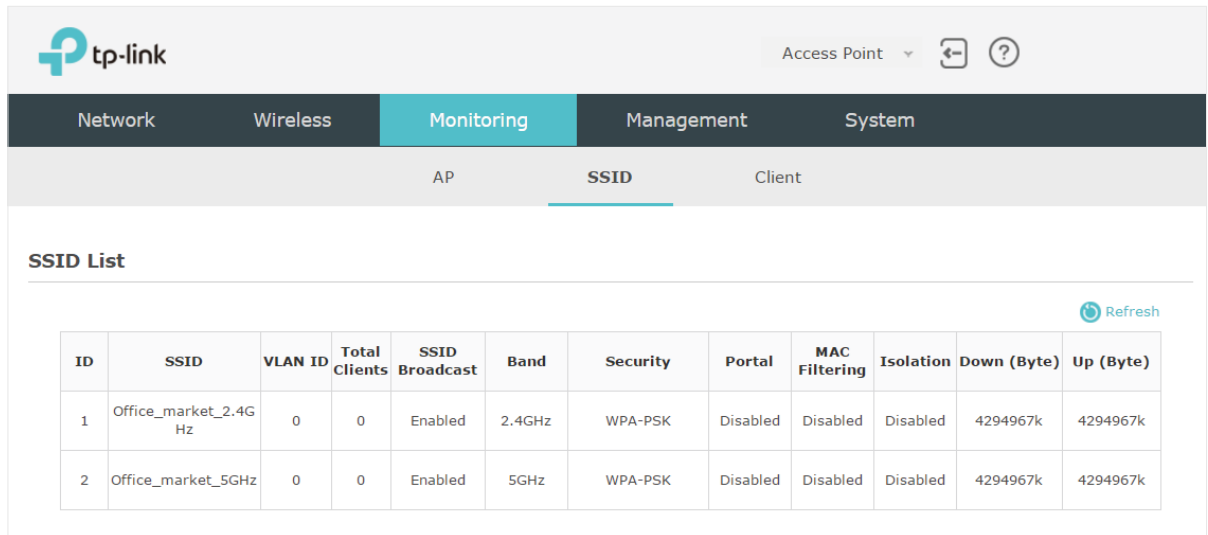

The screenshot shows the TP-Link web interface. At the top, there is a navigation bar with 'tp-link' logo and 'Access Point' dropdown. Below it, a menu bar has 'Monitoring' selected. Under 'Monitoring', there are sub-tabs for 'AP', 'SSID', and 'Client'. The 'SSID List' section is active, showing a table with columns: ID, SSID, VLAN ID, Total Clients, SSID Broadcast, Band, Security, Portal, MAC Filtering, Isolation, Down (Byte), and Up (Byte). A 'Refresh' button is in the top right of the table area.

ID	SSID	VLAN ID	Total Clients	SSID Broadcast	Band	Security	Portal	MAC Filtering	Isolation	Down (Byte)	Up (Byte)
1	Office_market_2.4G Hz	0	0	Enabled	2.4GHz	WPA-PSK	Disabled	Disabled	Disabled	4294967k	4294967k
2	Office_market_5GHz	0	0	Enabled	5GHz	WPA-PSK	Disabled	Disabled	Disabled	4294967k	4294967k

The following table introduces the displayed information of the SSID:

SSID	Displays the SSID name.
VLAN ID	Displays the VLAN ID of the SSID.
Total Clients	Displays the number of clients currently connected to the SSID.
SSID Broadcast	Displays whether the SSID broadcast is enabled.
Band	Displays the frequency band the SSID is currently using.
Security	Displays the security mode of the SSID.
Portal	Displays whether portal authentication is enabled on the SSID.
MAC Filtering	Displays whether MAC filtering is enabled on the SSID.
Isolation	Displays whether SSID isolation is enabled on the SSID.
Down (Byte)	Displays the total download traffic since the SSID starts working.
Up (Byte)	Displays the total upload traffic since the SSID starts working.

## 3.3 Monitor the Clients

You can monitor the information of the clients connected to the EAP.

To monitor the client information, go to the **Monitoring > Client** page.

The screenshot shows the TP-Link web interface. The top navigation bar includes the TP-Link logo and an 'Access Point' dropdown menu. Below this is a main menu with tabs for 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. Under the 'Monitoring' tab, there are sub-tabs for 'AP', 'SSID', and 'Client'. The 'Client' sub-tab is selected, showing two sections: 'User List' and 'Portal Authenticated Guest'. Each section contains a table of client information and a 'Refresh' button.

ID	MAC	Band	Access Point	SSID	SNR (dB)	CCQ(%)	Rate (Mbps)	Down (Byte)	Up (Byte)	Active Time
1	40-33-1A-C0-7A-57	2.4GHz	EAP245-50-c7-bf-17-a6-e2	employee_2.4GHz	55	100	70.2	94k	19k	0 days 00:00:15

ID	MAC	Band	Access Point	SSID	SNR (dB)	CCQ(%)	Rate (Mbps)	Down (Byte)	Up (Byte)	Active Time	Action
1	20-AB-37-84-9A-E2	5GHz	EAP245-50-c7-bf-17-a6-e2	guest_5GHz	55	100	866.7	15k	73k	0 days 00:03:30	Unauthorize

There are two types of clients: users and portal authenticated guests. Users are the clients that connect to the SSID with portal authentication disabled. Guests are the clients that connect to the SSID with portal authentication enabled.

### View the Users

The following table introduces the displayed information of the users.

<b>MAC</b>	Displays the MAC address of the user.
<b>Band</b>	Displays the frequency band the user is working on.
<b>Access Point</b>	Displays the device name of the EAP the user is connected to.
<b>SSID</b>	Displays the SSID the user is connected to.
<b>SNR (dB)</b>	Displays the Signal to Noise Ratio (SNR) of the user. SNR refers to the power ratio between the received wireless signal strength and the environmental noise strength. The bigger SNR value is, the better network performance the device can provide.



CCQ (%)	Displays the wireless Client Connection Quality (CCQ) of the user. CCQ refers to the ratio between the current effective transmission bandwidth and the theoretical maximum available bandwidth. CCQ reflects the quality of the actual link. A bigger value means a better utilization of the bandwidth.
Rate (Mbps)	Displays the wireless transmission rate of the user.
Down (Byte)	Displays the user's total downloaded traffic from the EAP since the last connection.
Up (Byte)	Displays the user's total uploaded traffic to the EAP since the last connection.
Active Time	Displays how long the user has been connected to the EAP.

## View and Manage the Portal Authenticated Guests

The following table introduces the displayed information of the portal authentication guests.

MAC	Displays the MAC address of the user.
Band	Displays the frequency band the user is working on.
Access Point	Displays the device name of the EAP the user is connected to.
SSID	Displays the SSID the user is connected to.
SNR (dB)	Displays the Signal to Noise Ratio (SNR) of the user. SNR refers to the power ratio between the received wireless signal strength and the environmental noise strength. The bigger SNR value is, the better network performance the device can provide.
CCQ (%)	Displays the wireless Client Connection Quality (CCQ) of the user. CCQ refers to the ratio between the current effective transmission bandwidth and the theoretical maximum available bandwidth. CCQ reflects the quality of the actual link. A bigger value means a better utilization of the bandwidth.
Rate (Mbps)	Displays the wireless transmission rate of the user.
Down (Byte)	Displays the user's total downloaded traffic from the EAP since the last connection.
Up (Byte)	Displays the user's total uploaded traffic to the EAP since the last connection.
Active Time	Displays how long the user has been connected to the EAP.

In the **Action** column, you can click **Unauthorize** to delete the authentication information of the guest. To access the internet, the guest needs to log in again.

# 4 **Manage the EAP**


The EAP provides powerful functions of device management and maintenance. This chapter introduces how to manage the EAP, including:

- *Manage System Logs*
- *Configure Web Server*
- *Configure Management Access*
- *Configure Trunk (For EAP330)*
- *Configure LED*
- *Configure Wi-Fi Control (For EAP115-Wall)*
- *Configure SSH*
- *Configure Management VLAN*
- *Configure SNMP*

## 4.1 Manage System Logs

System logs record information about hardware, software as well as system issues and monitors system events. With the help of system log, you can get informed of system running status and detect the reasons for failure.

To manage system logs, go to the **Management > System Log** page.

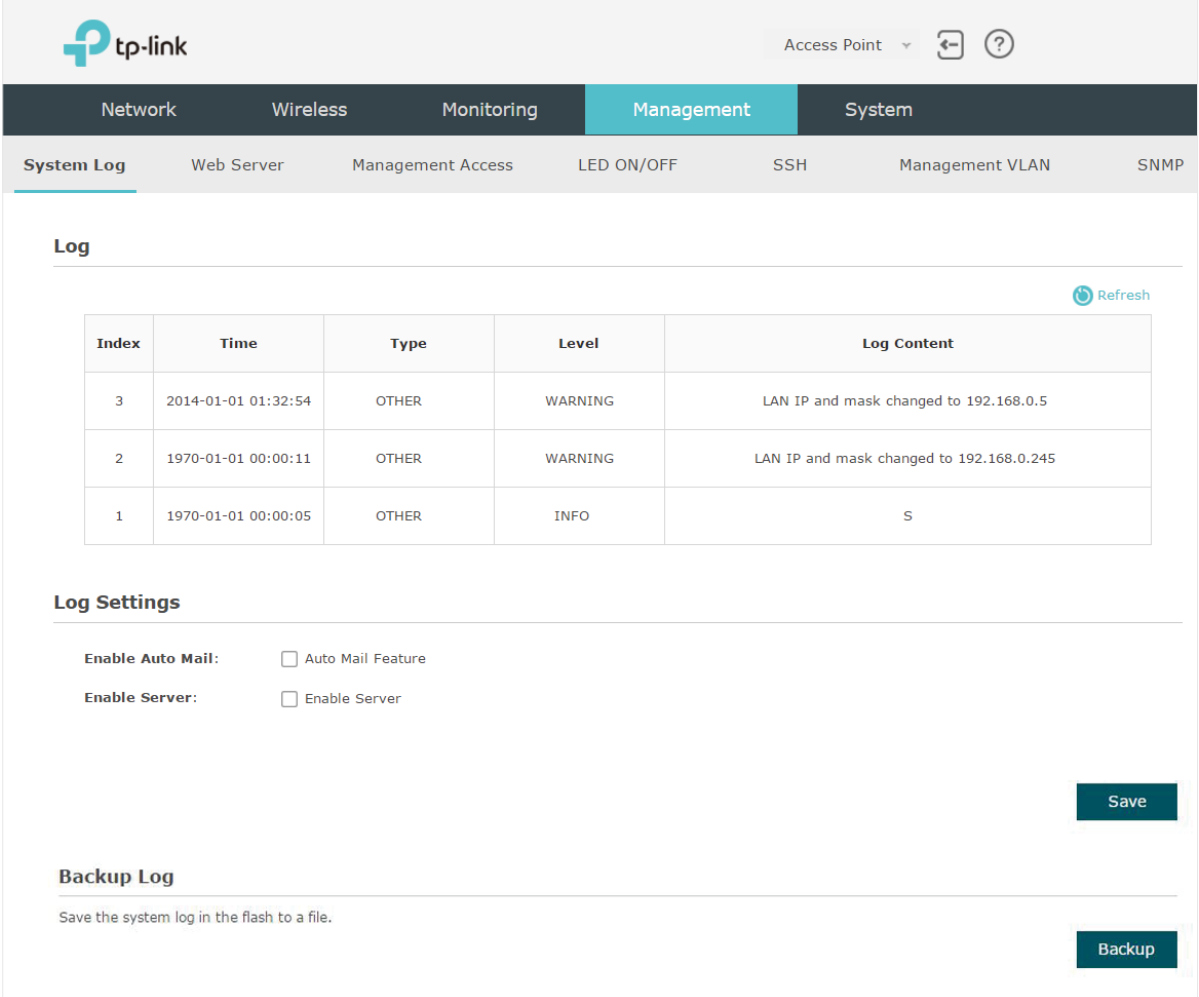

The screenshot shows the TP-Link web interface for managing system logs. The navigation menu includes Network, Wireless, Monitoring, Management (selected), and System. The sub-menu includes System Log (selected), Web Server, Management Access, LED ON/OFF, SSH, Management VLAN, and SNMP. The main content area is titled "Log" and features a "Refresh" button. Below the title is a table with the following data:


Index	Time	Type	Level	Log Content
3	2014-01-01 01:32:54	OTHER	WARNING	LAN IP and mask changed to 192.168.0.5
2	1970-01-01 00:00:11	OTHER	WARNING	LAN IP and mask changed to 192.168.0.245
1	1970-01-01 00:00:05	OTHER	INFO	S

Below the table is the "Log Settings" section, which includes two options: "Enable Auto Mail:" with an unchecked checkbox for "Auto Mail Feature", and "Enable Server:" with an unchecked checkbox for "Enable Server". A "Save" button is located at the bottom right of this section. The "Backup Log" section is below, with the instruction "Save the system log in the flash to a file." and a "Backup" button at the bottom right.

On this page, you can view the system logs and configure the way of receiving system logs. For EAP320/EAP330/EAP225, you can also backup the system logs to your local host.

## View System Logs

In the **Log** section, you can click  **Refresh** to refresh the logs and view them in the table.

**Log**  Refresh

Index	Time	Type	Level	Log Content
3	2014-01-01 01:32:54	OTHER	WARNING	LAN IP and mask changed to 192.168.0.5
2	1970-01-01 00:00:11	OTHER	WARNING	LAN IP and mask changed to 192.168.0.245
1	1970-01-01 00:00:05	OTHER	INFO	S

## Configure the Way of Receiving Logs

In the **Log Settings** section, you can configure the ways of receiving system logs.

**Log Settings**

**Enable Auto Mail:**  Auto Mail Feature

**Enable Server:**  Enable Server

**Save**

Follow the steps below to configure this feature:

1. Check the corresponding box to enable one or more ways of receiving system logs, and configure the related parameters. Two ways are available: **Auto Mail** and **Server**.

- **Auto Mail**

If Auto Mail is configured, system logs will be sent to a specified mailbox. Check the box to enable the feature and configure the related parameters.

**Note:**

SSL encryption is not currently supported.

<b>Enable Auto Mail:</b>	<input checked="" type="checkbox"/> Auto Mail Feature
<b>From:</b>	<input type="text"/>
<b>To:</b>	<input type="text"/>
<b>SMTP Server:</b>	<input type="text"/>
<b>Enable Authentication:</b>	<input type="checkbox"/> Enable Authentication
<b>User Name:</b>	<input type="text"/>
<b>Password:</b>	<input type="text"/>
<b>Confirm Password:</b>	<input type="text"/>
<b>Time Mode:</b>	<input checked="" type="radio"/> Fixed Time <input type="radio"/> Period Time
<b>Fixed Time:</b>	00 : 00 (HH:MM)

The following table introduces how to configure these parameters:

From	Enter the sender's E-mail address.
To	Enter the receiver's E-mail address.
SMTP Server	Enter the IP address of the sender's SMTP server. <b>Note:</b> At present, the domain name of SMTP server is not supported in this field.
Enable Authentication	If the sender's mailbox is configured with You can check the box to enable mail server authentication. Enter the sender's username and password.
Time Mode	Select Time Mode: <b>Fixed Time</b> or <b>Period Time</b> . Fixed Time means that the system logs will be sent at the specific time every day. Period Time means that the system logs will be sent at the specific time interval.
Fixed Time	If you select <b>Fixed Time</b> , specify a fixed time to send the system log mails. For example, 08:30 indicates that the mail will be sent at 8:30 am everyday.
Period Time	If you select <b>Period Time</b> , specify a period time to regularly send the system log mail. For example, 6 indicates that the mail will be sent every six hours.

## ■ Server

If Server is configured, system logs will be sent to the specified system log server, and you can use the syslog software to view the logs on the server.

Enable this feature and enter the IP address and port of the system log server.

<b>Enable Server:</b>	<input checked="" type="checkbox"/> Enable Server
<b>System Log Server IP:</b>	<input type="text" value="0.0.0.0"/>
<b>System Log Server Port:</b>	<input type="text" value="514"/>

2. Click **Save**.

## Backup Logs (For EAP320/EAP330/EAP225)

In the Backup Log section, you can click **Backup** to backup the current system logs into a file and save the file on your local host.

**Backup Log**

Save the system log in the flash to a file.

**Backup**

## 4.2 Configure Web Server

With the web server, you can log in to the management web page of the EAP. You can configure the web server parameters of the EAP according to your needs.

To configure Web Server, go to the **Management > Web Server** page.

The screenshot shows the TP-Link web management interface. At the top, there is a navigation bar with the TP-Link logo and a dropdown menu set to 'Access Point'. Below this is a main navigation menu with tabs for 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. Under the 'Management' tab, there are sub-tabs for 'System Log', 'Web Server', 'Management Access', 'LED ON/OFF', 'SSH', 'Management VLAN', and 'SNMP'. The 'Web Server' sub-tab is selected. The main content area is titled 'Web Server' and contains three configuration fields: 'Secure Server Port' with a value of 443, 'Server Port' with a value of 80, and 'Session Timeout' with a value of 15 minutes. A 'Note' section below these fields states: 'Please enter the EAP's IP address to access the web-based configuration utility via an HTTPS connection.' A 'Save' button is located at the bottom right of the configuration area.

Follow the steps below to configure Web Server:

1. Refer to the following table to configure the parameters:

Secure Server Port	Designate a secure server port for web server in HTTPS mode. By default the port is 443.
Server Port	Designate a server port for web server in HTTP mode. By default the port is 80.
Session Timeout	Set the session timeout. If you do nothing with the web page within the timeout, the system will log out automatically. You can log in again if you want to go back to web page.

2. Click **Save**.

## 4.3 Configure Management Access

By default, all hosts in the LAN can log in to the management web page of the EAP with the correct username and password. To control the hosts' access to the web page of the EAP, you can specify the MAC addresses of the hosts that are allowed to access the web page, and other hosts without MAC addresses specified are not allowed to access the web page.

To configure Management Access, go to the **Management > Management Access** page.

The screenshot shows the TP-Link web interface for configuring Management Access. The navigation bar includes 'Network', 'Wireless', 'Monitoring', 'Management' (selected), and 'System'. The 'Management' section has sub-tabs: 'System Log', 'Web Server', 'Management Access' (selected), 'LED ON/OFF', 'SSH', 'Management VLAN', and 'SNMP'. The 'Access Control Management' section has a 'MAC Authentication' checkbox checked and labeled 'Enable'. Below this are four input fields for MAC addresses: MAC1 (00-19-66-35-E1-B0), MAC2 (AA-BB-CC-DD-EE-FF), MAC3 (AA-BB-CC-DD-EE-FF), and MAC4 (AA-BB-CC-DD-EE-FF). There is an 'Add PC's MAC Address' button and a 'Save' button at the bottom right.

Follow the steps below to configure Management Access on this page:

1. Check the box to enable **MAC Authentication**.
2. Specify one or more MAC addresses in the **MAC1/MAC2/MAC3/MAC4** fields. Up to four MAC addresses can be added.

3. Click **Save**.

**Tips:**

- You can click **Add PC's MAC Address** to quickly add the MAC address of your current logged-in host, .
- Verify the MAC addresses carefully. Once the settings are saved, only the hosts in the MAC address list can access the web page of the EAP.
- If you cannot log in to the web page after saving the wrong configuration, you can reset the EAP to the factory defaults and use the default username and password (both admin) to log in.


## 4.4 Configure Trunk (For EAP330)

The trunk function can bundle multiple Ethernet links into a logical link to increase bandwidth and improve network reliability. The EAP330 has two 1000Mbps Ethernet ports. If the Trunk function is enabled and the ports are in the speed of 1000Mbps Full Duplex, the whole bandwidth of the trunk link is up to 4Gbps (2000Mbps \* 2).

**Note:**

The trunk feature here refers to static trunk. Make sure that the trunk mode of the peer is static.

To configure Trunk, go to the **Management > Trunk** page.

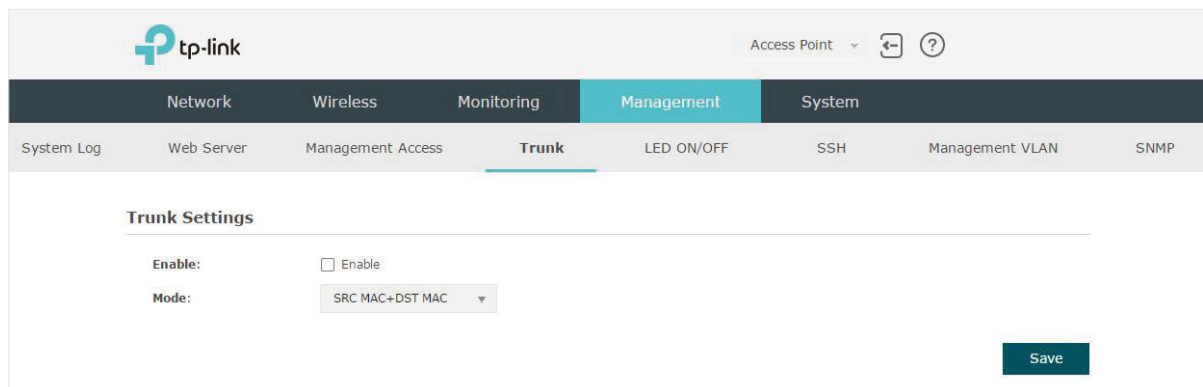

Follow the steps below to configure Trunk on this page:

1. Check the box to enable **Trunk**.
2. Select the trunk algorithm mode from the drop-down list. Three options are available: **SRC MAC+DST MAC**, **DST MAC** and **SRC MAC**. Based on the selected algorithm mode, the EAP determines which physical port is used to send out the received packet.
  - With **SRC MAC+DST MAC** selected, the EAP determines the outgoing port based on both the source and destination MAC addresses of the packet.
  - With **DST MAC** selected, the EAP determines the outgoing port based on the destination MAC address of the packet.




- With **SRC MAC** selected, the EAP determines the outgoing port based on the source MAC address of the packet.

3. Click **Save**.

## 4.5 Configure LED

You can turn on or off the LED light of the EAP.

To configure LED, go to the **Management > LED ON/OFF** page.

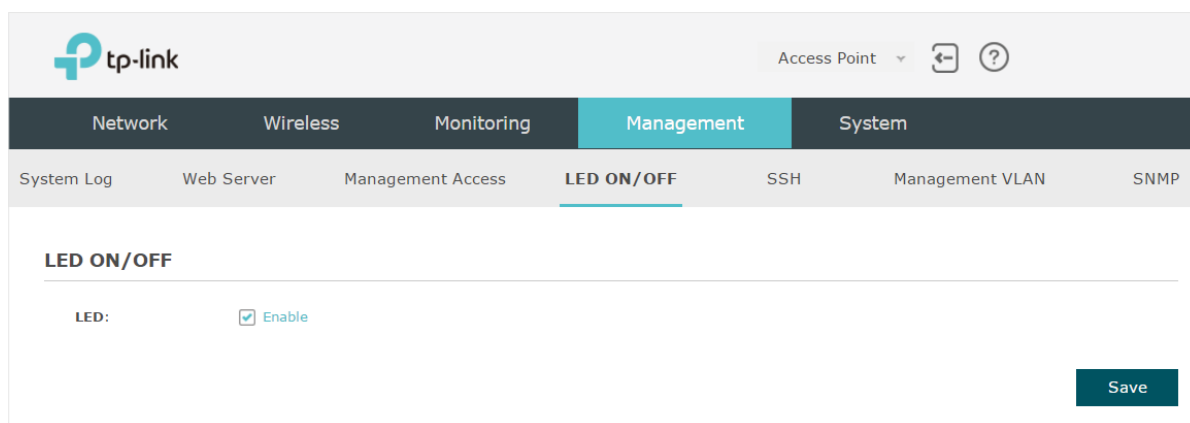


Check the box to turn on or turn off the LED light of the EAP, and click **Save**.

## 4.6 Configure Wi-Fi Control (For EAP115-Wall)

EAP115-Wall has an LED/Wi-Fi button on the front panel. With Wi-Fi Control enabled, you can press the button to turn on or off both of the Wi-Fi and LED at the same time.

To configure Wi-Fi Control, go to the **Management > Wi-Fi Control** page.

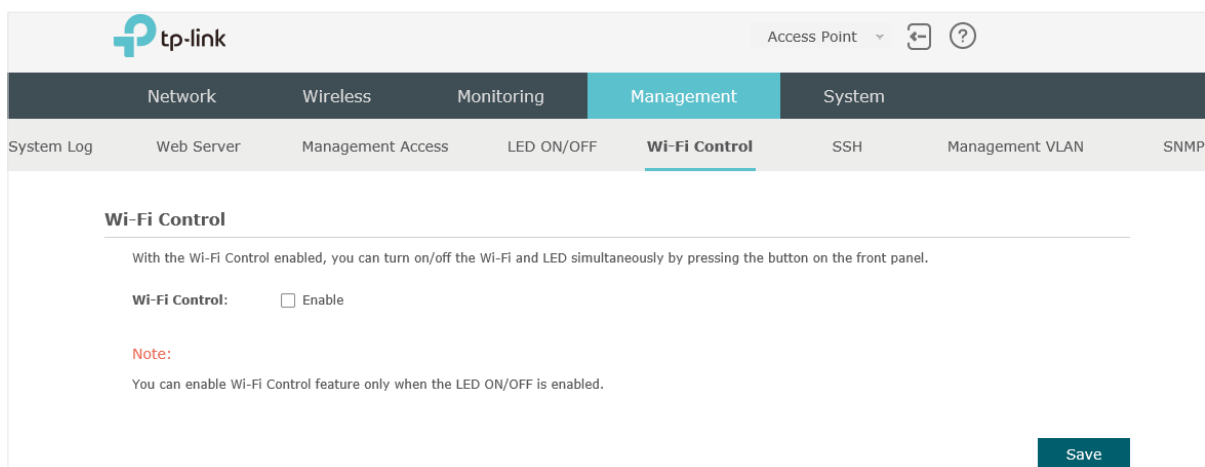

Check the box to enable Wi-Fi Control and click **Save**.


**Note:**

You can enable Wi-Fi Control only when the option **LED ON/OFF** is enabled.

## 4.7 Configure SSH

If you want to remotely log in to the EAP via SSH, you can deploy an SSH server on your network and configure the SSH feature on the EAP.

To configure SSH, go to the **Management > SSH** page.

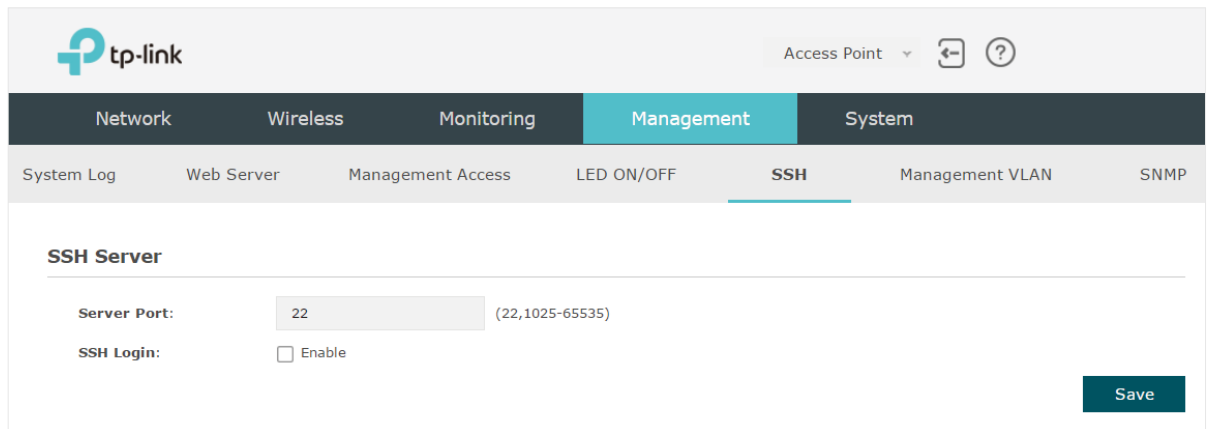

The screenshot shows the TP-Link web interface for configuring SSH. The top navigation bar includes 'Network', 'Wireless', 'Monitoring', 'Management' (selected), and 'System'. Below this, there are sub-menus: 'System Log', 'Web Server', 'Management Access', 'LED ON/OFF', 'SSH' (selected), 'Management VLAN', and 'SNMP'. The main content area is titled 'SSH Server' and contains the following configuration options:

- Server Port:** A text input field containing '22', with a range '(22,1025-65535)' displayed to its right.
- SSH Login:** A checkbox labeled 'Enable' which is currently unchecked.

A 'Save' button is located at the bottom right of the configuration area.

Follow the steps below to configure SSH on this page:

1. Enter the port number of the SSH server.
2. Check the box to enable **SSH Login**. By default, it is disabled.
3. Click **Save**.

## 4.8 Configure Management VLAN

Management VLAN provides a safer method to manage the EAP. With Management VLAN enabled, only the hosts in the Management VLAN can access the web page of the EAP. Since most hosts cannot process VLAN TAGs, you can connect the management host to the network via a switch, and set up correct VLAN settings for the switches on the network to ensure the communication between the host and the EAP in the Management VLAN.

To configure Management VLAN, go the **Management > Management VLAN** page.

tp-link Access Point

Network Wireless Monitoring **Management** System

System Log Web Server Management Access LED ON/OFF SSH **Management** SNMP

**Management VLAN** VLAN

Management VLAN:  Enable

Management VLAN ID:  (1-4094)

Save

Follow the steps below to configure Management VLAN on this page:

1. Check the box to enable **Management VLAN**.
2. Specify the VLAN ID of the management VLAN. Only the hosts in the Management VLAN can log in to the EAP via the Ethernet port.
3. Click **Save**.

## 4.9 Configure SNMP

The EAP can be configured as an SNMP agent and work together with the SNMP manager. Once the EAP has become an SNMP agent, it is able to receive and process request messages from the SNMP manager. At present, the EAP supports SNMP v1 and v2c.

To configure the EAP as an SNMP agent, go to the **Management > SNMP** page.

tp-link Access Point

Network Wireless Monitoring Management System

System Log Web Server Management Access LED ON/OFF SSH Management VLAN **SNMP**

**SNMP Agent**

SNMP Agent:  Enable

SysContact:

SysName:

SysLocation:

Get Community:

Get Source:

Set Community:

Set Source:

Save

Follow the steps below to complete the configuration on this page:

1. Check the box to enable **SNMP Agent**.
2. Refer to the following table to configure the required parameters:

<b>SysContact</b>	Enter the textual identification of the contact person for this managed node.
<b>SysName</b>	Enter an administratively-assigned name for this managed node.
<b>SysLocation</b>	Enter the physical location of this managed node.
<b>Get Community</b>	Community refers to a host group aiming at network management. Get Community only has the read-only right of the device's SNMP information. The community name can be considered a group password. The default setting is public.
<b>Get Source</b>	Defines the IP address (for example, 10.10.10.1) for management systems that can serve as Get Community to read the SNMP information of this device. The default is 0.0.0.0, which means all hosts can read the SNMP information of this device.
<b>Set Community</b>	Set Community has the read and write right of the device's SNMP information. Enter the community name that allows read/write access to the device's SNMP information. The community name can be considered a group password. The default setting is private.
<b>Set Source</b>	Defines the IP address (for example, 10.10.10.1) for management systems that can serve as Set Community to read and write the SNMP information of this device. The default is 0.0.0.0, which means all hosts can read and write the SNMP information of this device.

3. Click **Save**.

**Note:**

Defining community can allow management systems in the same community to communicate with the SNMP Agent. The community name can be seen as the shared password of the network hosts group. Thus, for the security, we recommend that modify the default community name before enabling the SNMP Agent service. If the field of community is blank, the SNMP Agent will not respond to any community name.

# 5 **Configure the System**

This chapter introduces how to configure the system of the EAP, including:

- *Configure the User Account*
- *Configure the System Time*
- *Reboot and Reset the EAP*
- *Backup and Restore the Configuration*
- *Update the Firmware*


## 5.1 Configure the User Account

Every EAP device has a user account, which is used to log in to the management page of the EAP. When you start the EAP at the first time, the username and password of the user account are both admin. After the first login, the system will require you to set a new username and a new password for the user account. And then you can use the new user account to log in to the EAP. Also, you can change your user account as needed.

### Tips:

Please remember your user account well. If you forget it, reset the EAP to the factory defaults and log in with the default user account (username and password are both admin).

To configure the user account, go to **System > User Account** page.

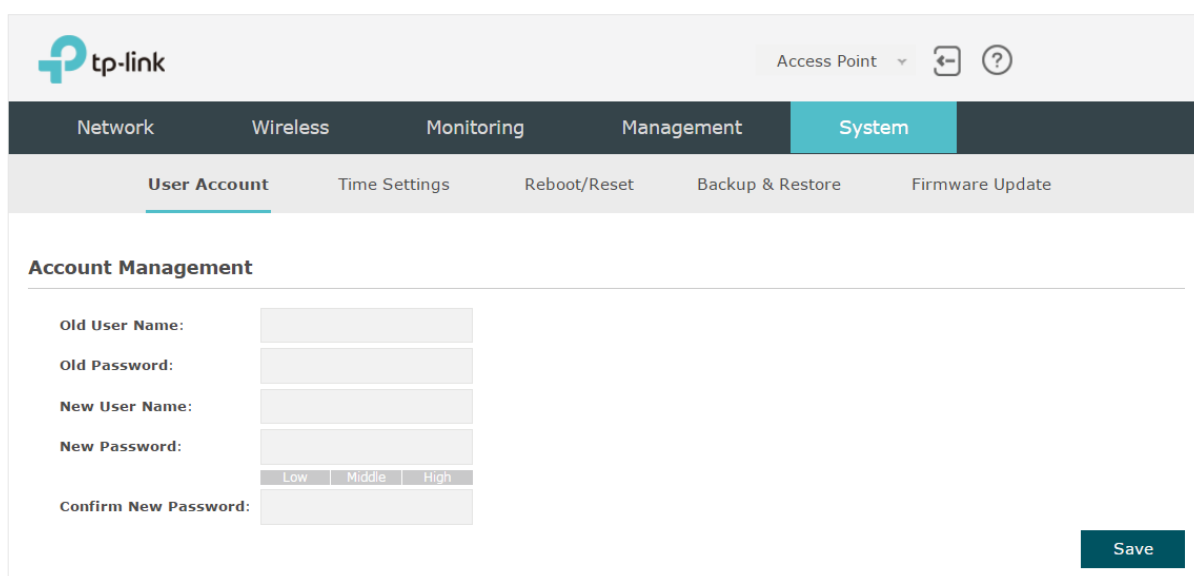

The screenshot shows the TP-Link management interface. At the top, there is a navigation bar with the TP-Link logo on the left and 'Access Point' with a dropdown arrow, a back arrow, and a help icon on the right. Below this is a main menu with tabs for 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. The 'System' tab is selected and highlighted in teal. Under the 'System' tab, there are sub-tabs: 'User Account', 'Time Settings', 'Reboot/Reset', 'Backup & Restore', and 'Firmware Update'. The 'User Account' sub-tab is selected and highlighted in teal. The main content area is titled 'Account Management' and contains the following fields:

- Old User Name:
- Old Password:
- New User Name:
- New Password:
- Confirm New Password:

Below the 'New Password' field, there are three buttons labeled 'Low', 'Middle', and 'High' to indicate password strength. A 'Save' button is located at the bottom right of the form.

Follow the steps below to change your user account on this page:

1. Enter the old username and old password of your user account.
2. Specify a new username and a new password for your user account. The system will automatically detect the strength of your entered password. For security, we recommend that you set a password with high strength.
3. Retype the new password.
4. Click **Save**.

## 5.2 Configure the System Time

System time is the standard time for Scheduler and other time-based functions. The EAP supports the basic system time settings and the Daylight Saving Time (DST) feature.

To configure the system time, go to the **System > Time Settings** page.

The screenshot shows the TP-Link web interface. At the top, there is a navigation bar with the TP-Link logo on the left and 'Access Point' with a dropdown arrow and two icons on the right. Below this is a main menu with tabs for 'Network', 'Wireless', 'Monitoring', 'Management', and 'System'. The 'System' tab is selected and highlighted in teal. Underneath the main menu is a sub-menu with 'User Account', 'Time Settings', 'Reboot/Reset', 'Backup & Restore', and 'Firmware Update'. The 'Time Settings' sub-menu item is highlighted with a teal underline.

The 'Time Settings' section contains the following fields and buttons:

- Time zone:** A dropdown menu showing '(GMT+08:00) Beijing, Hong Kong, Perth, Singapore'.
- Date:** A text input field containing '06/01/2017' and a label 'MM/DD/YYYY'.
- Time:** Three dropdown menus for hours, minutes, and seconds, showing '14', '36', and '21' respectively, with a label '(HH/MM/SS)'.
- Primary NTP Server:** A text input field with '(optional)' to its right.
- Secondary NTP Server:** A text input field with '(optional)' to its right.
- Two buttons: 'Get GMT' and 'Synchronize with PC'.
- A 'Save' button in a teal box at the bottom right.

The 'Daylight Saving' section contains the following fields and buttons:

- Daylight Saving:** A checkbox labeled 'Enable' which is currently unchecked.
- Mode:** Three radio buttons: 'Predefined Mode' (selected), 'Recurring Mode', and 'Date Mode'.
- Predefine Country:** A dropdown menu showing 'European'.
- A 'Save' button in a teal box at the bottom right.

The following two sections introduce how to configure the basic system time settings and the Daylight Saving Time feature.

## Configure the System Time

In the **Time Settings** section, you can configure the system time. There are three methods to set the system time: *Set the System Time Manually*, *Acquire the System Time From an NTP Server*, and *Synchronize the System Time with PC's Clock*.

This is a detailed view of the 'Time Settings' configuration page. It includes the same fields and buttons as described in the previous screenshot, such as the time zone dropdown, date and time input fields, NTP server fields, and the 'Get GMT', 'Synchronize with PC', and 'Save' buttons.

Determine the way of setting the system time and follow the steps below to complete the configurations:

- **Set the System Time Manually**

To set the system time manually, follow the steps below:

1. Configure the following three options on the page: **Time Zone**, **Date** and **Time**.

<b>Time Zone</b>	Select your time zone from the drop-down list. Here GMT means Greenwich Mean Time.
<b>Date</b>	Specify the current date in the format MM/DD/YYYY. MM means month, DD means day and YYYY means year.  For example: 06/01/2017.
<b>Time</b>	Specify the current time in the format HH/MM/SS. HH means hour, MM means minute and SS means second.  It uses 24-hour system time. For example: 14:36:21.

2. Click **Save**.

**Note:**

The system time set manually will be lost after the EAP is rebooted.

- **Acquire the System Time From an NTP Server**

To get the system time from an NTP server, follow the steps below:


1. Build an NTP server on your network and make sure that it is reachable by the EAP. Or you can simply find an NTP server on the internet and get its IP address.

**Note:**

If you use an NTP server on the internet, make sure that the gateway address is set correctly on the EAP. Otherwise, the EAP cannot get the system time from the NTP server successfully. To set the gateway address, refer to [Configure the IP Address of the EAP](#).

2. Specify the NTP server for the EAP. If you have two NTP servers, you can set one of them as the primary NTP server, and the other as the secondary NTP server. Once the primary NTP server is down, the EAP can get the system time from the secondary NTP server.

<b>Primary NTP Server</b>	Enter the IP address of the primary NTP server.  <b>Note:</b> If you have only one NTP server on your network, enter the IP address of the NTP server in this field.
<b>Secondary NTP Server</b>	Enter the IP address of the secondary NTP server.

3. Click the button  and the acquired system time will be displayed in the **Date** and **Time** fields.



4. Click **Save**.

- **Synchronize the System Time with PC's Clock**

To synchronize the system time with the clock of your currently logged-in host, follow the steps below:


1. Click the button **Synchronize with PC** and the synchronized system time will be displayed in the **Date** and **Time** fields.
2. Click **Save**.

**Note:**

The system time synchronized with PC's clock will be lost after the EAP is rebooted.

## Configure Daylight Saving Time

Daylight saving time is the practice of advancing clocks during summer months so that evening daylight lasts longer, while sacrificing normal sunrise times. The EAP provides daylight saving time configuration.

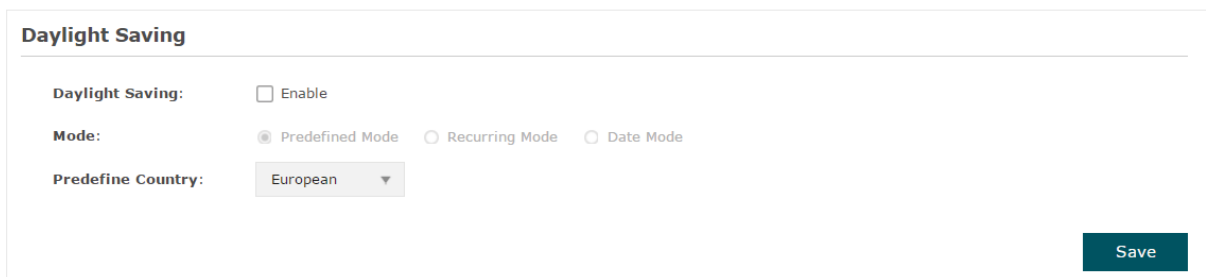


The screenshot shows a configuration panel titled "Daylight Saving". It contains the following elements: a "Daylight Saving:" label with an unchecked "Enable" checkbox; a "Mode:" label with three radio button options: "Predefined Mode" (which is selected), "Recurring Mode", and "Date Mode"; and a "Predefine Country:" label with a dropdown menu currently set to "European". A "Save" button is located in the bottom right corner of the panel.

Follow the steps below to configure daylight saving time:

1. Check the box to enable **Daylight Saving**.
2. Select the mode of daylight saving time. Three modes are available: **Predefined Mode**, **Recurring Mode** and **Date Mode**.
3. Configure the related parameters of the selected mode.

- **Predefined Mode**

If you select Predefined Mode, choose your region from the drop-down list and the EAP will use the predefined daylight saving time of the selected region.

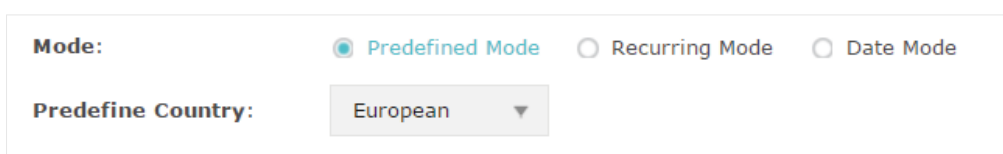

This close-up screenshot shows the "Mode:" section where "Predefined Mode" is selected with a blue radio button. Below it, the "Predefine Country:" dropdown menu is set to "European".

There are four regions provided: **USA**, **European**, **Australia** and **New Zealand**. The following table introduces the predefined daylight saving time of each region.

<b>USA</b>	From 2: 00 a.m. on the Second Sunday in March to 2:00 a.m. on the First Sunday in November.
<b>European</b>	From 1: 00 a.m. on the Last Sunday in March to 1:00 a.m. on the Last Sunday in October.
<b>Australia</b>	From 2:00 a.m. on the First Sunday in October to 3:00 a.m. on the First Sunday in April.
<b>New Zealand</b>	From 2: 00 a.m. on the Last Sunday in September to 3:00 a.m. on the First Sunday in April.

### ■ Recurring Mode

If you select Recurring Mode, manually specify a cycle time range for the daylight saving time of the EAP. This configuration will be used every year.

**Mode:**  Predefined Mode  Recurring Mode  Date Mode

**Time Offset:**  minutes (1-180)

**Start:**   in  at  :

**End:**   in  at  :

The following table introduces how to configure the cycle time range.

<b>Time Offset</b>	Specify the time to set the clock forward by.
<b>Start</b>	Specify the start time of daylight saving time. The interval between the start time and end time should be more than 1 day and less than 1 year (365 days).
<b>End</b>	Specify the end time of daylight saving time. The interval between the start time and end time should be more than 1 day and less than 1 year (365 days).

### ■ Date Mode

If you select Date Mode, manually specify an absolute time range for the daylight saving time of the EAP. This configuration will be used only once.

**Mode:**  Predefined Mode  Recurring Mode  Date Mode

**Time Offset:** 60 minutes (1-180)

**Start:** 2014 - Mar - 01 at 01 : 00

**End:** 2014 - Oct - 01 at 01 : 00

The following table introduces how to configure the absolute time range.


<b>Time Offset</b>	Specify the time to set the clock forward by.
<b>Start</b>	Specify the start time of daylight saving time. The interval between the start time and end time should be more than 1 day and less than 1 year (365 days).
<b>End</b>	Specify the end time of daylight saving time. The interval between the start time and end time should be more than 1 day and less than 1 year (365 days).

4. Click **Save**.

## 5.3 Reboot and Reset the EAP

You can reboot and reset the EAP according to your need.

To reboot and reset the EAP, go to the **System > Reboot&Reset** page.

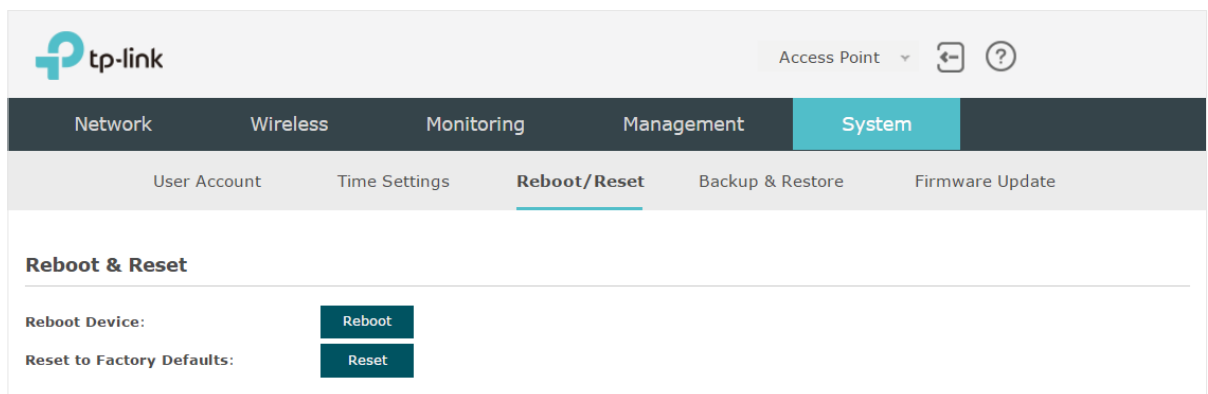

- To reboot the EAP, click the **Reboot** button , and the EAP will be rebooted automatically. Please wait without any operation.
- To reset the EAP, click the **Reset** button , and the EAP will be reset to the factory defaults automatically. Please wait without any operation.


### Note:

After reset, all the current configuration of the EAP will be lost. We recommend that you check whether you have any configuration that needs to be backed up before resetting the EAP.

## 5.4 Backup and Restore the Configuration

You can save the current configuration of the EAP as a backup file and save the file to your host. And if needed, you can use the backup file to restore the configuration. We recommend that you backup the configuration before resetting or upgrading the EAP.

To backup and restore the configuration, go to the **System > Backup&Restore** page.

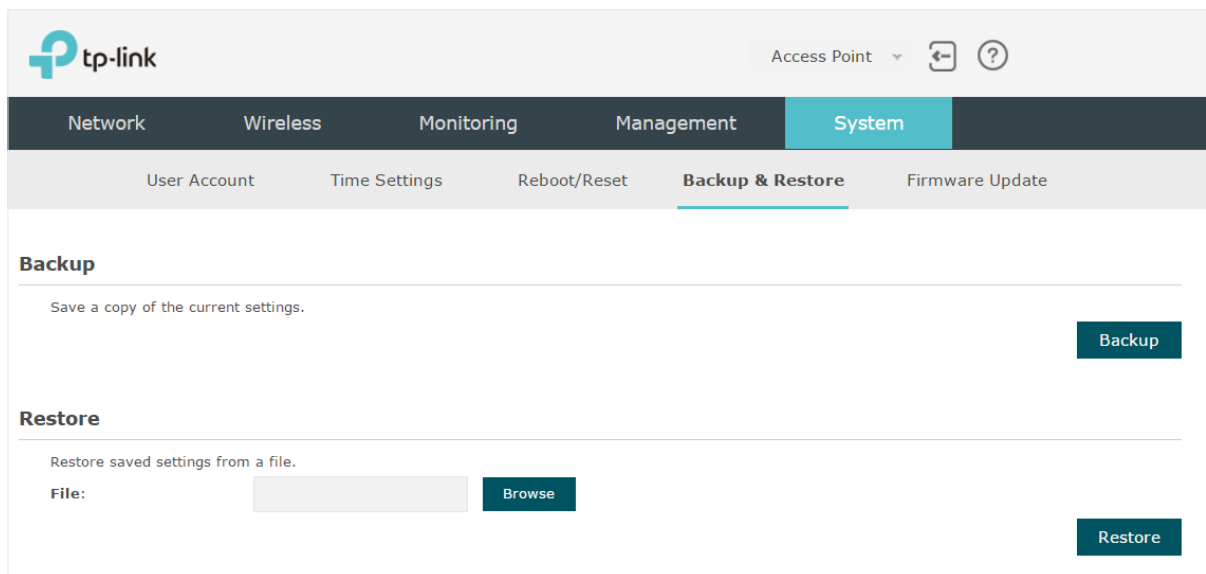


The screenshot shows the TP-Link web interface. At the top left is the TP-Link logo. At the top right, it says "Access Point" with a dropdown arrow, a refresh icon, and a help icon. Below this is a navigation bar with tabs: Network, Wireless, Monitoring, Management, and System (which is highlighted in blue). Under the System tab, there are sub-tabs: User Account, Time Settings, Reboot/Reset, Backup & Restore (which is highlighted with a blue underline), and Firmware Update. The main content area is divided into two sections. The "Backup" section has the text "Save a copy of the current settings." and a blue "Backup" button on the right. The "Restore" section has the text "Restore saved settings from a file." and a "File:" label followed by a text input field and a blue "Browse" button. A blue "Restore" button is located at the bottom right of the Restore section.

- To backup the configuration, click the button **Backup** in the Backup section, and the backup file will be saved to the host automatically.
- To restore the configuration, click the button **Browse** in the Restore section and choose the backup file from the host. Then click the button **Restore** to restore the configuration.

## 5.5 Update the Firmware

We occasionally provide the firmware update files for the EAP products on our official website. To get new functions of the EAP, you can check our official website and download the update files to update the firmware of your EAP.

To update the firmware, go to the **System > Firmware Update** page.

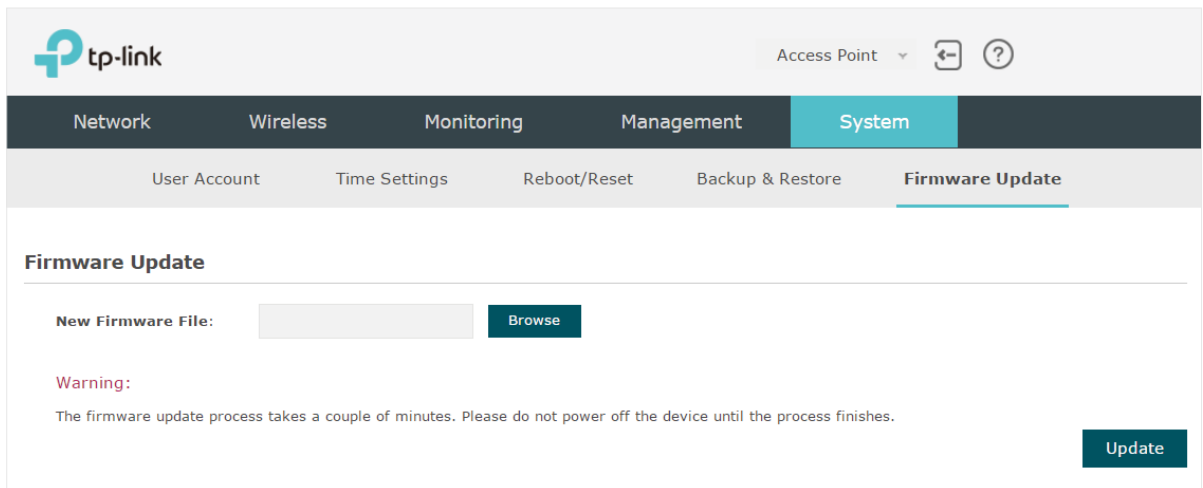

Follow the steps below to update the firmware of your EAP:

1. Go to our website [www.tp-link.com](http://www.tp-link.com) and search your EAP model. Download the proper firmware file on the support page of the EAP.
2. Click the button **Browse**, locate and choose the correct firmware file from your host.
3. Click the button **Update** to update the firmware of the EAP. After updated, the EAP will be rebooted automatically.

**Note:**

The update process takes several minutes. To avoid damage to the EAP, please wait without any operation until the update is finished.

# 6

## Application Example

This chapter provides an application example about how to establish and manage a EAP wireless network:

A restaurant wants to provide the wireless internet access for the employees and guests. The restaurant now has a router, a switch, a dual-band EAP and a computer. Follow the steps below to establish the wireless network:

1. *Determine the Network Requirements*
2. *Build the Network Topology*
3. *Log in to the EAP*
4. *Configure the EAP*
5. *Test the Network*


## 6.1 Determine the Network Requirements

Before starting to build the network, we need to first analyze and determine the network requirements. In this restaurant example, the network requirements are as follows:

- On both 2.4GHz and 5GHz bands, there are two SSIDs needed: one for the restaurant employees and one for the guests.
- In order to advertise the restaurant, the Portal feature needs to be configured on the SSIDs for the guests. In this way, the guests who have passed the portal authentication will be redirected to the restaurant's official website <http://www.restaurant1.com>.
- The employees of the restaurant can use the correct password to access the internet and do not need to pass the portal authentication. For security, the SSIDs for the employees should be encrypted with WPA2-PSK.
- To reduce power consumption, the Scheduler feature needs to be configured. The radio should operate only during the working time (9:00 am to 22:00 pm).

## 6.2 Build the Network Topology

Build the network topology as the following figure shows.

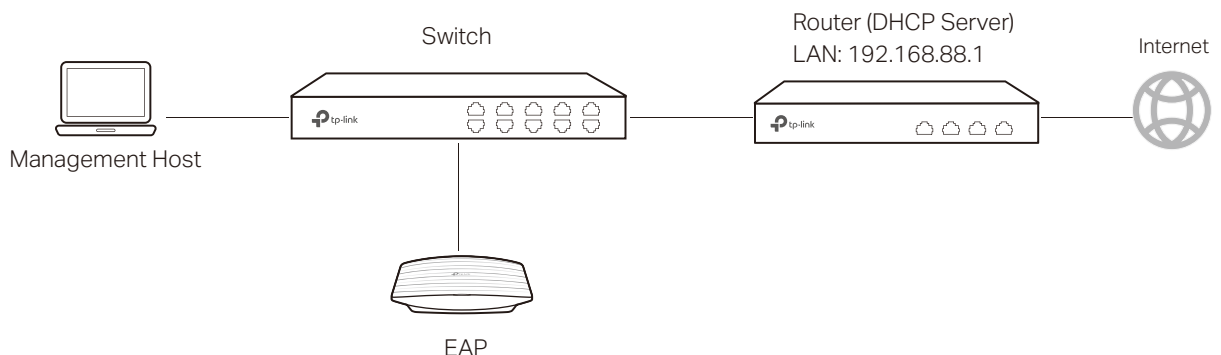

- The router is the gateway of the network and acts as a DHCP server to assign dynamic IP addresses to the management host, EAP and clients. The LAN IP of the router is 192.168.88.1/24.
- Connect the switch to the LAN port of the router.
- Connect the management host and the EAP to the switch. The IP address mode of the management host and EAP is dynamic, which means that they will get dynamic IP addresses from the router.


### Tips:

If the router has more than one LAN port, we can also respectively connect the management host and the EAP to the LAN ports of the router.

## 6.3 Log in to the EAP


After building the network topology, follow the steps below to log in to the web page of the EAP:

1. On the management host, launch the web browser and enter "192.168.88.1" in the address bar. Then log in to the router and find the IP address of the EAP. As the following figure shows, the IP address of the EAP is 192.168.88.101.

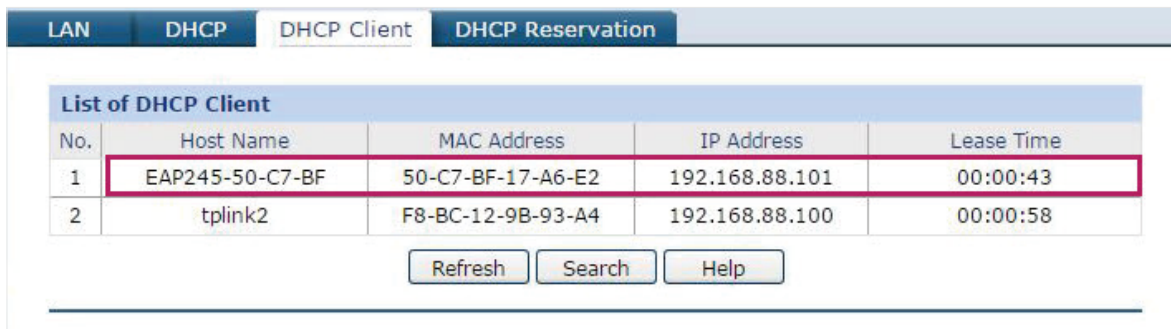


No.	Host Name	MAC Address	IP Address	Lease Time
1	EAP245-50-C7-BF	50-C7-BF-17-A6-E2	192.168.88.101	00:00:43
2	tplink2	F8-BC-12-9B-93-A4	192.168.88.100	00:00:58

2. Enter "192.168.88.101" in the address bar to load the login page of the EAP. Type the default username and password (both admin) in the two fields and click **LOGIN**.

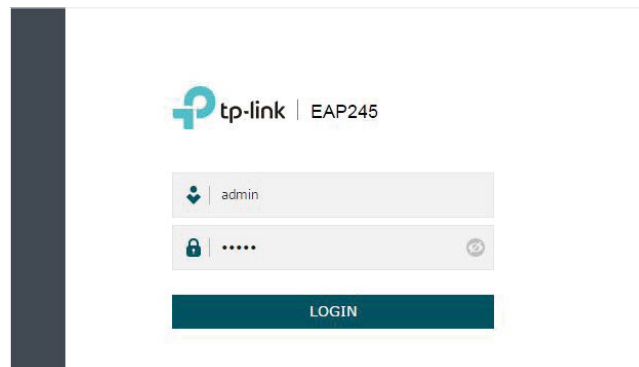


3. In the pop-up window, specify a new username and a new password for the user account. Click **Confirm**.

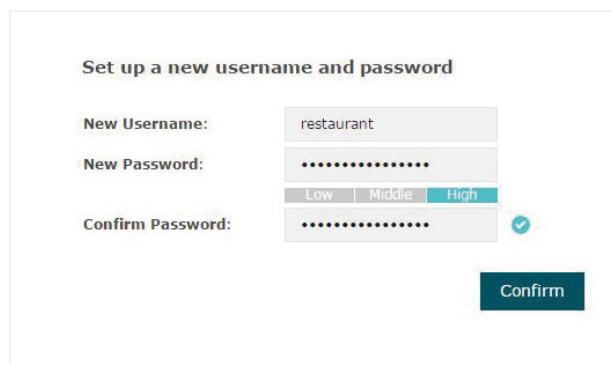



4. Enter the new username and new password and click **LOGIN**. Then we can enter the web page of the EAP.

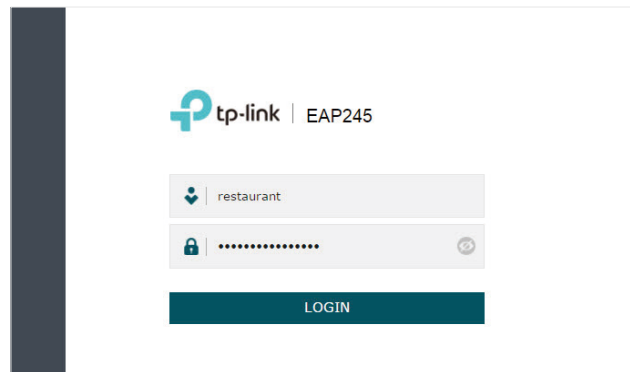




## 6.4 Configure the EAP

To achieve the network requirements in this application example, we need to *Configure SSIDs*, *Configure Portal Authentication* and *Configure Scheduler*.

### Configure SSIDs

Follow the steps below to respectively configure SSIDs for the employees and guests on the 2.4GHz band and 5GHz band:

1. Go to the **Wireless > Wireless Settings** page.
2. In the **SSIDs** section, there is already a default SSID on the 2.4GHz band. Click .

SSIDs							
ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
1	TP-LINK_2.4GHz_17A6E2	0	Enable	None	Disable	Disable	 

3. The following page will appear. Configure this SSID for the employees. Change **SSID** to "employee\_2.4GHz", select the **Security Mode** as "WPA2-PSK", and specify the **Wireless Password** as "restaurant123abc". Click **OK**.

ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
1	TL-LINK_2.4GHz_17A6E2	0	Enable	None	Disable	Disable	

**SSID:**

**Wireless VLAN ID:**  (0-4094. 0 is used to disable VLAN tagging.)

**SSID Broadcast:**  Enable

**Security Mode:**

**Version:**  Auto  WPA-PSK  WPA2-PSK

**Encryption:**  Auto  TKIP  AES

**Wireless Password:**

**Group Key Update Period:**  seconds (30-8640000. 0 means no update.)

**Portal:**  Enable

**SSID Isolation:**  Enable

4. On the same page, click **Add** to add a new SSID.

SSIDs							
ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
1	employee_2.4GHz	0	Enable	WPA-PSK	Disable	Disable	

Add

- The following page will appear. Configure this SSID for the guests. Change **SSID** to "guest\_2.4GHz", keep the **Security Mode** as "None" and check the box to enable the **Portal** feature for this SSID. Click **OK**.

ID	SSID	Wireless VLAN ID	SSID Broadcast	Security Mode	Portal	SSID Isolation	Modify
--	--	--	--	--	--	--	--

**SSID:**

**Wireless VLAN ID:**  (0-4094. 0 is used to disable VLAN tagging.)

**SSID Broadcast:**  Enable

**Security Mode:**  ▼

**Portal:**  Enable

**SSID Isolation:**  Enable

- Click   to enter the configuration page for the 5GHz band. Similarly to the configurations for the 2.4GHz band, configure two SSIDs for the employees and guests on the 5GHz band.

## Configure Portal Authentication

Follow the steps below to configure portal authentication:

- Go to the **Wireless > Portal** page.

2. Configure the portal feature as the following figure shows.

The screenshot displays the TP-Link web portal configuration interface. The 'Wireless' tab is selected, and the 'Portal' sub-tab is active. The configuration includes:

- Authentication Type:** Local Password
- Password:** restaurant123
- Authentication Timeout:** Custom (0 D, 2 H, 0 M)
- Redirect:**  Enable
- Redirect URL:** http://www.restaurant1.cc
- Portal Customization:** Local Web Portal

A preview window shows the authentication page layout, including a 'Welcome to XXX restaurant' message, a 'Password:' field, a 'Term of Use' section with a list of terms, a checked 'I accept the Term of Use' box, and a 'Login' button. A 'Save' button is located at the bottom right of the configuration area.

- 1) Select the **Authentication Type** as "Local Password" and specify the **Password** as "restaurant123".
- 2) Configure **Authentication Timeout**. Here we customize the timeout as 2 hours. It means that guests will be logged out after they have been authenticated for 2 hours. To continue to use the internet service, these guests need to enter the password to pass the portal authentication once again.
- 3) Check the box to enable **Redirect**, and enter the website of the restaurant: **http://www.restaurant1.com**.
- 4) Configure the authentication page. Specify the title and the term of use. To access the internet, guests need to enter the correct password in the **Password** field, accept the **Term of Use**, and click the **Login** button.

3. Click **Save**.

## Configure Scheduler

Follow the steps below to schedule the radio to operate only during the working time (9:00 am to 22:00 pm).

1. Go to the **Wireless > Scheduler** page.
2. In the **Settings** section, check the box to enable **Scheduler**, and select the **Association Mode** as "Associated with AP". Click **Save**.

### Settings

**Scheduler:**  Enable

**Association Mode:** Associated with AP ▼

**Save**

3. In the **Scheduler Profile Configuration** section, click [+ Create Profiles](#).

### Scheduler Profile Configuration

[+ Create Profiles](#)

- 1) The following page will appear. Click [+ Add a Profile](#) and specify the profile name as "worktime". Click **OK**.

### Scheduler Profile Configuration

[+ Add a Profile](#)

Profile Name	Modify
--	--

Profile:

**Cancel** **OK**

[+ Add an item](#)

ID	Profile Name	Days	Start Time	End Time	Modify
--	--	--	--	--	--

- 2) Choose the newly added profile "worktime", and click **+ Add an item**. Then the item configuration page will appear. Specify the time range as everyday 9:00 to 22:00. Click **OK**.

**Scheduler Profile Configuration**

+ Add a Profile
+ Add an item

Profile Name	Modify
worktime	

➔

ID	Profile Name	Days	Start Time	End Time	Modify
--	--	--	--	--	--

**Day:**

Weekday
  Weekend
  Every Day
  Custom

Mon
  Tue
  Wed
  Thu
  Fri
  Sat

Sun

**Time:**  24 hours

**Start Time:** 09 : 00

**End Time:** 22 : 00

Cancel
OK

4. In the **Scheduler Association** section, select "worktime" in the **Profile Name** column and select "Radio On" in the **Action** column. Click **Save**.

**Scheduler Association**

ID	AP	AP MAC	Profile Name	Action
1	EAP245-50-c7-bf-17-a6-e2	50-C7-BF-17-A6-E2	worktime	Radio On


Save

## 6.5 Test the Network

To ensure that the employees and guests can surf the internet via the wireless network, we can use a client device, such as a telephone, to test whether the SSIDs are working normally.

- To test the SSIDs for the employees, follow the steps below:
  - 1) Enable the Wi-Fi feature of the client device.
  - 2) Choose the SSID "employee\_2.4GHz" or "employee\_5GHz" among the detected SSIDs.
  - 3) Enter the password "restaurant123abc" to join the wireless network.
  - 4) Check whether internet websites can be visited successfully.

- To test the SSIDs for the guests, follow the steps below:
  - 1) Enable the Wi-Fi feature of the client device.
  - 2) Choose the SSID "guest\_2.4GHz" or "guest\_5GHz" among the detected SSIDs.
  - 3) The default web browser on the device will pop up and the authentication page will appear. Enter the password "restaurant123", check the box to accept the term of use, and click the **LOGIN** button.

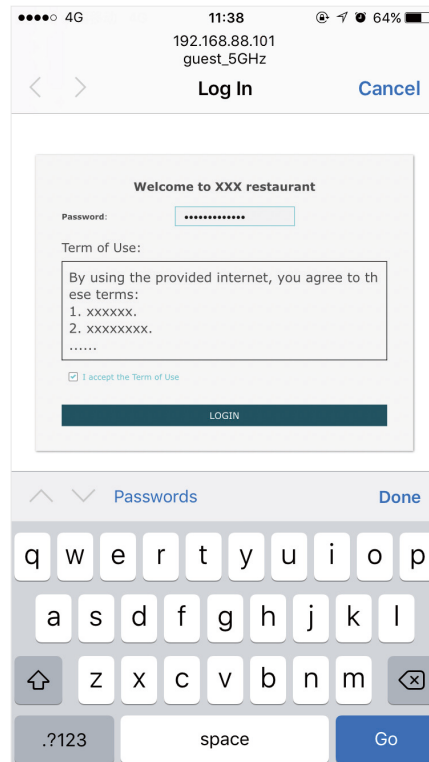

**Tips:**

Generally, the web browser pops up automatically. But if the web browser does not pop up, we can manually launch the web browser and visit any http website. Then the authentication page will appear.

4) If the network is working normally, we will be redirected to the website of the restaurant: <http://www.restaurant1.com>.





# FCC Compliance Information Statement



**Product Name: Omada EAP**

**Model Number: EAP110 / EAP115 / EAP225 / EAP245 / EAP320 / EAP330 / EAP115-Wall / EAP110-Outdoor / EAP225-Outdoor**

Component Name	Model
I.T.E POWER SUPPLY	T090060-2B1(For EAP115) T120150-2B1(For EAP245/EAP320) TL-POE2412G(For EAP110/EAP110-Outdoor/EAP225-Outdoor)
SWITCHING POWER SUPPLY	S030ABU1200250

## **Responsible party:**

**TP-Link USA Corporation, d/b/a TP-Link North America, Inc.**

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: [sales.usa@tp-link.com](mailto:sales.usa@tp-link.com)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## **FCC RF Radiation Exposure Statement:**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20cm (28cm for EAP320, 46cm for EAP330) from all persons and must not be colocated or operating in conjunction with any other antenna or transmitter."

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date:2018-04-20

# FCC Compliance Information Statement



**Product Name: I.T.E POWER SUPPLY**

**Model Number: T090060-2B1, T120150-2B1, TL-POE2412G**

**Product Name: SWITCHING POWER SUPPLY**

**Model Number: S030ABU1200250**

**Responsible party:**

**TP-Link USA Corporation, d/b/a TP-Link North America, Inc.**

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: [sales.usa@tp-link.com](mailto:sales.usa@tp-link.com)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date:2018-04-20

## CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## OPERATING FREQUENCY(the maximum transmitted power)

2412MHz—2472MHz(20dBm)

5180MHz—5240MHz(23dBm) (EAP225/EAP245/EAP320/EAP330/EAP225-Outdoor)

5260MHz—5320MHz(23dBm) (EAP225-Outdoor)

5500MHz—5700MHz(30dBm) (EAP225-Outdoor)

## EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC and 2011/65/EU.

The original EU declaration of conformity may be found at <http://www.tp-link.com/en/ce>.

## RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

## National Restrictions (EAP320/EAP330/EAP225/EAP245)

Restricted to indoor use.

## Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1) This device may not cause interference, and

2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For EAP110-Outdoor:

This radio transmitter (IC: 8853A-EAP110OD / Model: EAP110-Outdoor) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list below, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: 8853A-EAP110OD / Model: EAP110-Outdoor) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste ci-dessous et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

<b>Antenna</b>	<b>Two 2.4GHz 3dBi external omnidirectional antennas</b>
----------------	--

For EAP225-Outdoor:

This radio transmitter (IC: 8853A-EAP225OD / Model: EAP225-Outdoor) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list below, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: 8853A-EAP225OD / Model: EAP225-Outdoor) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste ci-dessous et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

<b>Antenna</b>	<b>Two 2.4GHz 3dBi external omnidirectional antennas</b> <b>Two 5GHz 4dBi external omnidirectional antennas</b>
----------------	--

## **Caution (EAP320/EAP330/EAP225/EAP245/EAP225-Outdoor)**

1) The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

2) For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit; (For EAP225-Outdoor only)

3) For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and

The high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

DFS (Dynamic Frequency Selection) products that operate in the bands 5250- 5350 MHz, 5470-5600MHz, and 5650-5725MHz. (For EAP245 and EAP225-Outdoor).

## **Avertissement**

1) Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

2) Le gain maximal d'antenne permis pour les dispositifs avec antenne(s) amovible(s) utilisant la bande 5725-5850 MHz doit se conformer à la limitation P.I.R.E spécifiée pour l'exploitation point à point et non point à point, selon le cas.

3) Le gain maximal d'antenne permis pour les dispositifs avec antenne(s) amovible(s) utilisant la bande 5725-5850 MHz doit se conformer à la limitation P.I.R.E spécifiée pour l'exploitation point à point et non point à point, selon le cas.

En outre, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Les produits utilisant la technique d'atténuation DFS (sélection dynamique des fréquences) sur les bandes 5250- 5350 MHz, 5470-5600MHz et 5650-5725MHz.

## **Radiation Exposure Statement**

This equipment complies with ISEDC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance (20cm for EAP110/EAP115/EAP245/EAP115-Wall/EAP110-Outdoor/EAP225-Outdoor, 35cm for EAP 320, 46cm for EAP330, and 24cm for EAP225) between the radiator & your body.

## Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites ISEDC d'exposition aux rayonnements établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé à une distance minimale (entre la source de rayonnement et votre corps) indiquée ci-après :

Modèle	Distance
EAP110/EAP115/EAP225/EAP245/ EAP115-Wall/EAP110-Outdoor/ EAP225-Outdoor	20 cm
EAP320	35 cm
EAP330	46 cm

## Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

## Korea Warning Statements

당해 무선설비는 운용중 전파혼신 가능성이 있음 .



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



## Safety Information

When product has power button, the power button is one of the way to shut off the product; When there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.



- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended
- Do not use the device where wireless devices are not allowed.
- Adapter shall be installed near the equipment and shall be easily accessible.

For EAP110/EAP225/EAP245/EAP110-Outdoor/EAP225-Outdoor:



Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.

## NCC Notice

注意!

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通行；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。

低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

## BSMI Notice

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

## 限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源適配器 (EAP115-Wall excluded)	—	○	○	○	○	○

備考1. "超出0.1 wt %" 及 "超出0.01 wt %" 系指限用物質之百分比含量超出百分比含量基準值。  
備考2. "○"系指該項限用物質之百分比含量未超出百分比含量基準值。  
備考3. "—" 系指該項限用物質為排除項目。

For EU/EFTA, this product can be used in the following countries:

(EAP320/EAP330/EAP225/EAP245/EAP225-Outdoor)

AT	BE	BG	CH	CY	CZ	DE	DK
EE	EL	ES	FI	FR	HR	HU	IE
IS	IT	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	UK

## Explanation of the symbols on the product label

Symbol	Explanation
	DC voltage



#### RECYCLING


This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.



Indoor use only

## COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2018 TP-Link Technologies Co., Ltd.. All rights reserved.